

# AIRMAX<sup>®</sup>

## Spray Pattern Nozzle

### INSTALLATION INSTRUCTIONS

For all EcoSeries™, PondSeries®,  
and LakeSeries® Fountain Systems



*Double Arch Shown Here*

# Installation Instructions

**Warning:** Always unplug the unit before performing any maintenance.

## Step 1

Unscrew the nozzle nut and remove the currently installed spray pattern.

If you are running the Classic pattern for PondSeries fountains, no nozzle nut or spray plate will be used.



## Step 2

Prior to changing or installing nozzles, ensure that the Discharge Horn O-Ring (#651311) is located in the O-Ring groove.



## Step 3

If your spray pattern requires a Flow Straightener, please skip to step 4.

Place the selected nozzle onto the Discharge Horn and tighten the nozzle nut.

**Please Note: ONLY hand tighten the nozzle nut. Tools are not required for this operation.**



## Step 4

If your spray pattern requires a Flow Straightener, it will be included with the pattern.

### Spray patterns that require a Flow Straightener:

- Single Arch
- Double Arch
- Double Arch & Geyser
- Blossom (Crown & Arch)

The EcoSeries and PondSeries Flow Straightener simply drops into the top of the Discharge Horn. Secure the Flow Straightener in place by placing the selected spray pattern nozzle onto the Discharge Horn and tightening the 4" nozzle nut.

The LakeSeries Flow Straightener is also inserted into the top of the Discharge Horn and is held in place by the large 6" nozzle nut. The spray pattern nozzle with 4" nozzle nut can then be secured onto the Flow Straightener.

**Please Note: ONLY hand tighten the nozzle nut and nozzle. Tools are not required for this operation.**

## Step 5

Enjoy your newly installed spray pattern!



