

# Rocking Piston Aeration Systems



## Diffused Aeration Systems

**Installation • Operation  
Maintenance Guidelines**

*Save this booklet for future reference!*

## Thank you for your purchase!

This aeration system will be a great benefit to the aquatic ecosystem in which you are placing it. Please read through the following guidelines completely before installation and operation of your aeration system.

### Safety Warnings

- Use extreme caution when operating in winter. Danger due to thin ice can cause drowning. Unseen currents can cause thin ice in areas long distances away from diffuser operation. Provide adequate warning for others using a pond with a diffused aeration system.
- The surface of the compressor will be hot during operation. This is normal — be careful not to touch the compressor while it is running.
- **Units must be connected to GFCI protected outlets.**
- Avoid using extension cords to operate compressor.
- Keep children or pets away from operating units
- Always disconnect power when servicing system.
- Relieve pressure from system before servicing.

### Operation

- All of our compressors are designed for continuous operation. It is not uncommon for these compressors to run 24 hours per day for three to five years. The only maintenance required is replacement of wearable items (diaphragm, piston ring, vanes, etc.) when needed and keeping filter clean.



**CAUTION:** All compressors in these kits are designed for oil-free operation. Never oil or lubricate the compressors.

- In addition to adding oxygen to your pond, an aeration system creates a circulation action. It takes hours for the maximum effect to be achieved, therefore we recommend running these systems continuously so that maximum circulation is sustained.

### Summer Time Start Up



**CAUTION:** If you are installing this system at a time when your pond is already stratified (warm on surface, cold on bottom), you should be careful when first starting the aeration system. If the stagnant water on the pond bottom is stirred up too fast, a temporary increase in oxygen demand will occur and, in rare cases, a fish kill could result. If your pond is severely stratified, you should only run your system one to two hours the first day. Each day after that, increase the run time by one to two hours during the first week, run continuously after that. This will slowly mix the bottom water without a sudden depletion of oxygen.

## Installation Precautions

- See next page for compressor placement details.
- The air diffuser should **not** be placed in the deepest part of the pond. Try to locate the diffuser at approximately  $\frac{2}{3}$  to  $\frac{3}{4}$  of the deepest point (a 15' deep pond would have the diffuser at approximately 10' to 12' deep). This allows the deepest water to remain cool in the summer and stay warm in the winter.
- If you purchased your aeration system without weighted tubing, you will need to supply small weights such as chimney bricks, pipe or rerod. Strap the weights securely around the tubing to bring it to the bottom.
- If your pond freezes during the winter, be sure the tubing is buried leading into the pond. If not, the ice can form around the tubing, kinking it or possibly shearing it off.



**CAUTION:** Locate all utilities before digging to ensure safety of installer and others.

## Aeration System Details

Base Kit Part #	Maximum* Pond Size	Maximum Depth	Diffuser Assembly	Cabinet Compatibility
PA34	1 acre	40'	(1) QS1	SC18, SC22, SC25
PA34-2	1 1/2 acres	40'	(2) QS1	SC18, SC22, SC25
PA65	2 acres	50'	(2) QS2	SC18, SC22, SC25
PA66	3 acres	50'	(3) QS2	SC18, SC22, SC25
PA83	3 acres	50'	(3) QS2	SC22
PA86	4 acres	50'	(4) QS2	SC22
PA90	4 acres	50'	(2) EPMD4	SC22

\*Factors such as pond depth and pond shape will affect maximum pond size

**Note:** Kits are available with multiple tubing options (non-weighted, Quick Sink, mix and match). Part # column reflects generic kit type.

## Compressor Specifications

Base Kit Part #	Compressor*	Horsepower	Maximum Cfm	Operation Cost per 24 Hours**
PA34	SRC25	1/4 hp	2.3	40¢
PA65	SRC50	1/2 hp	4.5	86¢
PA66	SRC50	1/2 hp	4.5	86¢
PA83	SRC75	3/4 hp	6.5	\$1.10
PA86	SRC75	3/4 hp	6.5	\$1.10
PA90	SRC75	3/4 hp	6.5	\$1.10


\*Compressors all carry a two year warranty from date of purchase. See compressor instructions for warranty details.

\*\*Cost calculated at 9¢ per kwh, continuous operation at 10' depth. Actual operational cost will depend on unique application.

## Compressor Placement

It is critical that the air compressors be protected from the weather. You will need to provide a shelter for your compressor to protect it from rain, snow and other harsh elements.

- Be sure your shelter is adequately ventilated. A cooling fan may be necessary in warmer climates. Several cabinet options with fans are available.
- Be sure the compressor does not sit directly on the ground, as the vibration from the motor will cause dust and dirt particles to be pulled into the motor and may cause premature failure. **NOTE – Avoid areas with excessive dust, this can damage compressor.**
- If operating compressor in freezing climates do not place compressor in “heated” buildings. Warm air holds more moisture. This warm air may condensate and freeze in the colder outdoor line.
- Ensure that compressors are placed where they will not become flooded with water.
- If possible, shaded areas are preferred.
- In areas with limited electrical supply, compressors can be placed long distances from the pond edge. A remote access valve assembly can be fed from the compressor with properly sized tubing.

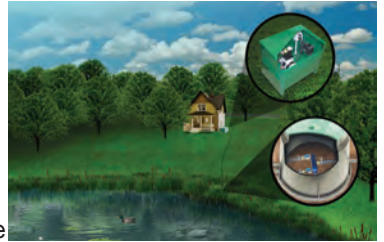

## Cabinet Placement



- If installing a Sentinel Deluxe Aeration System, place the cabinet on a level, unobstructed base to ensure the compressor does not overheat.
- A post mounted cabinet should be kept free from high weeds and other obstructions to ventilation system.

## Diffuser Placement

The amount of surface area an aeration system will effectively cover is greatly dependent on two factors - DEPTH and SHAPE. The deeper an air diffuser is located, the more boiling action it will create and a larger area will be aerated. The diagram below shows how much surface area is effectively aerated per air diffuser at various depths. Ponds that are irregular or odd shaped will also reduce size of aeration area — call our technical department for additional help.

Example:

Our PA34 pond aerator would aerate only  $\frac{1}{8}$  of an acre if operated in 4' deep water, while aerating up to 1 acre if operating in 12' - 16' deep water.

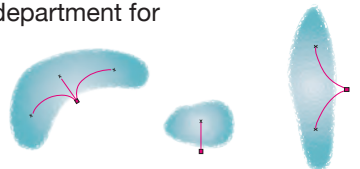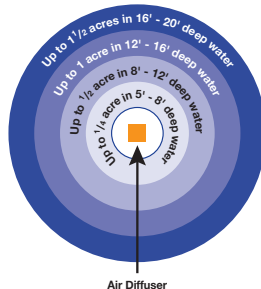

The shape of a pond affects the amount of diffusers needed. Irregular shaped ponds often require multiple diffusers to adequately aerate entire water column.

## General Assembly Instructions

1. Unpack the aeration system to ensure all parts were received. If a shortage occurs, please notify EasyPro immediately.
2. Assemble diffusers, detailed instructions included with each diffuser assembly. **NOTE:** Video walk-through of diffuser assembly and installation found at: [easypro.com/diffuser-assembly](http://easypro.com/diffuser-assembly)
3. For Sentinel Deluxe units, the filter and valves are connected to the compressor.  
For basic kits you will need to install the inlet filter and outlet assembly. On all basic kits, remove the compressor from the box and install the supplied feet. Also, remove the colored inserts from the ports on the head of the compressor. Threaded plugs stay on Stratus SRC compressors.
- 4a. **For PA34/65/66 style kits** (1/4 and 1/2 hp Stratus SRC compressors)



PA34



PA65



PA34-2



PA66

- 4b. **For PA83/86/90 style kits** (3/4 hp Stratus SRC compressors)



- (1) Thread filter into "INLET" port.



- (2) Thread quick disconnect section into "OUTLET" port.



- (3) Install remainder of outlet assembly to quick disconnect section.

5. Unroll the entire roll of tubing. It is recommended that the diffuser be installed at this point. This will allow you to trim any unused tubing before attaching to the compressor. Use clamps to secure tubing to outlet assembly.
6. Open the valves on the outlet assembly to their full open position. Plug the compressor into a GFCI outlet and adjust each valve to equal the air flow to each diffuser. This equalizes air flow between diffusers with different operating depths and/or tubing lengths.

## Maintenance Guidelines

- Keep your compressor and intake filter clean. Any excess dust and debris on motor or air intake may significantly shorten the life of the compressor.
- Diffusers may need regular cleaning in certain water conditions. This may be every two to five years.
- Compressors may need to be rebuilt if running but no longer “pumping air.” Contact your EasyPro dealer for compressor rebuild kits.
- If lines become frozen, a small amount of denatured alcohol can be run down the frozen line to thaw it out. The small amount of alcohol will not harm fish or biological processes in your pond.

After one or two years of operation, you will possibly notice a sudden drop in air bubbles. This is a sign the compressor needs new piston cup or vanes. Rebuild kits are available to restore like-new performance. Be sure to keep the air filter clean. Replacement filters are available.

Kit Part #	Compressor	Replacement Filter/Element	Compressor Repair Kits
PA34	SRC25	GAF2/GAFE	SRC25K
PA65	SCR50	GAF2/GAFE	SRC50K
PA66	SRC50	GAF2/GAFE	SRC50K
PA86	SRC75	GAF2/GAFE	SRC75K
PA90	SRC75	GAF2/GAFE	SRC75K

### Prior to 2016:

PA34	ERP25	ERPF1/ERPF12E	ERP25K
PA66	ERP50	ERPF1/ERPF12E	ERP50K
PA86 (pre-2017)	ERP75	ERPF2/ERPF12E	ERP75K

## Troubleshooting

### Compressor Troubleshooting

Low Pressure	High Pressure	Compressor Overheating	Excess Noise	Cause and Solution
•		•		Dirty air filter, clean or replace
	•			Valves closed too much, open valves
			•	Worn piston cup, rebuild compressor
	•			Plugged/frozen tubing, inspect and repair
			•	Leaky tubing or check valve, inspect and repair
Compressor will not start		•		Wrong voltage, check power source
Compressor will not start		•		Miswired electrical components, check wiring

### Diffuser Troubleshooting

Low Air Flow	High Air Flow	Uneven Air Flow	Burping Bubbles	Cause and Solution
•		•		Leak in system, check connections and repair
	•	•		Manifold not set correctly, adjust placement
			•	Damaged or torn membrane, replace
			•	Compressor issue, see above

## EasyPro Pond Products Limited Warranty

EasyPro Pond Products (“EasyPro”) warrants to the purchaser that this product (“Product”) will be free from any mechanical or material defects for a period of:

Compressors: **two years** from date of purchase - covered by manufacturer's warranty (consult owner's manual for full details)

Air Diffusers: **five years** from date of purchase. QS1 and QS2 only in fresh water.

Weighted Tubing: **five years** from date of purchase.

This warranty only covers properly installed and maintained Products sold by authorized EasyPro Sellers who are subject to and follow EasyPro's quality control standards.

Please note that because EasyPro is unable to control the quality of Products sold by unauthorized sellers, unless otherwise prohibited by law, this warranty does not cover Products purchased from unauthorized sellers.

This warranty does not cover normal wear and tear, nor any deterioration suffered through overloading, improper use, negligence, improper installation, acts of God or accident. Similarly, any modification made by the purchaser to the Product will cause the warranty to be null and void. This warranty does not cover any cost associated with the installation or removal of the Product subject to a warranty claim.

All returned items will be inspected to determine cause of failure before a warranty claim is approved.

The exclusive remedies provided hereunder shall, upon EasyPro's inspection and option, be either repair or replacement of the Product or parts covered under this warranty.

**Making a Claim:** A Return Authorization (“RA”) number must first be obtained by calling EasyPro at 800-448-3873 or via email at [warranty@easypro.com](mailto:warranty@easypro.com). It is the purchaser's responsibility to pay the return shipping charges. Be sure to include the RA number, original receipt (in the form of an invoice or sales receipt), your name, your return address and your phone number inside of the package. No warranty claims will be honored without the original receipt that shows that your purchase was made from an Authorized EasyPro Seller. Ensure the product is properly packaged and insured for the replacement value. Damage due to improper packaging is the responsibility of the sender.

ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ARE HEAREBY LIMITED IN DURATION TO THE DURATION OF THE WARRANTY AS DESCRIBED ABOVE. Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

EasyPro shall not be held liable for any damages caused by defective components or materials of this Product; or for loss incurred because of the interruption of service; or any consequential/incidental damages and expenses arising from the production, sale, use or misuse of this Product. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

EasyPro shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this Product. This warranty gives you specific legal rights, and you may also have other rights that vary from State to State.

## Boost the Benefits of Aeration

EasyPro's beneficial bacteria treatments are proven to work in conjunction with aeration systems to improve the natural biological balance and overall water quality. The bacteria work along the pond bottom, breaking down organic matter such as leaves, grass clippings, dead algae and fish waste.



*EasyPro bacteria treatments are Made in the USA. "Safe for fish, pets, wildlife and family!"*

### EasyPro Pond-Vive

The natural, biological way to revive your pond

This special blend of beneficial bacteria is designed to:

- Reduce oxygen demand and sludge buildup
- Eliminate excess nutrients and pond odors
- Improve water clarity

Available in 10 lb. and 25 lb. pails with 8 oz. water soluble packets or as loose powder in 25 lb. pails or 100 lb. drums.



### EasyPro Sludge Remover Pellets

Bacteria specifically designed to reduce sludge on the pond bottom

- Great for spot treating around docks and beach areas
- Available in 5 lb., 10 lb. and 25 lb. pails, one ounce of pellets covers approximately 200-250 square feet of shoreline or beach area



### EasyPro Lake Colorant

Add EasyPro Lake Colorant to give your pond a beautiful look

- Available in blue, serenity blue or black one quart containers
- Nontoxic and compatible with most aquatic herbicides, water can be used for swimming and irrigation once dispersed
- Concentrated formula, one quart treats one acre of water 3' - 6' deep



**Please keep a copy for your records**

**Base Kit Part # \_\_\_\_\_**

**Compressor Serial # \_\_\_\_\_**

