Cargo bike enthusiast since 1992

Display - Deluxe

Adjust up

Adjustment of eg. Assist Also activates PAS-walk/Walk-assist function Press down for 3 sec, and the bike will drive on its own, stops when button is released

Power level

Shows how much power is left in the battery

Speedometer

Shows who fast you are driving in Km/h

SFT

For adjustment of tripcounter, distance, wheel size and light on the display

Km/Mile

simultaneously for 4 sec

Change, pres + and -

Adjustment down Adjustment of eg. Assist

On / off Turns the system (display and motor) on and off

Assist level

Shows who much the motor is assisting you in driving. Level 1-6

Voltage

Shows how much voltage is on the battery

Battery level


Shows ow much power is left in the battery

Kilometer counter/Odometer

Shows how many kilometers the bike has driven in total

Cargo bike enthusiast since 1992

Display - Ultimate Curve, color

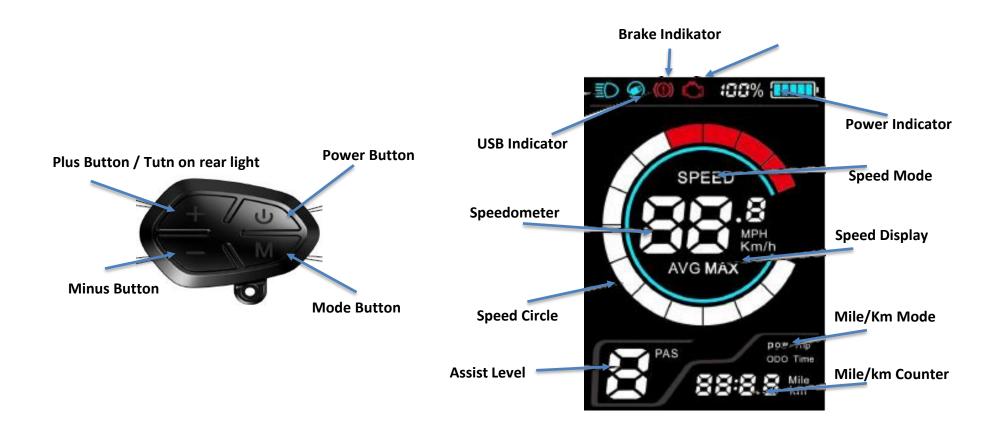

Cargo bike enthusiast since 1992

SPEED

Display - Ultimate Curve

Battery level

Shows ow much power is left in the battery

Adjust up

Adjustment of eg. Assist Also activates backlight in battery

- Press down for 2 sec.

Speedometer

Shows who fast you are driving in Km/h

Assist level

Shows who much the motor is assisting you in driving. Level 1-9

Adjustment down

Adjustment of eg. Assist Also activates PAS-walk/Walk-assist function Hold down for 2 sec, and the bike will drive on its own, stops when button is released

On / off

Turns the system (display and motor) on and off

000003 Km

Speedometer

Shows who fast your are driving in Km/h

Cargo bike enthusiast since 1992

Display – Ultimate Harmony



Walk assist mode Activates PAS-walk/Walk-assist function Hold down for 2 sec, and the bike will drive on its own, stops when button is released

Shows who many kilometers the bike has driven in total

Cargo bike enthusiast since 1992

Display

Adjust up

Adjustment of eg. Assist Also activates PAS-walk/Walk-assist function Press down for 3 sec, and the bike will drive on its own, stops when button is released

Battery level

Shows ow much power is left in the battery

Loading

Shows how much the motor and battery is loaded

Speedometer

Shows who fast you are driving in Km/h

SET

For adjustment of tripcounter, distance, wheel size and light on the display

Km/Mile

Change, pres + og - simultaneously for 4 sec



Assist level

Shows who much the motor is assisting you in driving

Adjustment down Adjustment of eg. Assist

On / off

Turns the system (display and motor) on and off

Kilometer counter/Odometer

Shows who many kilometers the bike has driven in total

Cargo bike enthusiast since 1992

Display - Older

Adjust up

Adjustment of eg. Assist Also activates PAS-walk/Walk-assist function Press down for 3 sec, and the bike will drive on its own, stops when button is released

Battery level

Shows ow much power is left in the battery



Loading

Shows how much the motor and battery is loaded

Speedometer

Shows who fast you are driving in Km/h

Assist level

Shows who much the motor is assisting you in driving

SET

For adjustment of tripcounter, distance, wheel size and light on the display

Adjustment down Adjustment of eg. Assist

On / off

Turns the system(display and motor) on and off

Kilometer counter/Odometer
Shows who many kilometers the bike

Shows who many kilometers the bike has driven in total