 


Vib Crafter

Alpha Wand

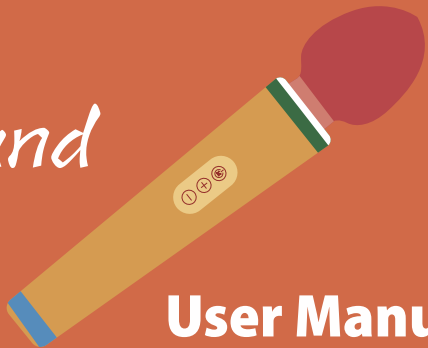

User Manual

OVERVIEW

Thank you for the purchase of **Vib Crafter™ Alpha Wand**. This product delivers intense and sensual pleasure. There are 12 distinctive vibration intensities and 9 vibration patterns with this luxurious massager. Alpha Wand provides focused vibration on the head of the wand. Powerful, penetrating pleasure is granted in the convenience and versatility of this beautiful printed wand.

Exploring more possibilities of your sex life and interact with your partner by using the APP which is programmed with multiple patterns and remote control.



customerservice@vibcrafter.com



www.vibcrafter.com



GETTING STARTED



Before using your product, please charge with the charging cable you received with your product for 3~4 hours.

● ● ● Blinking Light = Charging

● ● ● Solid Light = Fully Charged

Before and after each use, the head of wand should be cleaned with a mild cleanser that is suitable for silicone and plastic items.

 
STARTING

1. Press and hold the power button for more than 2 seconds to turn on the product. Quick press to switch the vibrato patterns.


2. Press “+”“-” to adjust the intensities.

3. To turn off your product, press and hold the power button for more than 2 seconds.

STARTING

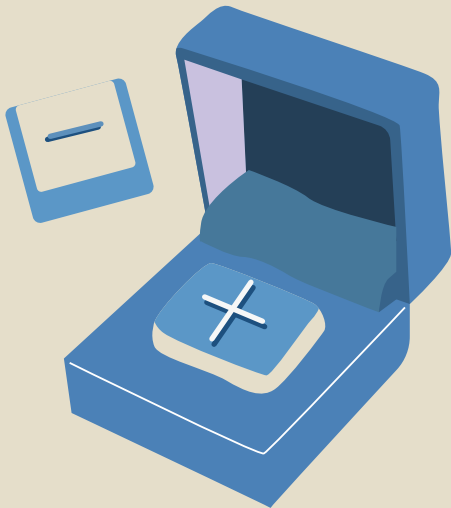

VIBRATING MODES

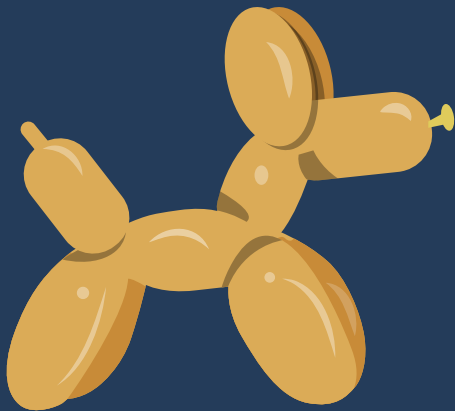 

There are 12 vibration intensities.
There are 9 vibrating patterns:

Pattern 1: Shock Wave

Pattern 2: Swing

Pattern 3: Lighting

Pattern 4: Jump

Pattern 5: Bang-Bang

Pattern 6: Parkour

Pattern 7: Bungy

Pattern 8: Roller Coaster

Pattern 9: Explosive

Pattern 1: Shock Wave



Pattern 2: Swing



Pattern 3: Lighting



Pattern 4: Jump



Pattern 5: Bang-Bang



Pattern 6: Parkour



Pattern 7: Bungy



Pattern 8: Roller Coaster



Pattern 9: Explosive



CLEANING, STORAGE & SAFETY

1. Clean your massager before and after each use.

2. It is recommended that you clean your massager with a mild cleanser that is suitable for silicone and plastic items.

3. Do not expose the massager directly under the sunlight and extreme heat.

4. The massager is splash proof and safe to use in the shower. To avoid electric shock and damage to the massager, please check if the charging port is dry before charging it.



WARNINGS AGAINST MISUSE



- ✎ This massager is not intended for use by children or people with reduced physical, sensory or mental capabilities.
- ✎ External use only. Remove any loose clothing or jewelry before each use.
- ✎ Always unplug the massager from the outlet immediately after charging.
- ✎ Do not modify or dismantle the massager.
- ✎ To avoid electric shock or other potential damage to people and the massager, do not use charger near water or using an uncertified USB charger.
- ✎ Never use the product near a source of heat or while smoking.
- ✎ Do not leave the massager under a blanket or pillow. Keep all air openings free of lint, hair etc. Make sure not to operate under the condition where air openings may be blocked.
- ✎ If the massager overheats during use, the massager may automatically shut down for auto-protection.

SPECIFICATIONS

Pattern: 9 patterns

Intensity: 12 intensities

Materials: body safe silicone, ABS

Size: 350*66*35mm

Package Size: 392*144*109mm

Interface: 3 buttons control

Battery: 4800 mAh

Adapter: 5V/2A

Waterproof Level: IP65

Using Time: up to 3 hours

Noise Level: <50dB

Net Weight: 680g

Gross Weight: 1286g

Maximum Power: 8W

Charging Time: 3~4 hours

Accessories: charging cable, user manual

WARRANTY

Warranty covers defects in workmanship or materials under normal usage and care for a period of 12 months from the date of purchase.

Original proof of purchase is required to obtain warranty services. Do not attempt to repair your massager yourself. For any warranty inquiries or return information, please contact your local sales site. For any APP operation suggestion, please email [**customerservice@vibcrafter.com**](mailto:customerservice@vibcrafter.com).

Vib Crafter is not responsible for loss or damage of returned products.




DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):



The crossed-out dustbin symbol indicates that these items should not be treated as household waste, but rather brought to the appropriate collection point for recycling electrical and electronic equipment.

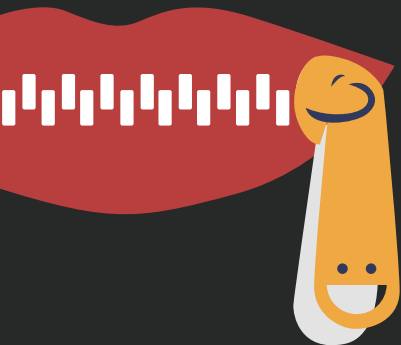

WARNINGS

This item is not to be used by people (including children) with reduced physical, sensory, or mental capabilities. Any person who is unable to operate this product by themselves should not use this product. Any person who is pregnant, has a pacemaker, suffers from diabetes, phlebitis and/or thrombosis, who has an increased risk of developing blood clots, as pins, screws or artificial joints or other implanted medical devices should consult a medical professional before using. Do not use on skin that is swollen, inflamed, blistered or broken. Do not use on head, face, chest, stomach or osseous body parts.

This is not a medical device. No medical claims are warranted or implied by the use of this product. Do not use around chest or throat. If you experience any discomfort during use, discontinue use immediately and consult your health care professional.

The appliance can be used only with the battery charger provided and must only be supplied at safety extra low voltage corresponding to the marking.



Complete user instructions in additional
Languages and FAQ can be found at:
www.vibcrafter.com



Email us at:
customerservice@vibcrafter.com
For any unanswered questions



Designed and Developed by
Vib Crafter™



Made in China
© **Vib Crafter™**



Scan to download free **Vib Crafter APP**

Compatible with Bluetooth[®] (Bluetooth BLE 4.2) devices, including iPhone[®] (iOS14 or higher), iPad[®] (iOS 14 or higher) and Android[™] devices (OS 10 or higher).



For more supported devices, please check on **www.vibcrafter.com/support**.

