

# **Fino**

User Manual

# PREHEAT AND VOLTAGE

Ensure the Mini Battery is connected to the Dock to start preheating and adjust voltage settings.



## BATTERY LEVEL

Open or close the Case to check the battery levels of the Mini Battery and the Dock via their respective LED lights.



## CHARGING

You can use the Dock as a power bank! Therefore, you can charge the Mini Battery with the Dock, charge the Dock separately, or simply charge them both at the same time.

#### Note:

- · Remove any cartridge from your battery before charging.
- A full charge takes about 30 minutes for the Mini Battery and about 90 minutes for the Dock

# **OPERATING CONDITIONS**

- Charging temperature: 50-113°F (10-45°C)
- Operating temperature: 32-140°F (0-60°C)
- Storage temperature: 73.4±9°F (23±5°C)
- Operating humidity: 35%-70%
- Storage humidity: 35%-70%

# SAFETY

- Do not use high percentage isopropyl alcohol, alcohol, or acidic solvents to clean or wipe the surface of this product; use isopropyl alcohol or alcohol with a concentration of less than 50%.
- If you experience any leaks or clogs, clean the product promptly to avoid failure.
- Do not expose device to water and keep away from any flammable gases/liquids.
- · Do not use in wet environments or extreme temperatures.
- . Do not leave the device exposed to direct sunlight.
- Do not allow other metal objects to contact electronic components in the battery.
- Keep the device and its accessories out of reach of children or pets.
- · Do not drop, throw, or abuse the device.
- Do not attempt to disassemble the device as damage and personal injury may occur.

- The device contains lithium-ion batteries and should be recycled or disposed of in accordance with local requirements to avoid potential injury and/or environmental harm.
- Do not dispose of the device or any of its components in a fire as it could cause an explosion or other serious injuries.

# WARRANTY

#### 180-DAY LIMITED WARRANTY

This warranty provides repair or replacement against defects in materials and workmanship under normal use for a period of 180 days from the date of purchase. The original bill of sale and this warranty card are required to redeem the warranty.

#### **EXCLUSIONS AND LIMITATIONS**

This warranty does not cover repair or replacement under the following circumstances:

- · Failure to provide the original bill of sale and this warranty card.
- Product failure or damage caused by improper use, unauthorized adjustments, or operation under advised against conditions.
- Product failure or damage caused by excessive force or impact.
- Product failure or damage caused by using cartridges or accessories not intended for use with the device.
- Accessories or consumable attachments, including but not limited to: cartridges, metal adapters, USB cables, and chargers.

# WARRANTY CARD

PRODUCT INFO	
Product Model	
PURCHASE INFO	
Purchase Date (YYYY/MM/DD)	
Store Name	
Store Address	
State	Zip Code
CUSTOMER INFO Name	
Address	
State	
Phone	
Email	



#### CCELL DOES NOT PRODUCE, DISTRIBUTE OR SELL ANY MATERIAL FILLED IN CARTRIDGES AND OIL TANKS.

## NOT FOR SALE TO MINORS.

#### WARNING:

REPRODUCTIVE HARM -WWW P65WARNINGS CA GOV

#### WWW.CCFLL.COM PATENTS: CCELL.COM/PATENTS







