


Go Stik

User Manual

QUICK START

Screw on

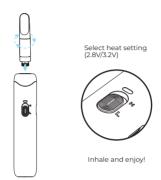

TEMP SETTINGS

Switch between the (L) and (H) settings to adjust the voltage.



CHARGING

- Remove the cartridge before charging.
- Use the USB-C cable to charge the device.
- A full charge takes about 90 minutes. When the device is fully charged, the LED light will fade out.

OPERATING CONDITIONS

- Charging temperature: 50-113°F (10-45°C)
- Operating temperature: 32-140°F (0-60°C)
- Storage temperature: 73.4±9°F (23±5°C)
- Operating humidity: 35%-70%
- Storage humidity: 35%-70%

SAFETY

- Do not use high percentage isopropyl alcohol, alcohol, or acidic solvents to clean or wipe the surface of this product; use isopropyl alcohol or alcohol with a concentration of less than 50%.
- If you experience any leaks or clogs, clean the product promptly to avoid failure.
- Do not expose device to water and keep away from any flammable gases/liquids.
- Do not use in wet environments or extreme temperatures.
- Do not leave the device exposed to direct sunlight.
- Do not allow other metal objects to contact electronic components in the battery.
- Keep the device and its accessories out of reach of children or pets.
- Do not drop, throw, or abuse device.
- Do not attempt to disassemble device as damage and personal injury may occur.
- The device contains lithium-ion battery and should be recycled or disposed of in accordance with local requirements to avoid potential injury and/or environmental harm.

 Do not dispose of the device or any of its component in a fire as it could cause an explosion or other serious injuries.

WARRANTY

180-DAY LIMITED WARRANTY

This warranty provides repair or replacement against defects in materials and workmanship under normal use for a period of 180 days from the date of purchase. The original bill of sales and this warranty card are required to redeem warranty.

EXCLUSIONS AND LIMITATIONS

The warranty does not cover repair or replacement under the following circumstances.

- · Failure to provide the original bill of sales and this warranty card.
- Product failure or damage caused by improper use, unauthorized adjustments or operation under conditions against advised.
- Product failure or damage caused by excessive force or impact.
- Product failure or damage caused by using cartridges or accessories not intended for use with the device.
- Personal items or consumable attachments, including but not limited to: cartridges, metal adapters, USB cables and chargers.

WARRANTY CARD

PRODUCT INFO

Product Model

PURCHASE INFO

| Purchase Date (YYYY/MM/DD) _ | | |
|---------------------------------|--|--|
| Store Name | | |
| Store Address | | |
| | | |
| State | | |
| Zip Code | | |

CUSTOMER INFO

| Name | | |
|----------|--|--|
| Address | | |
| | | |
| State | | |
| Zip Code | | |
| Phone | | |
| Email | | |

© 2023 CCELL, ALL RIGHTS RESERVED.



PATENTS: CCELL.COM/PATENTS

WWW.CCELL.COM

WARNING: REPRODUCTIVE HARM -WWW.P65WARNINGS.CA.GOV

CCELL DOES NOT PRODUCE, DISTRIBUTE OR SELL ANY MATERIAL FILLED IN CARTRIDGES AND OIL TANKS. NOT FOR SALE TO MINORS.