
Extended Functions

Using an Upgrade Software Key (DMW-SFUVP1: optional) enables usage of extended functions for the camera.

• Firmware versions that support the software key

DC-S5M2	3.0 or higher
DC-S5M2X	2.0 or higher

- For the latest information on the firmware or to download/update the firmware, visit the following support website:

<https://panasonic.jp/support/global/cs/dsc/>

(This Site is English only.)

- Refer to the installation guide for the Upgrade Software Key (DMW-SFUVP1: optional) for activation instructions.
- [\[Barcode Capture\]: F-2](#)
- [\[Photo Grid Line\]: F-5](#)

[Barcode Capture]



You can connect a barcode scanner to this unit via Bluetooth. The barcode data that is captured by the barcode scanner can be written out to the Exif of the picture.


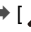

❖ Connecting the Barcode Scanner


Compatible models: OPTICON OPN-2006, PX-20

1 Set the barcode scanner to be ready for Bluetooth connection.

- Operate the barcode scanner according to its operating instructions.

2 Set the camera to be ready for Bluetooth connection.


-  → [] → [] → [Barcode Capture] → [Barcode Scanner] → [ON]
- The camera's NETWORK connection lamp lights, and when the connection is complete, the LED on the barcode scanner stops blinking.

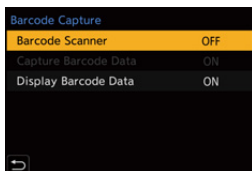

❖ Writing Out the Barcode Data to the Picture

1 Read the barcode with the barcode scanner (up to 56 characters)

- The barcode data is displayed on the camera's screen. (13 characters can be displayed. When there are 14 or more characters, the display shows the first 6 characters and the last 6 characters.)
- The barcode data is overwritten when another barcode is read.

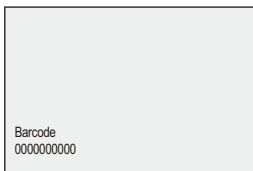

2 Take a picture.

- The barcode data displayed on the screen of the camera is written out to the Exif of the picture. (Up to 56 characters)
- The barcode data that was written out can be viewed in the playback screen.

❖ Setting Items ([Barcode Capture])

[Barcode Scanner]

Connect with or disconnect from the barcode scanner.




[Capture Barcode Data]

Set to [OFF] when the barcode data is not to be written out during recording.

[Display Barcode Data]

Set to [OFF] when the barcode data is not to be displayed on the screen of the camera.

❖ Disconnecting from the Barcode Scanner

 ➔ [] ➔ [] ➔ [Barcode Capture] ➔ [Barcode Scanner] ➔ Select [OFF]

- The barcode data read while connected is deleted. (Barcode data recorded with pictures is not deleted.)



- [Barcode Scanner] can be assigned to an Fn button.
- When the following functions are being used, [Barcode Capture] is not available:
 - Bluetooth connection with another device
 - Wi-Fi connection ([Barcode Capture] remains available while the [Frame.io] Wi-Fi function is being used)
- The following functions are not available while you are using [Barcode Capture]:
 - Bluetooth connection with another device
 - Wi-Fi connection (the [Frame.io] Wi-Fi function remains available)

[Photo Grid Line]

Grid lines that can be set with [Photo Grid Line] have been added.



Select [Photo Grid Line]

(Portrait Crop)/ (Sports Crop)/ (Group Crop)

- When using []/[], you can press ▲▼◀▶ to change the positions of the grid lines.
- When set to [], the size of the circle can be changed with the rear dial.
- When [DISP.] is pressed while changing the grid lines, the settings return to the default settings.
- When using the following functions, []/[]/[] are not available:
 - [M] mode
 - [S&Q] mode
 - [16:9]/[1:1]/[65:24]/[2:1] ([Aspect Ratio])