

6771705 6771706 6771707 6771708 6771709 6771710
6771711 6771712 6771713 6771714 6771715 6771716

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical furnishing, basic precautions should always be followed, including the following:



DANGER

READ AND FOLLOW ALL INSTRUCTIONS BEFORE USING THIS CABINET.



WARNING

To reduce the risk of burns, fire, electric shock or injury to persons. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer. Never drop or insert any object into any opening. Do not use outdoors.



WARNING

Risk of electric shock. Connect this furnishing to a properly grounded circuit only. See Grounding instructions.



CAUTION

Total/Maximum shelf load 34lbs/15.4kg

GROUNDING INSTRUCTIONS:

This product must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the product.



WARNING

 
An Electrical option cabinet must be wired to a 20 Amp GFI (Ground Fault Interrupter) protected circuit when used in bathrooms and all other locations required by the National Electric Code.

PLEASE SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE



6771705 6771706 6771707 6771708 6771709 6771710
6771711 6771712 6771713 6771714 6771715 6771716

6771705 6771706 6771707 6771708 6771709 6771710
6771711 6771712 6771713 6771714 6771715 6771716


TOOLS REQUIRED FOR ASSEMBLY



1/8" Drill Bit

  


PARTS

 


A

 B Mounting Bracket



C Screw

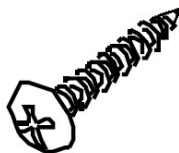


D Drywall Anchor



6771705 6771706 6771707 6771708 6771709 6771710
6771711 6771712 6771713 6771714 6771715 6771716

6771705 6771706 6771707 6771708 6771709 6771710
 6771711 6771712 6771713 6771714 6771715 6771716

DIMENSIONS

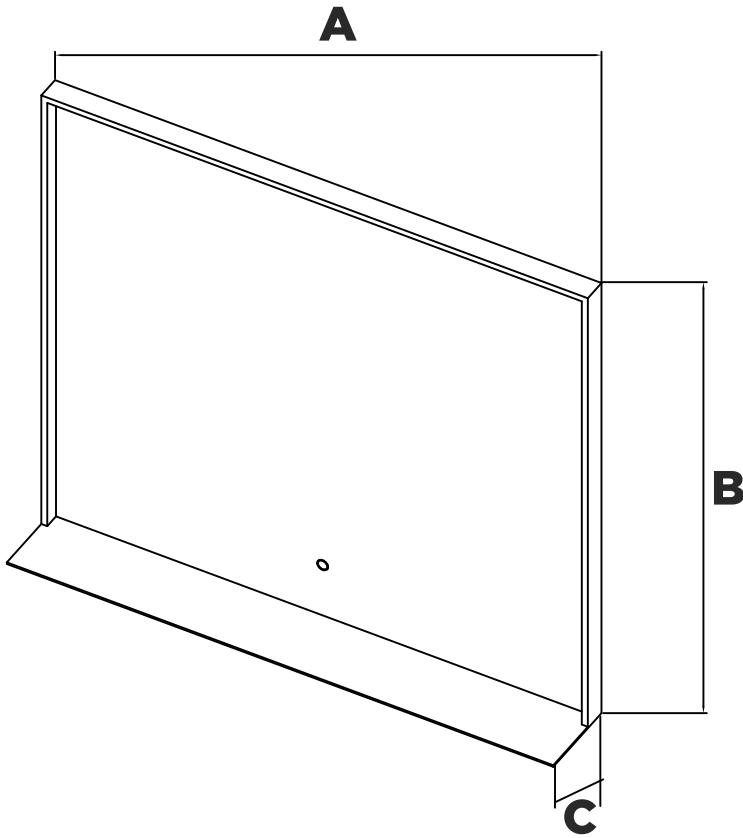

A- Mirror's Width
B- Mirror's Height
C- Mirror's Depth

SKU:	6771705	6771706	6771707	6771708	6771709	6771710
A	24"	24"	24"	36"	36"	36"
B	32"	32"	32"	32"	32"	32"
C	4.7"	4.7"	4.7"	4.7"	4.7"	4.7"

SKU:	6771711	6771712	6771713	6771714	6771715	6771716
A	48"	48"	48"	60"	60"	60"
B	36"	36"	36"	36"	36"	36"
C	4.7"	4.7"	4.7"	4.7"	4.7"	4.7"

*All dimensions & specifications are approximate and subject to change without notice.

6771705 6771706 6771707 6771708 6771709 6771710
 6771711 6771712 6771713 6771714 6771715 6771716

6771705 6771706 6771707 6771708 6771709 6771710
6771711 6771712 6771713 6771714 6771715 6771716

ELECTRIC CONNECTIONS

ALL WIRING SHOULD BE DONE BY A QUALIFIED LICENCED ELECTRICIAN



WARNING: Shut off power before wiring the cabinet.



WARNING: An Electrical option cabinet must be wired to a 20 Amp GFI (Ground Fault Interrupter) protected circuit when used in bathrooms and all other locations required by the National Electric Code.





CAUTION: This product must be connected to a grounded, metal permanent wiring system or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the product.



CAUTION: Requires 120 VAC 20 Amp GFI protected circuit.

The electric wire comes through the access hole in the side of the cabinet.

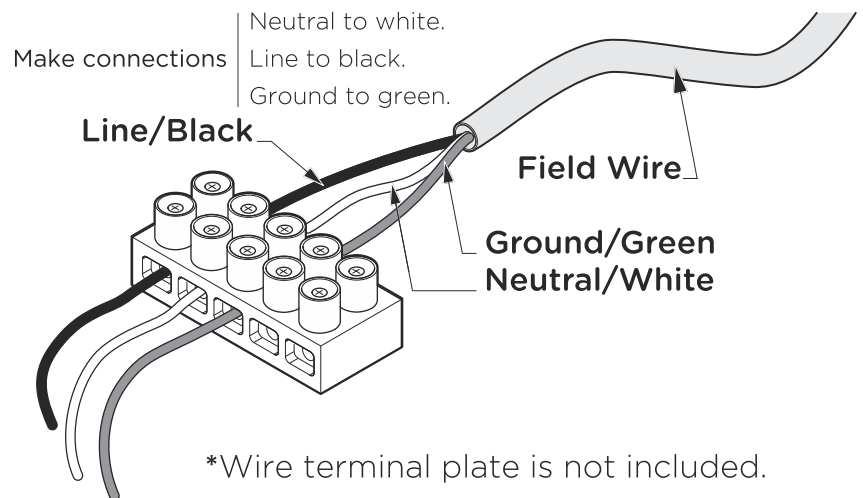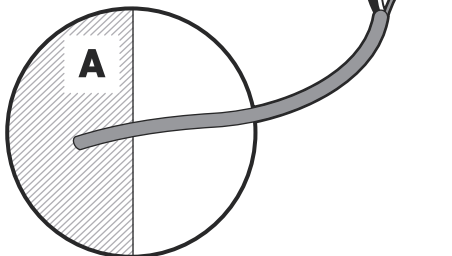

RECESS-MOUNT INSTALLATION


Make Rough Opening and Frame on all sides. Reference your Cabinet Model Dimensions and Rough in dimensions on Page 3. Make sure the cabinet door has a clearance of at least 1" from the top of the faucet and 1" from the ceiling.

Electric wiring: Be sure to provide enough wire to make the proper and safe connection to the Field/Power. Place cabinet in rough-in and make sure the cabinet is square, level and plumb. Secure the cabinet with the mounting screws into the framing studs.


6771705 6771706 6771707 6771708 6771709 6771710
6771711 6771712 6771713 6771714 6771715 6771716

RECESS-MOUNT INSTALLATION


1

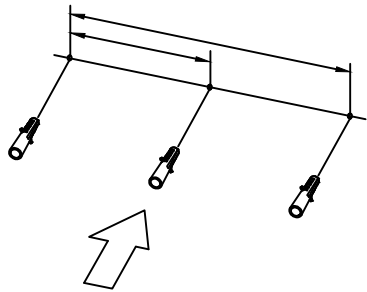


2

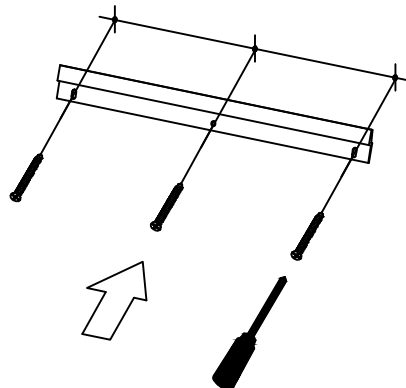


3

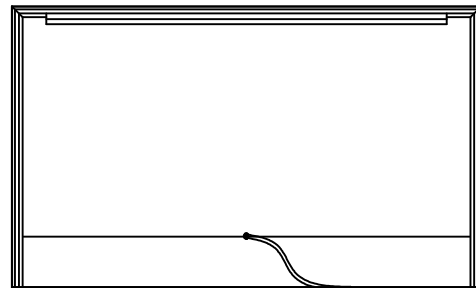


4

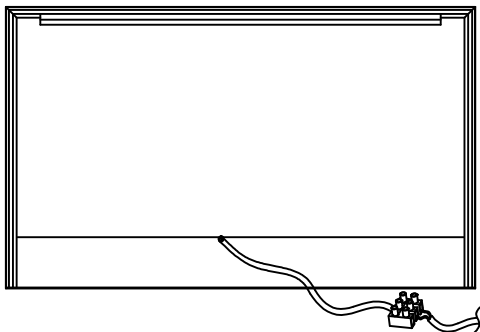

5

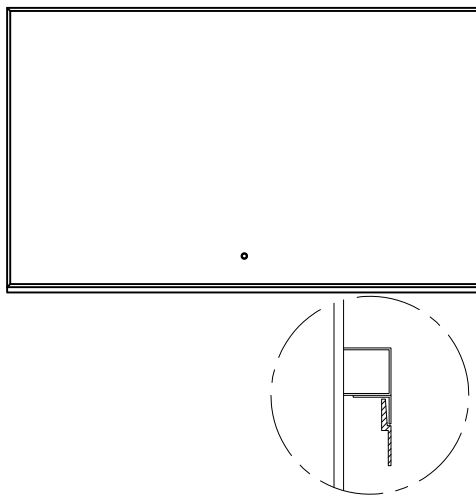

6

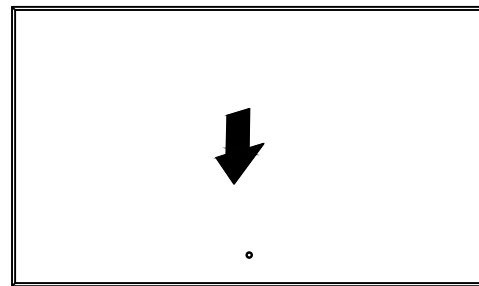

FINAL ASSEMBLY

How to use Defogger Switch and Dimmer Switch:

Touch the Defogger switch to turn the heating coils on or off.

Touch the Dimmer switch to turn the task light on or off. Press and hold the dimmer switch to dim or brighten the task lights. Dimmer switch stores the current light level intensity when switched off and on.

Use and Maintenance:

CAUTION: Maximum total shelf load 34 LBS

Cabinet and doors are constructed of mirrored glass and aluminum. Use a damp cloth to clean your cabinet and mirrors. Do not use any abrasive material as it may damage the surface and finish of the cabinet. A mild detergent may be used to clean the surfaces of the cabinet. When cleaning spray the cloth, not the cabinet, mirrors or surrounding surfaces.