 


## Assembly Instructions (EN)

Thank you for your order. If you have any doubts please contact us at [www.tablakala.com](http://www.tablakala.com)

Mode d'emploi en français:  
Bedienungsanleitung auf Deutsch:  
Manuale d'uso in italiano:  
Manual do usuário em português:

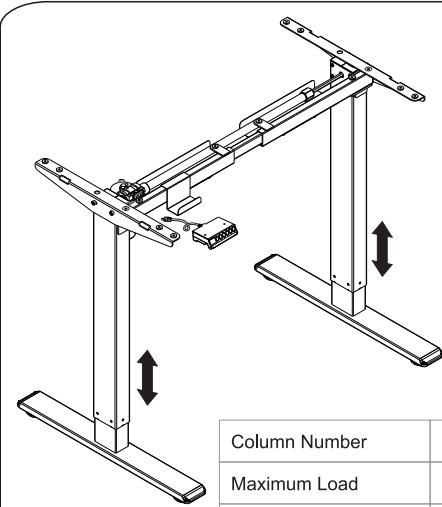

### Technical data

Column Number	2
Maximum Load	70KG
Max Speed	25mm/s
Input Voltage	100-240V
Lowest Position	710mm
Highest Position	1210mm
Desktop Size	1000-1600mm 500-800mm
Duty Cycle	Continuous operation for 2 mins at most after pause for 18 mins
Applicable Temperature	0~40°C

The product has been designed to meet Commission Regulation with regard to ecodesign requirements for electric power consumption of standby mode of electrical and electronic household equipment. The technical information of standby mode:

 
Mode	Power consumption (Watts)	The period (Minutes)
Standby	≤0.5W	1min

The website URL of the English - version electronic instruction manual:  
<https://www.tablakala.com/pages/manual>

Power Supply	
Manufacturer: Shenzhen RBD Technology Corporation	
Model: W60RA628-240025	Average Active Efficiency: ≥88.0%
Rated Input: 100-240VAC, 50/60Hz, 1.5A	Efficiency at Low Load (10%): 86.79%
Rated Output: 24.0VDC, 2.5A, 60.0W	No-load Power Consumption: ≤0.21 W

### Accessory list


Attention: The drawings below are only for reference which might be slightly different from the actual object, please in kind prevail. Any tools missing or installation problems, please contact the customer service firstly.

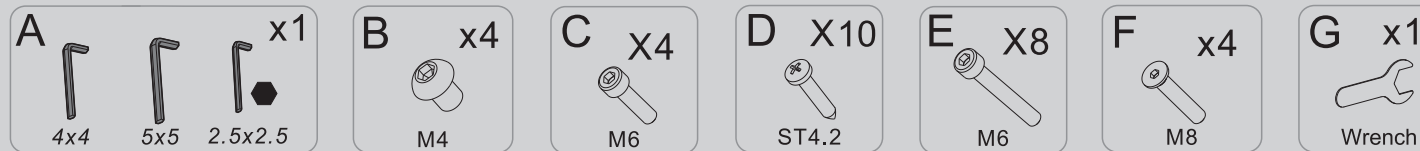

### Part list



No.	Part	Qty	No.	Part	Qty	No.	Part	Qty
①	Pedestal	2	②	Column	1	③	Column	1
④	Supporting beam	1	⑤	Transmission rod	1	⑥	Supporting plate	2
⑦	Adapter	1	⑧	Baffle	2	⑨	Power cable	1
⑩	Cable tie	4	⑪	Adaptor holder	1	⑫	Hand switch	1
 
### Installation instruction

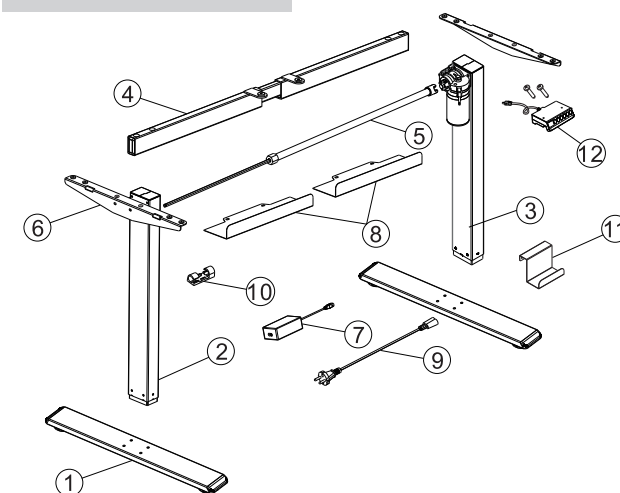

### STEP1

 
 
Install Pedestal

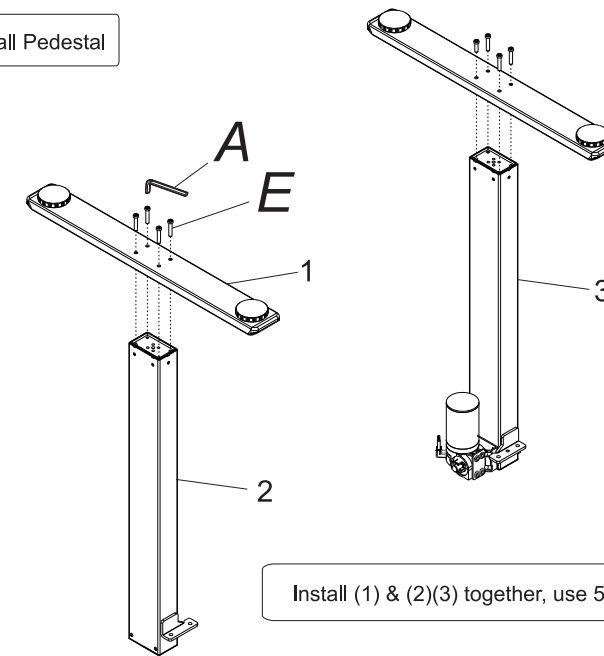


Install (1) & (2)(3) together, use 5\*5 wrench(A) to tighten the screws(E).

### STEP2

  Install Supporting beam

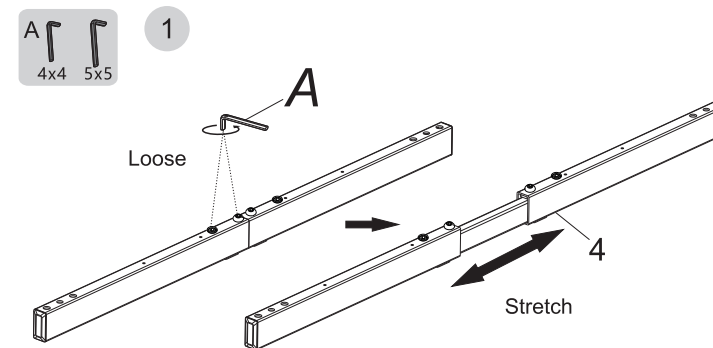

 
Loose screws on (4) with wrench 4x4(A), then stretch supporting beam

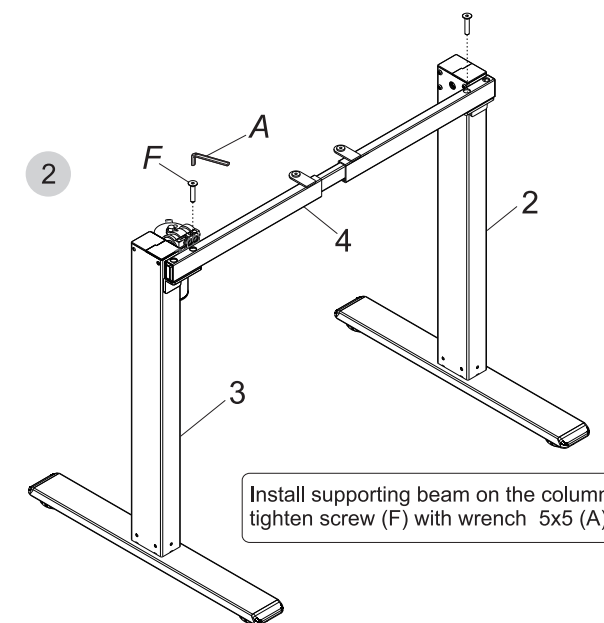


Install supporting beam on the column (2)(3), tighten screw (F) with wrench 5x5 (A)

### STEP3

 Install transmission rod

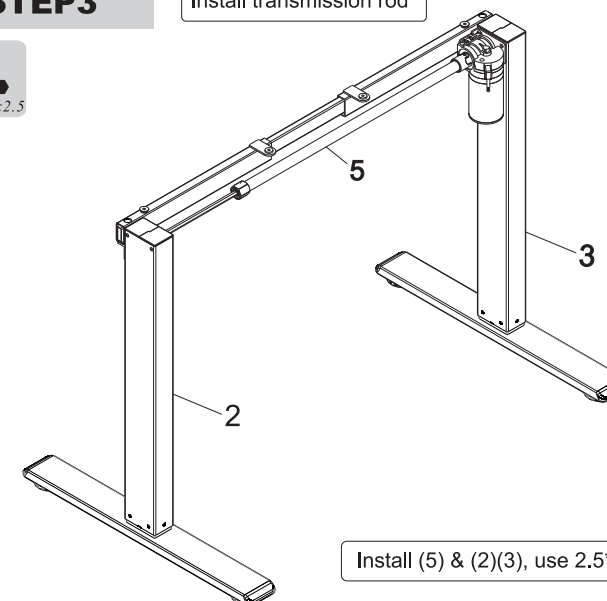


 
Install (5) & (2)(3), use 2.5\*2.5 wrench(A) to tighten screws.

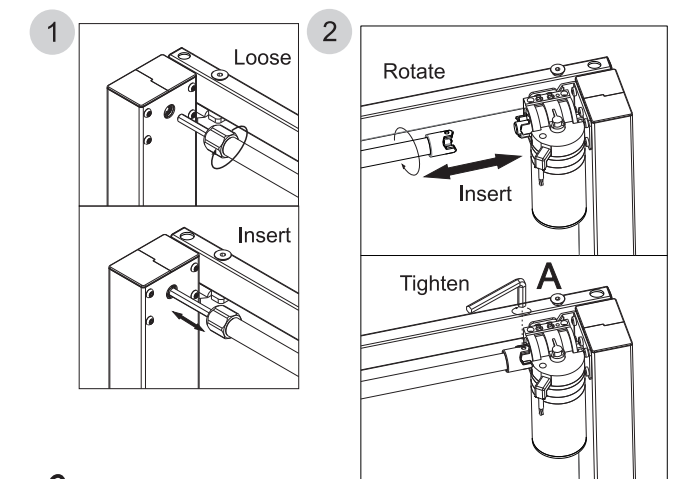

Rotation angle does not exceed one third of the circle

#### STEP4

  
Install supporting plate

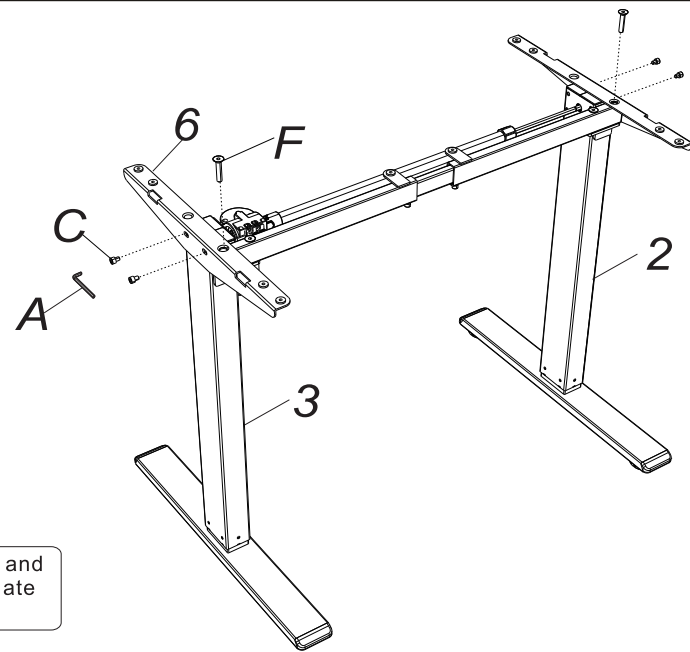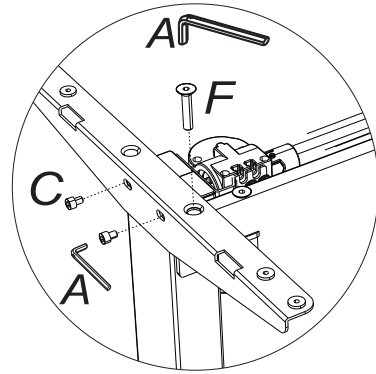

Firstly use screws(F) to connect the supporting plate(6) with the left and right columns(2)(3), then connect the side holes of the supporting plate with the screws(C), using the 5x5 allen key(A) to tighten.

#### STEP5

 Install the power adaptor, desktop and hand switch



Self-prepare



 
Adjust beam (4) length according to table size

The margins on the two sides need to be not larger than 200mm.




The hand switch should be installed in the side of the lifting column with motor.

Connect the desktop and the hand switch(12) with screws(D), then lock it with pistol drill.

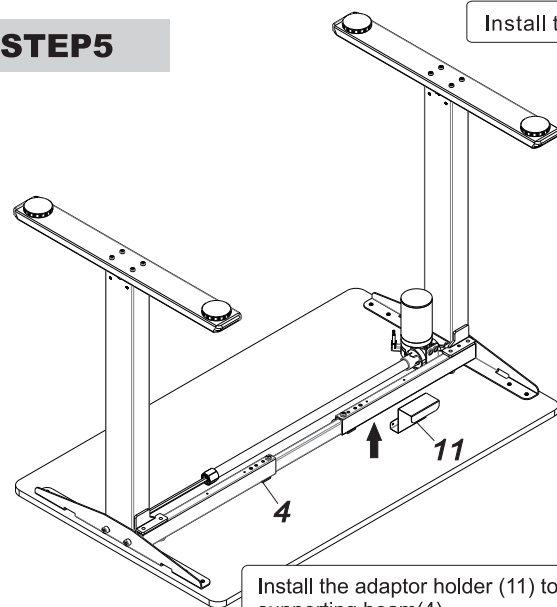


 Install the adaptor holder (11) to the supporting beam(4)

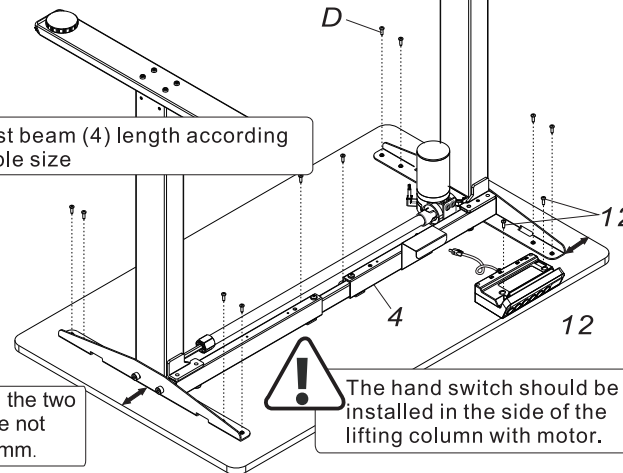

#### STEP6

 Tighten the supporting beam and the transition rod screws

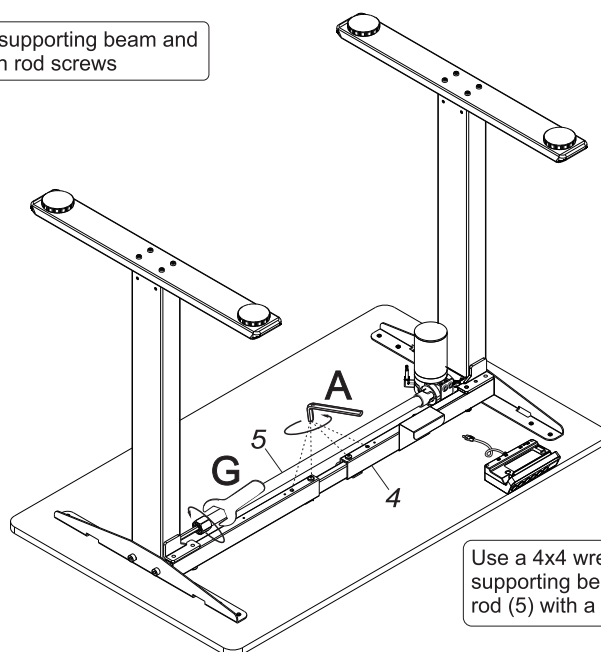




Use a 4x4 wrench (A) to tighten the screws on the supporting beam (4), tighten the nut on the transition rod (5) with a nut wrench (G)

#### STEP7

   Install baffle and power adaptor




Install the baffle (8) to the supporting beam (4) using screws (B), and then lock with 2.5\*2.5 wrench (A).

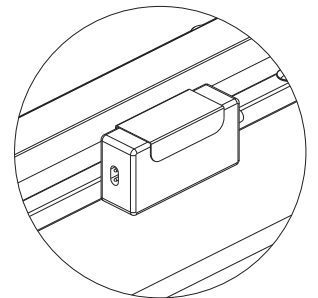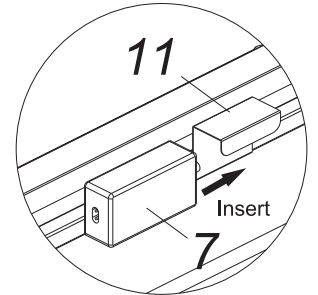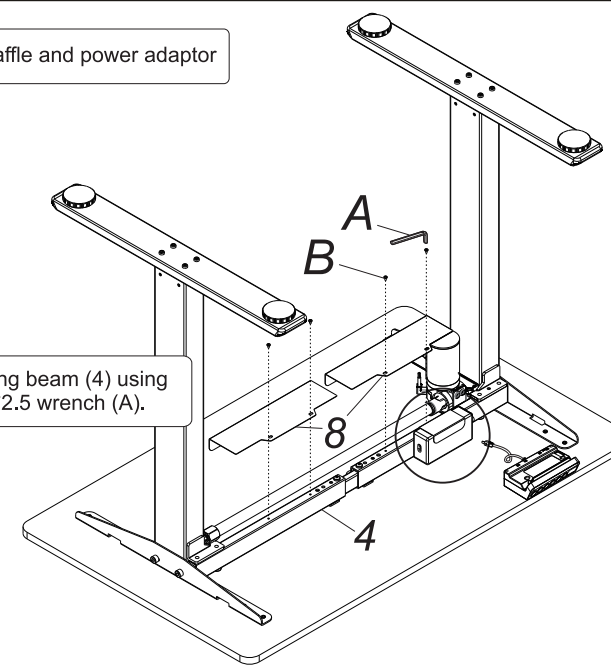






#### STEP8

 Connect all cables to the adaptor



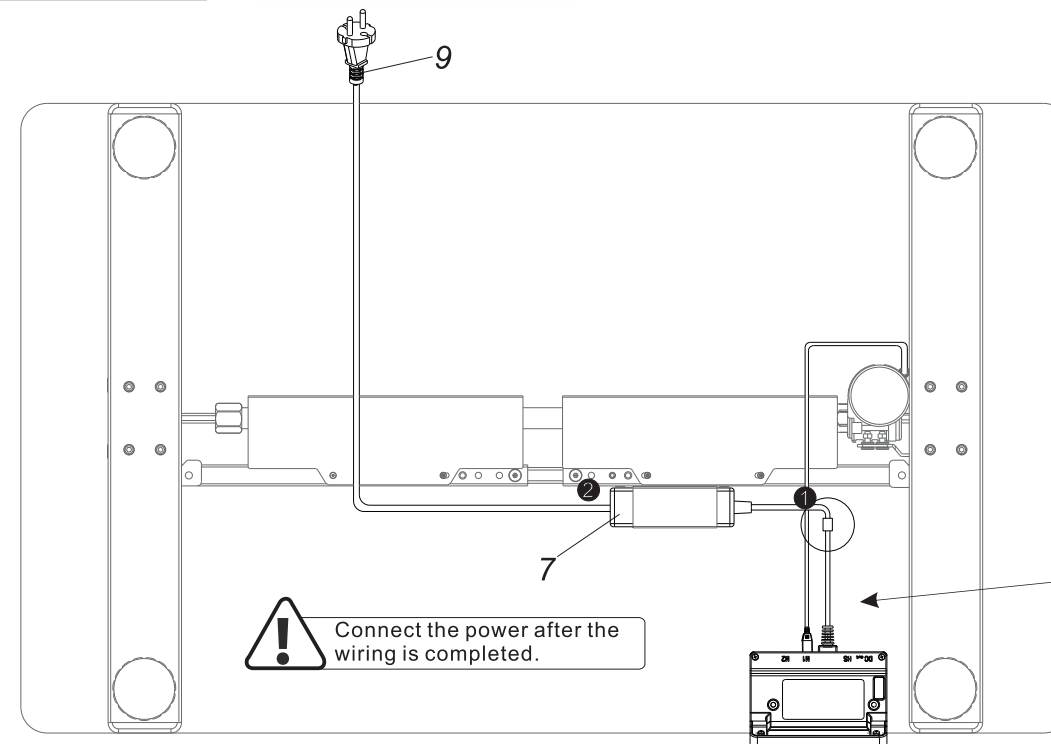


Connect the power after the wiring is completed.

     Connect the motor cord to the M1 port

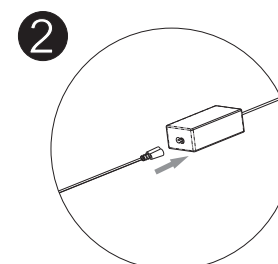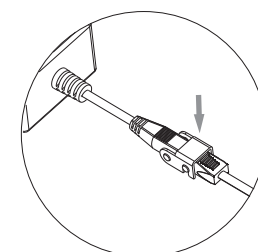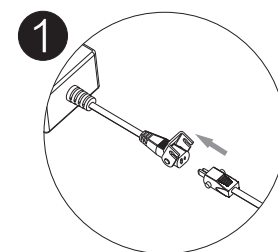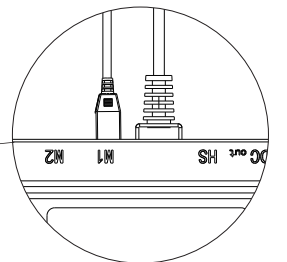


   Use cable tie 10 to fix all cables onto the table top.

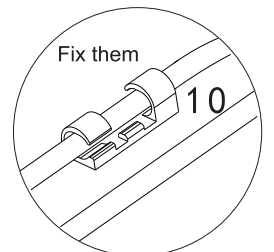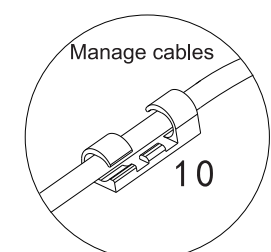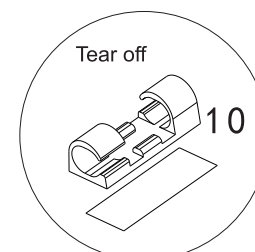

How to use handswitch

 Button

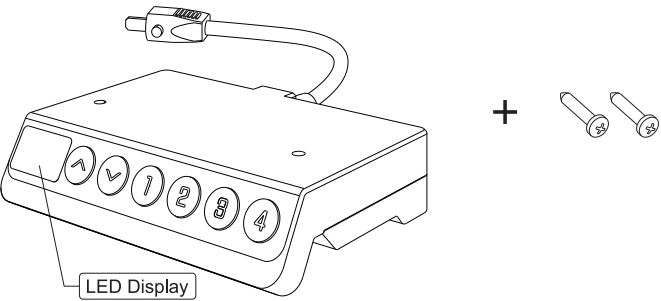

Button introduction: There are 6 buttons that "▲" , "▼" , "1" , "2" , "3" , "4"

- (1) "▲" : Adjust the desk upwards  
(2) "▼" : Adjust the desk downwards  
(3)"1": Position 1, the first height user save  
(4)"2": Position 2, the second height user save  
(5)"3": Position 3, the third height user save  
(6)"4": Position 4, the fourth height user save

Operating Instructions

- Lifting Function:  
The height of the desk can be adjusted up or down by pressing the "▲" or "▼" button, and the current height will show on the display.
- Height Memory Function:  
1.When the desk is in a static state, long press the button "1" for three seconds, the display shows "5-1", which means the save is successful.  
2.Buttons "2", "3", and "4" all have the same height memory function as button "1", repeat the above steps to save the height to the corresponding position 2 or 3 or 4, and the display screen will corresponding show "5-2" or "5-3" or "5-4".  
3.When the tabletop is at any height, press the "1" or "2" or "3" or "4" button to automatically adjust to the previously saved location.
- 24V DC power supply function  
1.In the operating state of the desk, the 2pin at the back of the control box does not output a DC 24V voltage.  
2.In the static state of the desk, the 2pin at the back of the control box will output a DC 24V voltage.
- Anti-Collision Sensor Level Adjustment  
1.Simultaneously press and hold the "▲" and "▼" buttons for 5 seconds to switch the sensitivity. One operation can switch to one level, divided into 4 levels—"R-0", "R-1", "R-2", "R-3".  
2. The display shows "R-0" means the anti-collision function is turned off; the display shows "R-1" means low sensitivity; the display shows "R-2" means medium sensitivity; the display shows "R-3" means high sensitivity.  
3.When the desk rises or falls, it will rebound immediately when encountering obstacles to prevent damage.
- Code Processing  
1.Reset function definition: When the LED display shows "R5f" or "r5L", keep pressing the "▼" button until the desk reaches the lowest position and bounce up to stop, the display shows the lowest height, release the "▼" button to reset, then the desk can be used normally.  
2. To reset the desk and force the "R5f " or "r5L" message: simultaneously press button "3"+" 4" at least 5 seconds.  
3.If the words "E01" or "E02" appear, please let the desk rest for more than 18 minutes before it can be used normally.  
4.If other codes appear and there is no response after pressing the "▼" button, please make sure that the cable is not damaged and the connection is normal, and power off for more than 10 seconds, then turn on the power again, "R5f" or "r5L" is displayed, then long press the "▼" button to reset.  
5.If the above operations are performed, the table still does not operate normally, please contact customer service.

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1.Check if all the cables be connected well
	2.Contact your supplier or dealer
No response while pressing up arrow/ down arrow after connected with a power supply	1.Check if all the cables be connected well
	2.Contact your supplier or dealer
Rising in a low speed	1. Check if overloaded, max loading: 70kg;
	2. Contact your supplier or dealer
The motor not move as instructed	1. Contact your supplier or dealer
	1.Reposition
Go down but not go up	2.Contact your supplier or dealer
	1. Check if overloaded, max loading: 70kg;
Downward sliding	2. Contact your supplier or dealer
	1. Check if overloaded, max loading: 70kg;
Frequently Reposition	2. Contact your supplier or dealer
	1. Restart after suspend for 18mins while connecting with power;
Overwork (Duty cycle: Max 2min on/18min OFF)	2. Contact your supplier or dealer;
	1.Perform a reset operation;
Not enough up&down height	2.Contact your supplier or dealer.



Attention

1. Power supply: AC100V-240V,50/60HZ
2. Service Environment: 0-40℃
3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
5. Check carefully to ensure correct and complete assembly before using.
6. Be familiar with all functions and program settings of the product before first use.
7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on manufacturers.
8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
11. Cleaning and user maintenance shall not be made by children without supervision.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
14. Keep the original package of the equipment if necessary in case of the future use in transportation.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

