

# Setting Guide

This setting guide **should only be used as general reference.**  
 After some uses, you will learn what settings will work best for your bottles.  
**Always test the temperature of the milk or baby food before feeding your baby**

### Quick Warm ☁

🏠 Formula or baby food at **room temperature 21°C**

Plastic 🍼		Glass 🍷	
30ml	1	30ml	×
60ml	2	60ml	×
90ml	3	90ml	1
120ml	4	120ml	2
150ml	5	150ml	3
180ml	6	180ml	4
210ml	7	210ml	5
240ml	8	240ml	6
270ml	9	270ml	6

### Quick Warm ☁

❄ Refrigerated formula or baby food **4°C**

Plastic 🍼		Glass 🍷	
30ml	1	30ml	×
60ml	2	60ml	×
90ml	3	90ml	1
120ml	4	120ml	2
150ml	5	150ml	3
180ml	6	180ml	3
210ml	7	210ml	4
240ml	8	240ml	5
270ml	9	270ml	6

### Steady Warm ☹☹☹

🏠 Breastmilk at **room temperature 21°C**

Plastic 🍼		Glass 🍷	
30ml	1	30ml	×
60ml	2	60ml	1
90ml	3	90ml	2
120ml	4	120ml	4
150ml	5	150ml	4
180ml	6	180ml	5
210ml	7	210ml	7
240ml	8	240ml	7
270ml	9	270ml	7

### Steady Warm ☹☹☹

❄ Refrigerated breastmilk **4°C**

Plastic 🍼		Glass 🍷	
30ml	1	30ml	×
60ml	2	60ml	1
90ml	3	90ml	2
120ml	4	120ml	3
150ml	5	150ml	4
180ml	6	180ml	5
210ml	7	210ml	6
240ml	8	240ml	7
270ml	9	270ml	7

# babybrezza®

bottle + breastmilk warmer

## Instructions

for set-up, use and cleaning



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

## Essential Safeguards for the wellbeing of you and your baby

1. Before serving make sure food is at safe temperature for baby.
2. Milk should not be heated for too long a period.
3. Extreme caution must be used when moving an appliance containing hot liquids.
4. Unplug cord from wall socket before serving milk or food warmed in appliance.
5. After use, the heater surface is subject to residual heat.
6. Do not touch hot surfaces. Use handles.
7. Unplug from socket when not in use and before cleaning. Allow to cool before inserting or removing parts, and before cleaning the appliance.
8. Use on level surface and be sure there is no debris under the unit and the rubber pads are touching the surface.
9. Do not leave cord within child's reach.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not use appliance for other than intended use.
12. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
13. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised are not to play with the appliance.

## Electrical and other safeguards

1. Do not place on or near hot gas or electric burner, or in a heated oven.
2. To disconnect, turn appliance off, then remove plug from wall socket.
3. To protect against electric shock and injury to persons do not immerse cord, plug, water tank or appliance in water or other liquid.
4. Do not operate this appliance with a damaged cord or plug. If the appliance malfunctions or has been damaged in any manner, return appliance to the nearest authorized service facility for examination, repair or adjustment.
5. Do not attempt to modify the plug in any way.
6. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
7. A short power-supply cord is provided to reduce risks of becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If using the machine with an extension cord, make sure the cord is the proper electrical rating for the machine.
8. The extension cord should be arranged so that it does not drape over a counter top or tabletop, where it can be pulled on by children or tripped over unintentionally.



This marking indicates that products should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or Contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



- CAUTION:** To maintain the compliance with the RF exposure guideline, place the unit at least 8in/20cm away from nearby persons.
- CAUTION:** If E1, E2, E3, or E4 error messages appear on the bottle warmer screen, please contact customer service before any continued use of the bottle warmer. [help@cheekyrascals.co.uk](mailto:help@cheekyrascals.co.uk)

**Please save these instructions for future reference**

# Bottle + Breastmilk Warmer Parts and Controls



## TECHNICAL DATA

Model: BRZ0084EU    Supply Voltage: 220-240V ~ 50/60Hz    Current: 4.4A    Heater Power: 500W

## Steady Warm Breastmilk (gentle warming to preserve nutrients)

1. Place bottle in the bottle tray and fill the bottle warmer with water until it matches the level of the milk inside the bottle. **Always use room temperature water.**  
Using warm, hot or cold water will result in inaccurate or dangerous bottle temperatures.
2. Close the bottle warmer cover.
3. Press  to turn on machine.
4. Select the correct setting for the bottle size and material. Use the setting guide on the back of this manual to determine the setting for your bottle. Make sure to select the correct bottle size and material.
5. Identify the **starting temperature** of your bottle.
  - If your bottle is **room temperature** (approximately 70F/21C) press  repeatedly to select your setting.
  - If your bottle is **cold** (refrigerated 39°F / 4°C) press  repeatedly to select your setting.
6. Press  to begin heating.
7. Warmer will beep when bottle is ready. Remove bottle immediately after warming is complete, swirl bottle gently and check temperature of the milk before feeding baby.

**Fill warmer with water to level of milk in the bottle.**

 If you are warming multiple bottles, allow the bottle warmer to cool before warming the next bottle.



## Quick Warm Formula or Baby food (steam heating for warming quickly)

1. Fill the measuring cup (included on the back of the warmer) with **room temperature water**. **Do not use warm, hot or cold water, which will result in inaccurate or dangerous bottle temperatures.**  
Empty the measuring cup into the warmer as shown.   
Water level will be at the "Quick Warm" fill line - see arrow below.
2. Place bottle in the bottle tray and close the bottle warmer cover.
3. Press  to turn on machine.
4. Select the correct setting for the bottle size and material. Use the setting guide on the back of this manual to determine the setting for your bottle. Make sure to select the correct bottle size and material.
5. Identify the **starting temperature** of your bottle.
  - If your bottle is **room temperature** (approximately 70F/21C) press  repeatedly to select your setting.
  - If your bottle is **cold** (refrigerated 39°F / 4°C) press  repeatedly to select your setting.
6. Press  to begin heating.
7. Warmer will beep when bottle is ready. Remove bottle immediately after warming is complete, swirl bottle gently and check temperature of the milk or babyfood before feeding baby.

**Please note: the quick warm mode uses steam to warm bottles. Please use caution when opening the lid after warming cycle is complete. Always use the bottle tray to remove the bottle from the warmer and avoid touching any hot areas of the bottle warmer. The outside of warmed bottle may be hot immediately after warming.**

**Fill warmer with water to the Quick Warm Fill line.**  
(use measuring cup included with warmer)

 If you are warming multiple bottles, allow the bottle warmer to cool before warming the next bottle.



## Defrosting Frozen Milk Pouches

To use the defrost setting, place a frozen milk pouch into the warmer and fill with room temperature water to the line of the milk in the pouch.

Press the ❄️ temperature setting until the “F” icon is displayed on the LCD screen,

Then press 🌀 to begin heating.



## Cleaning the Bottle Warmer

Always allow warmer to cool before cleaning



1  
Unplug the bottle warmer and remove the bottle tray from the base.



2  
Carefully pour out any remaining water inside the base.



3  
Wipe all parts dry before next use. If necessary, wipe base exterior with damp cloth. **Do not use scouring pads, abrasives or solvents for cleaning.**

## Descaling the Bottle Warmer

It is very important to descale this appliance every 4 weeks to ensure that it continues to work properly. Pour all remaining water out of the water chamber. To descale, mix 2oz (60ml) of white vinegar with 4oz (120ml) of cold water into the water chamber, and then run one heating cycle on setting 5 until any scaling has been removed. Please ensure proper ventilation when descaling with vinegar.

## Troubleshooting

Condition	Possible Cause	Possible Remedy
Unit will not power on.	Unit is unplugged.	Ensure that plug is securely inserted into the power socket.
	⏻ is held for too long.	Press ⏻ to turn on the unit. Do <b>not</b> hold down the button.
Lid will not close.	Bottle Tray is misaligned inside bottle warmer.	Ensure that bottle tray is lined up with bottle tray slots in the bottle warmer.
Warmed bottle is too hot. (Quick warm setting)	Not enough water added to bottle warmer.	Add water to the marked Quick Warm fill line.
	Setting time is too long or incorrect setting chosen.	Try a lower setting according to your preference.
Warmed bottle is too hot. (Steady warm setting)	Not enough water added to bottle warmer.	Add water until it matches the height of liquid in your bottle.
	Setting time is too long or incorrect setting chosen.	Try a lower setting according to your preference.
Warmed bottle is too cold. (Quick & Steady warm settings)	Too much water added to bottle warmer.	Reduce water in bottle warmer to the required height based on your setting. (Refer to page 5).
	Setting time is too short or incorrect setting chosen.	Try a higher setting according to your preference.
“E5” error displays on machine or “Error” message displays on app.	Little or no water has been added to the machine.	Add cold water to the machine and let it sit and cool for 5 min. Empty out cold water and restart the bottle warmer. Make sure to add the appropriate amount of water needed for warming.
E1, E2, E3, or E4 error displays on machine.	Internal malfunction in machine.	Please contact customer service before continuing to use your machine.

### babybrezza® Customer Service

If you need help with your Baby Brezza Product in the UK or Ireland, visit [www.babybrezza.co.uk](http://www.babybrezza.co.uk) or email [help@cheekyrascals.co.uk](mailto:help@cheekyrascals.co.uk). Returns should be made to the store you purchased it from, but before you do, please first contact either Cheeky Rascals or Baby Brezza so that we can give you expert advice customised to your particular situation. Returns cannot be accepted once water has been added to the machine unless there is a fault covered by the Warranty.

### Limited 1-Year Warranty

The limited warranty is valid only on products bought through authorized resellers and used in the UK and Ireland. Buying through an unauthorized reseller or using this product outside of the UK and Ireland automatically voids this warranty.

This warranty is available to consumers only. You are a consumer if you own a Baby Brezza Product that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza Product will be free of defects in material or workmanship under normal home use for one year from the date of original purchase when used in accordance with the instructions and maintained correctly. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza Product should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it.

To obtain warranty services, in the UK or Ireland, please visit [www.babybrezza.co.uk](http://www.babybrezza.co.uk) Alternatively, contact [help@cheekyrascals.co.uk](mailto:help@cheekyrascals.co.uk)