

Pacific Seismic Products, Inc.

Lancaster, California 93535

Reset Instructions for Models 317F and 319F

WARNING: NEVER FORCE THE RESET SHAFT COUNTER-CLOCKWISE

WARNING: IF POSSIBLE BLEED INLET PRESSURE DOWN BEFORE RESET

A-Rotate reset shaft CLOCKWISE a few degrees to B with moderate force

B-Hold the wrench and reset shaft with moderate tension to allow any line pressure to bleed across the spring loaded disk poppet valve (illustration 1)

C-Continue to rotate to 1/4 turn clockwise where a hard stop will be felt. Do not use excessive force. (illustrations 2 and 3)

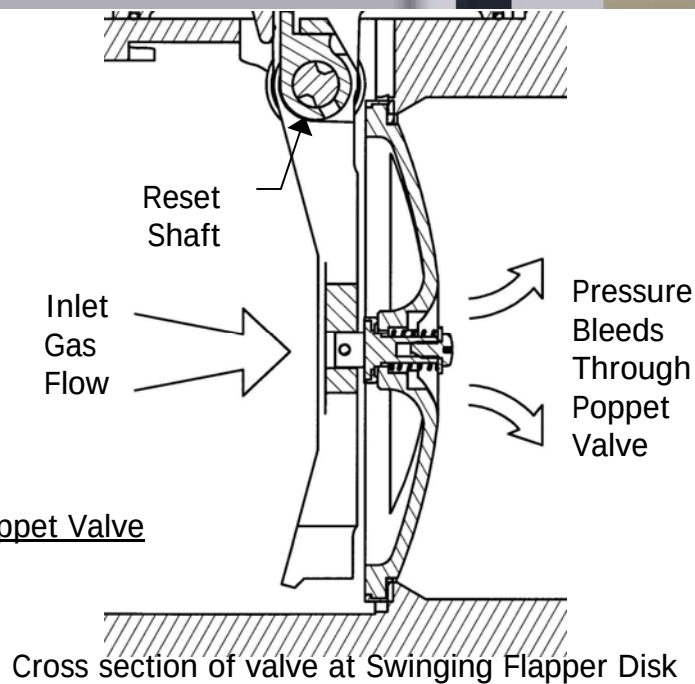
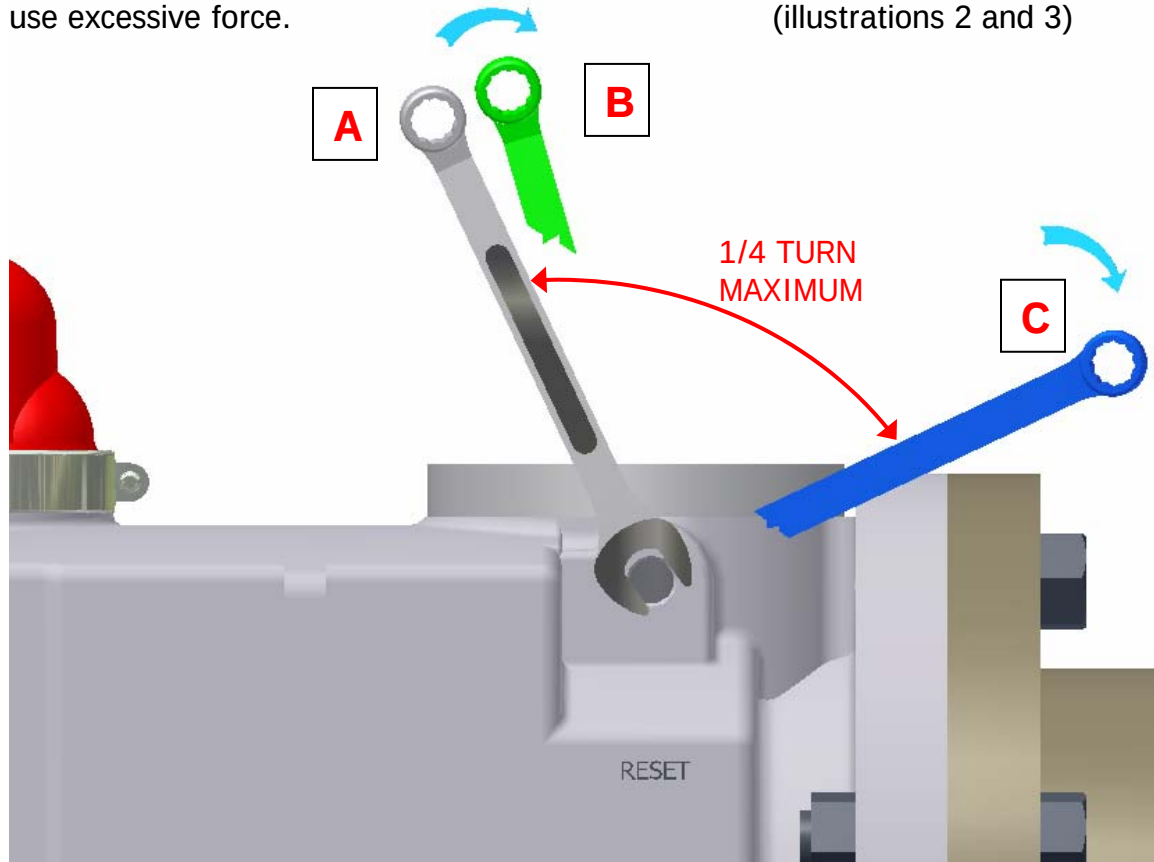


Illustration 1 of Disk Poppet Valve
(Refer to step **B** above)

Illustration 2 showing Disk Rotating
1/4 Turn Clockwise Toward Reset
(Refer to step **C** above)


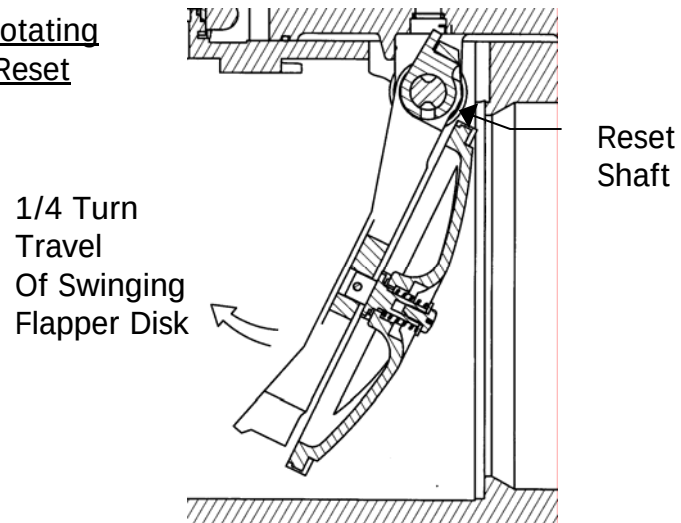


Illustration 3 of Window
Colors at Hard Stop
of **C** above



D-Release tension on wrench and reset shaft, spring loaded reset shaft will go back to starting position **A**.

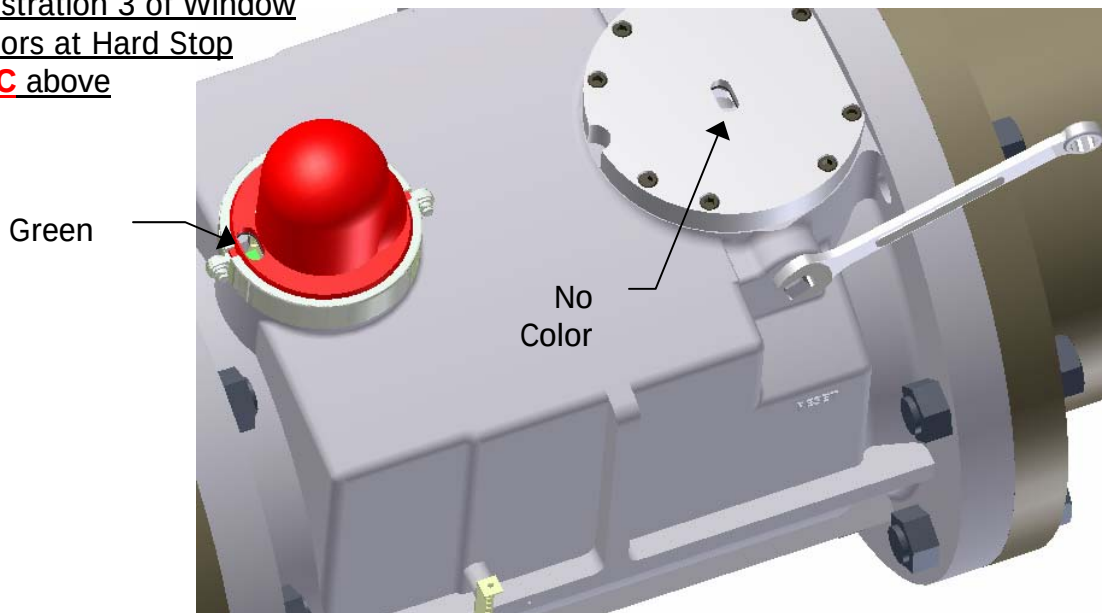