

True Wireless Stereo earbuds

5.0 
Bluetooth™



MA-TWSH100

Buttons and Functions

Incoming call

Answer / Hang up: Press ③

Reject: hold pressed ③
for a second

Play music

Press ③ to play or pause.
Press twice to call the last
number

Press ① : Volume down

Press ② : Volume up

Press and hold ① : Previous song

Press and hold ② : Next song



Specifications

Bluetooth version: 5.0

Response frequency: 20 Hz to 20 KHz

Sensitivity: 108 +/- 15% dB

Impedance: 32 Ohm +/- 15%

Reach Range: 10 mtrs

Drivers: 14mm

Battery Capacity: 400mA

Battery Life: up to 4 hours approx. per charge *(depending on usage)*

Charging Time: 1 hour approx.

Rest duration: 60 hours

Earbuds Dimension: 43.5 * 18.8 * 22mm

Charging Case: 78 * 78 * 44mm

Before using

Before starting to use this product, you must remove the protective plastic that covers the charging contacts of the earbuds.

Instructions

The left and right earbuds are already paired with each other at the factory. To connect to your phone for the first time, follow the steps below.

1. The Earbuds will automatically turn on when you remove them from their case (an indicator LED will flash red and blue indicating that they are turned on). After 3 seconds, both units will connect to each other. The red and blue light will continue to flash on the main unit while it will turn off on the other.
2. Turn on the Bluetooth connection on your device and search the model MA-TWSH100. After pairing you will hear "connected" on the earbuds indicating a successful connection. The next time you turn on the cell phone's Bluetooth, the connection will be automatic. Placing one earbud in the charging case will not affect the performance of the other.

If no equipment connects at startup, the earbuds will turn off after 3 seconds.

Either earbuds can be used on its own in mono mode.

TWS pairing

When you remove the earbuds from the charging case, they will automatically interconnect with each other. This is accompanied by a "Beep" sound.

If the earbuds won't connect for a long period, put the earbuds back into the case and take them out again. If both units are muted after connection, put both earbuds back in the charging case, and remove them again. The connection will be re-established automatically between the units. Then they will connect with the cell phone (may need manual connection).

Operation (calls)

1. *Start:* When you remove the earbuds from the case they will turn on by themselves.
If they are off, press and hold button 3 for 2 seconds and they will turn on. Doing so will enter BT mode.
2. *Power off:* press and hold button 3 for 2 seconds to power off, or put them in the charging case.

-
3. Answer a call: with an incoming call, press button 3.
 4. Reject a call: press and hold button 3 for 2 seconds.
 5. End a call: press button 3.

Operation (music playback)

1. *Play*: press button 3 to start playback (with paired phone and a playlist on the player)
2. *Pause*: press button 3 to pause playback.
3. *Call again*: press button 3 twice.

Press button 1 to decrease the volume, and hold to go to the previous song.

Press button 2 to increase the volume, and hold to go to the next song.


If you use earbuds to watch videos, the audio may be slightly out of date.

Recharge

1. When the battery is low, a warning will sound in the earbuds.

Place the earbuds in the charging case and press the charge button to start it. A blue light will turn on indicating that it is charging. To the complete the charge it will turn off.

2. To charge the case, connect the micro USB cable to the case at one end, and to a USB interface on the other (a PC or charger for example). During charging a red light will flash on the case. With the full charge it will stay on. When the case is low on battery a blue light will flash.

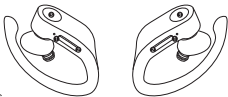

Content

- 1 pair of Earbuds
- 1 Charger case
- 2 pairs of replacement silicone earplugs
- 1 Micro USB Cable
- 1 User Manual
- 1 Warranty Card