

285*210mm 105G双铜 单色双面+对折



Specifications

Speaker Type: Active	Wireless connection
PMPO Power 900W	TWS function
RMS Power 60W	Mic connections 6.35mm x 2 Aux connection 3.5mm
Class D Amplifier Board	USB charging output
Woofer 6.5" x 2	Lithium Battery 7.4 V/6000 mAh
Tweeter 1.5" x 2	5V 2A charging input
25.5 mm KSV Voice Coil	Unit Measurements 23.6 x 9.25 x 9.85 in
Sensitivity 88dB	Unit Weight 14.1 Lbs
Signal-to-Noise Ratio 65 dB	Box measures 27.1 x 11.3 x 11.6 in
Frequency response 65Hz - 19KHz	Box Weight 17.2 Lbs

INCLUDE 1 Wireless Microphone, Strap, USB Type-C Charging Cable, User Manual and Warranty Card.

封底



PORTABLE SPEAKER | 900w PMPO POWER
WOOFER 6.5" x2 • TWEETER 1.5" x2

Instruction Manual

封面

Functional Brief Description	
MIC1	Microphone Input 1
MIC2	Microphone Input 2
AUX	External Audio Input
USB	USB Socket
ON/OFF	Power Switch
DC 5V	Type-C USB Charge
-MIC VOL+	Microphone Volume Control up/Down
-ECHO+	ECHO Control Up/Down
-BASS+	BASS Control Up/Down
-TREBLE+	TREBLE Control Up/Down
-VOLUME+	VOLUME Control Up/Down
☀	Light Mode
MIC PRI	Microphone Priority
TWS DIMMER	TWS function/ light luminance level adjustment
↺	Repeat/Bluetooth Device Disconnect/ Frequency Switch
⏮	Last Song
⏸	Play and pause
⏭	Next Song
MODE	Mode Switch

MODE SWITCH ▼

Short press "MODE" button to switch mode "BT → AUX IN" mode.
The first time booting will enter into Bluetooth model by default, the next booting will enter into the same mode and setting as last selection.

BLUETOOTH CONNECTING ▼

Short press " MODE " button switch to BT mode, choose model TRIP on your Bluetooth device to connect.
-Bluetooth Player: Under Bluetooth mode, short press " ⏭ " for next song; short press "⏮" for last song; Press "⏸" for pause, press once again to replay.

-Force Disconnect Bluetooth Device: In Bluetooth mode, press " ↺ " to force disconnect the current Bluetooth device, another Bluetooth device can search the speaker name No.B361 to connect.
-Warning Tone turn on/ off: Long press "MODE" button to turn on or turn off the prompt voice, display screen show **ON** / **OFF**

AUX MODE ▼

- Insert the AUX cable, and then press the " MODE " button switch to AUX mode.
- In Aux mode, press "⏸" button to MUTE , display show **MUTE** , press ⏸ " again to exit MUTE.

MICROPHONE INPUT ▼

In random mode, when using the wired/wireless microphone, Mic volume and echo volume can be adjusted.
MIC PRI: microphone priority. When using the microphone, short press MIC PRI button to automatically turn down the music volume.

TWS FUNCTION ▼

Switch both speakers to Bluetooth mode, press and hold " TWS DIMMER " on one speaker(as right channel) for more than 2 seconds to enter TWS mode. While pairing, the TWS indicator will be flashing. After TWS connected successfully, there will be a warning tone and the indicator light of both speakers with be on. The speaker which connected to your Bluetooth device acts as the primary speaker (left channel). Press and hold "TWS DIMMER " more than 2 seconds to exit TWS mode.

LIGHT CONTROL ▼

- In random mode, short press the"☀" to turn on the light, long press the"☀" to turn off the light.
- Short press"☀" to switch 4 light effects.
- When the light is on, short press " TWS DIMMER " button enter light luminance level adjustment. Short press "⏭" and "⏮" to adjust the luminance level from d 1-d 10.
- After the adjustment is completed, short press " TWS DIMMER " again to exit the light adjustment and return to the current interface, or automatically exit the light adjustment interface after 3 seconds without any operation.

RECHARGE ▼

When"☑" flashing slowly, it indicates that the battery is under charge and needs to be immediately charged and the playback volume should be reduced or turned off;
If continue to play, it will automatically shut down when the battery is below the protection voltage(Automatic shutdown below 6.0V) and display "**OFF**". Then display "**-- --**", the machine enters standby mode