

VOLUME CONTROL ▼

While playing, turn the **"-VOLUME+"** knob to adjust the volume up/down from **VOL 0** - **VOL 30**.

TWS FUNCTION ▼

Switch both speakers to Bluetooth mode, press **"TWS"** button at one speaker(as right channel) for 2 seconds to enter TWS mode. While pairing, the TWS indicator will be flashing. After TWS connected successfully, there will be a voice "di" and the TWS indicator light of both speakers will be on. The speaker which connects to your Bluetooth device acts as the primary speaker (left channel). Press **"TWS"** button to exit TWS mode.

RGB LIGHT CONTROL ▼

Press button  to turn on/off the light.

When the light is on, press  to switch 5 light effects.

When the light is on, press **"DIMMER"** button to enter light brightness level adjustment. Turn the **"-VOLUME"** knob to adjust the brightness level from LUM 1 - LUM 10.

After the adjustment is completed, press **"DIMMER"** button once to exit the light adjustment and return to the current interface, or automatically exit the light adjustment interface after 3 seconds without any operation.

BASS/TREBLE CONTROL ▼

Turn the knob **"BASS"**, to adjust the bass. Turn the knob **"TREBLE"** to adjust the treble.

RECHARGE ▼

When speaker battery is low power, there will be a sound signal that indicates that the battery needs to be recharged.

Speaker will automatically turn off when battery is lower than 6V, screen display shows "OFF".

Please use AC 100-240V 50/60Hz current safety standard charge to charge the speaker, when charging starts, the charge indicator light will keep flashing. After charging is completed, the light will be on.

moonki

Strip

MX-X208BLT

Wireless Sound Tower



USER MANUAL

Functional Brief Description	
MIC1	Microphone Socket 1
MIC2	Microphone Socket 2
AUX	External Audio Input Socket
USB	USB Charging Output
ON/OFF	Power Switch
-MIC VOL+	Microphone Volume Control Up/Down
-ECHO+	ECHO Control Up/Down
-BASS+	BASS Control Up/Down
-TREBLE+	TREBLE Control Up/Down
-VOLUME+	VOLUME Control Up/Down
 ON-OFF	Light Switch On/Off
	Light Effects
MIC PRI	Microphone Priority
TWS	TWS Function
DIMMER	Light Brightness Adjustment
	Play Mode/Bluetooth Device Disconnect/ FM Channel and Frequency Switch
	Backward FM Channel or Frequency/Last track; Fast backward play
	FM Auto-scanning /Play and pause
	Forward FM Channel or Frequency/Next track; Fast forward play
MODE	Mode Switch

MODE SWITCH ▼

Press "MODE" button to switch mode "BT → FM → AUX IN".

The first time booting will enter into wireless mode by default, the next booting will enter into the same mode and setting as last selection.

Press and hold "MODE"button 2 seconds to turn on/off prompt tone, display screen will show  / .

BLUETOOTH CONNECTING ▼

Press “ MODE ” button to switch to "BT" mode, display screen show “  ” in flashing; select paring name “ MX-X208BLT ” in your bluetooth device to connect . Once successfully connected, the display screen show “  ”

-Bt Player: In bluetooth mode, press “  ” to pause or resume playback; press“  ”once for next track; press “  ”once for last track.

-Force Disconnect Bt Device: In Bluetooth mode, press“  ” once to force disconnect the c Bluetooth device, another Bluetooth device can search the paring name “ MX-X208BLT ” to connect.

FM RADIO MODE ▼

1. Auto Scanning : In FM mode, press and hold “  ” for auto scanning from "87.5MHz --108M channel can be automatically saved up to channels from FM1 to FM99, and the display show .

2.FM Channel Selection: In FM mode, after auto scanning, display show , press“  ” o to switch the FM channel from  to FM, , etc.

3.FM Frequency Selection: In FM mode, after auto scanning, display show , press“  ” b display show the FM frequency (for example ) , then press “  or  ” to switch th frequency (for example  | ).

AUX MODE ▼

Insert the AUX cable, and then press the “ MODE ” button switch to AUX mode.(display show )

In Aux mode, press button “  ” once to MUTE , display show , press “  ” once again to exit MUTE.

Short press “DIMMER” and turn the knob “ -VOLUME+ ” to adjust the dimmer luminosity (from LUM1 to LUM 10, LUM 10 by default) .Short press “MIC PRI” to turn on/off the microphone priority function.

MICROPHONE INPUT ▼

In any mode, when using the wired/wireless microphone, Mic volume and echo volume can be a the knob “**ECHO**” to adjust the microphone echo volume; turn the knob “**MIC VOL**” to adjust the m volume.

MIC PRI: microphone priority. When using the microphone, press button “**MIC PRI**” to automati down the music volume.