




LensClip Plus

User Guide & Warranty


Thank you for choosing Acesori.
Please follow this user guide to ensure proper use.

Preparing Your Phone For The LensClip: Clean the phone camera lens with the included microfiber carrying pouch. Some phone cases may let in light between the camera lens and the LensClip; if this is the result, please remove the phone case.

Attaching The Lens To The Clip: Simply screw-on the desired lens to the included clip until securely attached **(A)**. When you are ready to switch to another lens, unscrew that lens and attach the replacement. To use the Fisheye lens, attach the Macro & Fisheye assemblies together. To use the Macro lens, disassemble these lens parts. See diagram **(B)** below.

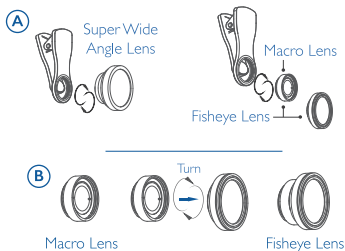

Using The LensClip: Squeeze the end of the LensClip to open the assembly. Align the center of the phone camera lens with the center of the LensClip **(C)**. Once aligned, release the LensClip and it will now be attached to the phone body. Test the alignment by launching the camera on the phone. Slight adjustments to the LensClip may be needed.

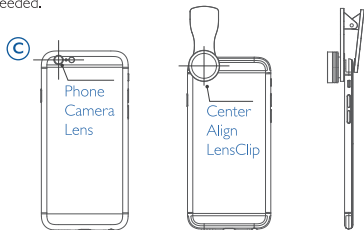

When Using The LensClip: **1)** Depending on the phone model, the camera flash may be blocked. **2)** For optimal results, remove a phone case if attached. **3)** When using the Macro lens, the optimal distance is between 0.4 - 0.8 inches from the subject.

Warranty Information

Acesori is pleased to cover your Acesori LensClip for a period of one year from the date of purchase. Please contact us within that year for any technical assistance with your LensClip.

Email: support@acesori.com

Website: www.acesori.com

See website for full warranty conditions