




PowerSlim¹⁰

User Guide & Warranty

Charging The PowerSlim

Plug the included cable into the "MicroUSB" port on the side of the PowerSlim. Plug the other end of this cable into a USB power source such as a USB wall adapter. The PowerSlim can also be charged by utilizing the "Type-C" port with your own USB Type-C cable.

When properly connected and charging, the display on the PowerSlim will turn on showing the battery level. The charging time will vary depending on the power source connected to the PowerSlim. However, a typical full charge takes approximately 4 hours. When fully charged, the display will show "100".

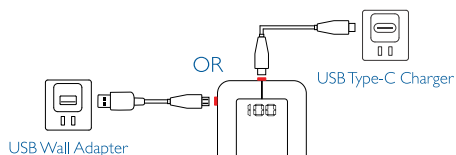

Display

To display the current battery level, simply press the "Function" button on the side of the power bank.




Charging Your Devices

Using the charging cable that came with your phone, tablet or other portable device; plug one end into your device and the other end into one of the "Output" ports on the PowerSlim. The "Type-C" port will charge your device if you connect a USB Type-C cable. Both standard USB ports "⚡" & "⚡", will charge any other device.

Your device will begin charging and the PowerSlim display will turn on showing the battery level remaining in the PowerSlim.

You can charge 3 devices at the same time using both USB Output ports & the USB Type-C port.

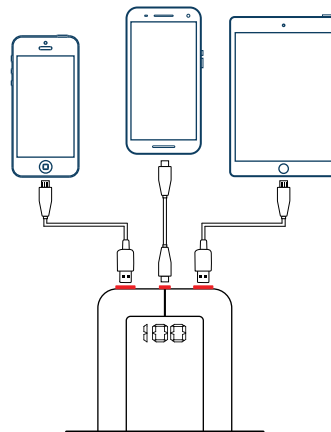

Specifications

Battery Capacity	10,000 mAh
Watt Hours	37 Wh
MicoUSB Input	5 V 2.1 Amp
Type-C Input	5 V 2.1 Amp
Type-C Output	5 V 2.1 Amp
USB Output ⚡	5 V 1 Amp
USB Output ⚡⚡	5 V 2.1 Amp

Notices & Warnings

1. Fully charge the PowerSlim before its first use.
2. It is normal for the PowerSlim to be warm during the charging process.
3. Keep the PowerSlim clean and dry without using any chemical cleaners.
4. Do not let children handle the PowerSlim.
5. Do not puncture, disassemble, crush or dampen the PowerSlim.
6. Do not leave the PowerSlim in a high temperature environment for extended periods of time.
7. Do not input non-compliant voltage into the PowerSlim.
8. To extend the life of the battery, fully charge the PowerSlim once every four months and store in a cool, dry place.
9. Follow local and state regulations for recycling this device; and other laws governing its use.

Warranty

Acesori is pleased to cover your Acesori PowerSlim10 for a period of one year from the date of purchase. Please contact us within that year for any technical assistance with your Acesori item.

Email: support@acesori.com Website: www.acesori.com

See website for full warranty conditions