

Thank you for choosing Acesori. Please follow both sides of this user guide to ensure proper use.

Charging The PowerSlim Pro: Plug the small end of the included MicroUSB cable into the "Input" port on the PowerSlim Pro. The other end of this cable, plug into a USB power source such as a USB power adapter or computer USB port. When properly connected, the LED lights on the PowerSlim Pro will turn on and display its battery level; as shown in the diagram on the reverse side of this guide. The charging time will vary, however a typical full charge takes approximately 6 hours. When fully charged, all LED lights will turn solid.

Charging Your Device: You will need the cable that came with your phone, tablet or other USB portable device. Plug one end of that cable into your own device and the other end (USB) of the cable into the "Output" port on the PowerSlim Pro. Once properly connected, the LED indicator lights will turn on and display the battery level remaining in the PowerSlim Pro. Your device will begin charging.

Display Current Battery Level: To display the current battery level of the PowerSlim Pro, simply press the Function button.

Warranty Information


Acesori is pleased to cover your Acesori accessory for a period of one (1) year from the date of purchase. Please contact us any time within that year for any technical assistance with your Acesori item.

Email: support@acesori.com

Website: www.acesori.com

See website for full warranty conditions

PowerSlim Pro Charging Panel Diagram

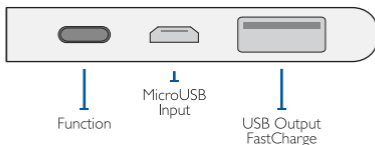

LED Battery Level Light			
● ● ● ●	100% to 76%	○ ● ● ●	75% to 51%
○ ○ ● ●	50% to 26%	○ ○ ○ ●	25% to 1%

Important Notice

1. Fully charge the PowerSlim Pro before its first use.
2. It is normal for the PowerSlim Pro to be warm during the charging process.
3. Keep the PowerSlim Pro clean and dry without using any chemical cleaners.
4. Do not let children handle the PowerSlim Pro.
5. Do not puncture, disassemble, crush or dampen the PowerSlim Pro.
6. Do not leave the PowerSlim Pro in a high temperature environment for extended periods of time.
7. Do not input non-compliant voltage into the PowerSlim Pro.
8. To extend the life of the battery, fully charge the PowerSlim Pro once every four months and store in a cool, dry place.
9. Follow local and state regulations for recycling this device; and other laws governing its use.