


Thank you for choosing Acesori. Please follow both sides of this user guide to ensure proper use.

Display Current Battery Level: To display the current battery level, simply press the "ace" button on the front of the power bank.


Charging The PowerSlim^{6C}: Plug the small end of the included MicroUSB cable into the "Input" port on the PowerSlim^{6C}. The other end of this cable, plug into a USB power source such as a USB wall adapter or computer USB port. The PowerSlim^{6C} can also be charged by utilizing the USB Type-C Input connector with your own USB Type-C cable and a USB wall adapter. When properly connected, the LED lights on the PowerSlim^{6C} will turn on and display its battery level; as shown in the diagram on the reverse side of this guide. The charging time will vary, however a typical full charge takes approximately 4 hours. When fully charged, all LED lights will turn on.



Charging Your Device: You will need the cable that came with your phone, tablet or other portable device. Plug one end of that cable into your own device and the other end of the cable into any of the 3 Output ports on the PowerSlim^{6C}. Your device will begin charging and the LED indicator lights will turn on; displaying the battery level remaining in the PowerSlim^{6C}. You can charge 3 devices at the same time using both USB Output ports & the USB Type-C port.

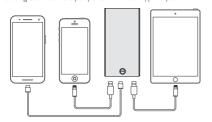

PowerSlim6C Charging Panel Diagram

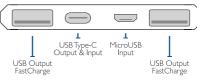

LED Battery Level Light			
	1% to 25%	ace	26% to 50%
(ce	51% to 75%	ace	76% to 100%

Activate the indicator light by pressing the "ace" button.

Important Notice

- 1. Fully charge the PowerSlim6C before its first use.
- It is normal for the PowerSlim^{6C} to be warm during the charging process.
- Keep the PowerSlim^{6C} clean and dry without using any chemical cleaners
- 4. Do not let children handle the PowerSlim6C.
- 5. Do not puncture, disassemble, crush or dampen the PowerSlim^{6C}.
- 6. Do not leave the PowerSlim^{6C} in a high temperature environment for extended periods of time.
- 7. Do not input non-compliant voltage into the PowerSlim6C.
- To extend the life of the battery, fully charge the PowerSlim^{6C} once every four months and store in a cool, dry place.
- Follow local and state regulations for recycling this device; and other laws governing its use.

Warranty Information

Acesori is pleased to cover your Acesori PowerSlim^{6C} for a period of one year from the date of purchase. Please contact us within that year for any technical assistance with your Acesori item.

Email: support@acesori.com Website: www.acesori.com

See website for full warranty conditions