 



Thank you for choosing Acesori. Please follow both sides of this user guide to ensure proper use.

Display Current Battery Level: To display the current battery level of the PowerSlim⁶, simply press the "ace" button on the front of the power bank.


Charging The PowerSlim⁶: Plug the small end of the included MicroUSB cable into the "Input" port on the PowerSlim⁶. The other end of this cable, plug into a USB power source such as a USB power adapter or computer USB port. When properly connected, the LED lights on the PowerSlim⁶ will turn on and display its battery level; as shown in the diagram on the reverse side of this guide. The charging time will vary, however a typical full charge takes approximately 4 hours. When fully charged, all LED lights will turn solid.

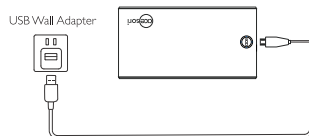

 Charging Your Device: You will need the cable that came with your phone, tablet or other USB portable device. Plug one end of that cable into your own device and the other end (USB) of the cable into either of the "Output" ports on the PowerSlim⁶. Your device will begin charging and the LED indicator lights will turn on; displaying the battery level remaining in the PowerSlim⁶. You can charge two devices at the same time using both USB Output ports.

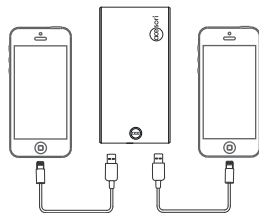

PowerSlim⁶ Charging Panel Diagram

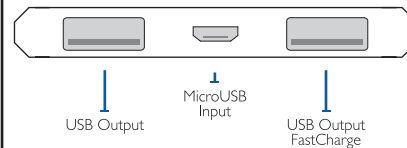

LED Battery Level Light

	1% to 25%		26% to 50%
	51% to 75%		76% to 100%

Activate the indicator light by pressing the "ace" button.

Important Notice

1. Fully charge the PowerSlim⁶ before its first use.
2. It is normal for the PowerSlim⁶ to be warm during the charging process.
3. Keep the PowerSlim⁶ clean and dry without using any chemical cleaners.
4. Do not let children handle the PowerSlim⁶.
5. Do not puncture, disassemble, crush or dampen the PowerSlim⁶.
6. Do not leave the PowerSlim⁶ in a high temperature environment for extended periods of time.
7. Do not input non-compliant voltage into the PowerSlim⁶.
8. To extend the life of the battery, fully charge the PowerSlim⁶ once every four months and store in a cool, dry place.
9. Follow local and state regulations for recycling this device; and other laws governing its use.

Warranty Information

Acesori is pleased to cover your Acesori accessory for a period of one year from the date of purchase. Please contact us within that year for any technical assistance with your Acesori item.

Email: support@acesori.com Website: www.acesori.com

See website for full warranty conditions