




PowerStick¹⁰

User Guide & Warranty

Charging The PowerStick

Plug the included cable into the "MicroUSB" port on the side of the PowerStick. Plug the other end of this cable into a USB power source such as a USB wall adapter. The PowerStick can also be charged by utilizing the "Type-C" port with your own USB Type-C cable.

When properly connected and charging, the display on the PowerStick will turn on showing the battery level. The charging time will vary depending on the power source connected to the PowerStick. However, a typical full charge takes approximately 4 hours. When fully charged, the display will show "100".

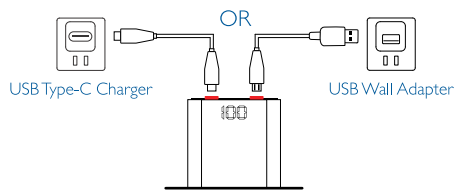

Display

To display the current battery level, simply press the "Function" button on the side of the power bank.




Function Button

Charging Your Devices

Using the charging cable that came with your phone, tablet or other portable device; plug one end into your device and the other end into the "USB" or "Type-C" port on the PowerStick. The Type-C port will charge your device if you connect a USB Type-C cable. If you do not have a Type-C device, the standard USB port, will charge any other device.

Your device will begin charging and the PowerStick display will turn on showing the battery level remaining in the PowerStick.

You can charge 2 devices at the same time using the USB Output port & the USB Type-C port.

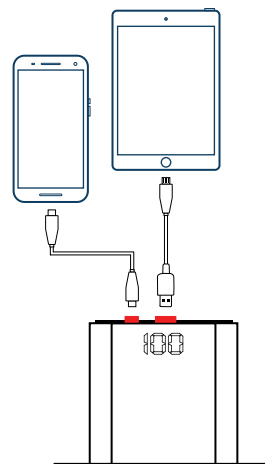

Specifications

Battery Capacity	10,000 mAh
Watt Hours	37 Wh
MicoUSB Input	5 V 2.1 Amp
Type-C Input	5 V 2.1 Amp
Type-C Output	5 V 2.1 Amp
USB Output	5 V 2.1 Amp

Notices & Warnings

1. Fully charge the PowerStick before its first use.
2. It is normal for the PowerStick to be warm during the charging process.
3. Keep the PowerStick clean and dry without using any chemical cleaners.
4. Do not let children handle the PowerStick.
5. Do not puncture, disassemble, crush or dampen the PowerStick.
6. Do not leave the PowerStick in a high temperature environment for extended periods of time.
7. Do not input non-compliant voltage into the PowerStick.
8. To extend the life of the battery, fully charge the PowerStick once every four months and store in a cool, dry place.
9. Follow local and state regulations for recycling this device; and other laws governing its use.

Warranty

Acesori is pleased to cover your Acesori PowerStick 10 for a period of one year from the date of purchase. Please contact us within that year for any technical assistance with your Acesori item.

Email: support@acesori.com

Website: www.acesori.com

See website for full warranty conditions