



Thank you for choosing Acesori. Please follow both sides of this user guide to ensure proper use.

Charging The PowerPack: Plug the small end of the included MicroUSB cable into the "Input" port on the PowerPack. The other end of this cable, plug into a USB power source such as a USB power adapter or computer USB port. When properly connected, the LED light on the PowerPack will turn on and display its battery level; as shown in the diagram on the reverse side of this guide. The charging time will vary, however a typical full charge takes approximately 8 hours.

Charging Your Device: You will need the cable that came with your phone, tablet or other device. Plug one end of that cable into your own device and the other end (USB) into the "Output" port on the PowerPack. Once properly connected, the LED indicator light will turn on and display the battery level remaining in the PowerPack. Your device will begin charging. To charge your device even faster, use the FastCharge port.

Display Current Battery Level: To display the current battery level of the PowerPack, simply give it a light "Shake." Make sure no cables or devices are connected to the PowerPack before shaking 😊.

Warranty Information


Acesori is pleased to cover your Acesori accessory for a period of one (1) year from the date of purchase. Please contact us any time within that year for any technical assistance with your Acesori item.

Email: support@acesori.com

Website: www.acesori.com

See website for full warranty conditions

PowerPack Diagram

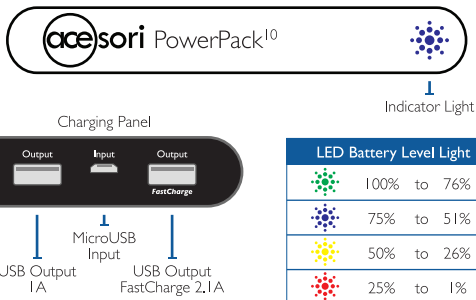

Important Notice

1. Fully charge the PowerPack before its first use.
2. It is normal for the PowerPack to be warm during the charging process.
3. Keep the PowerPack clean and dry without using any chemical cleaners.
4. Do not let children handle the PowerPack.
5. Do not puncture, disassemble, crush or dampen the PowerPack.
6. Do not leave the PowerPack in a high temperature environment for extended periods of time.
7. Do not input non-compliant voltage into the PowerPack.
8. To extend the life of the battery, fully charge the PowerPack once every four months and store in a cool, dry place.
9. Follow local and state regulations for recycling this device; and other laws governing its use.

ACESORI.COM