



Thank you for choosing Acesori. Please follow both sides of this user guide to ensure proper use.

Charging The PowerSlim: Plug the small end of the included MicroUSB cable into the "Input" port on the PowerSlim. The other end of this cable, plug into a USB power source such as a USB power adapter or computer USB port. When properly connected, the LED lights on the PowerSlim will turn on and display its battery level; as shown in the diagram on the reverse side of this guide. The charging time will vary, however a typical full charge takes approximately 8 hours.

Charging Your Device: You will need the cable that came with your phone, tablet or other device. Plug one end of that cable into your own device and the other end (USB) into the "Output" port on the PowerSlim. Once properly connected, the LED indicator lights will turn on and display the battery level remaining in the PowerSlim. Your device will begin charging.

Display Current Battery Level: To display the current battery level of the PowerSlim, simply press the Function button.

Flashlight: To operate the LED flashlight, press and hold the Function button for 3 seconds.

Warranty Information

Acesori is pleased to cover your Acesori accessory for a period of one (1) year from the date of purchase. Please contact us any time within that year for any technical assistance with your Acesori item.


Email: support@acesori.com

Website: www.acesori.com

See website for full warranty conditions

PowerSlim Diagram

Charging Panel

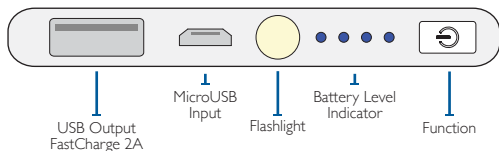

LED Battery Level Light			
● ● ● ●	100% to 76%	○ ● ● ●	75% to 51%
○ ○ ● ●	50% to 26%	○ ○ ○ ●	25% to 1%

Important Notice

1. Fully charge the PowerSlim before its first use.
2. It is normal for the PowerSlim to be warm during the charging process.
3. Keep the PowerSlim clean and dry without using any chemical cleaners.
4. Do not let children handle the PowerSlim.
5. Do not puncture, disassemble, crush or dampen the PowerSlim.
6. Do not leave the PowerSlim in a high temperature environment for extended periods of time.
7. Do not input non-compliant voltage into the PowerSlim.
8. To extend the life of the battery, fully charge the PowerSlim once every four months and store in a cool, dry place.
9. Follow local and state regulations for recycling this device; and other laws governing its use.