


CUCKOO

ELECTRIC
MASSAGE CHAIR

USER MANUAL


CMS-E410CP

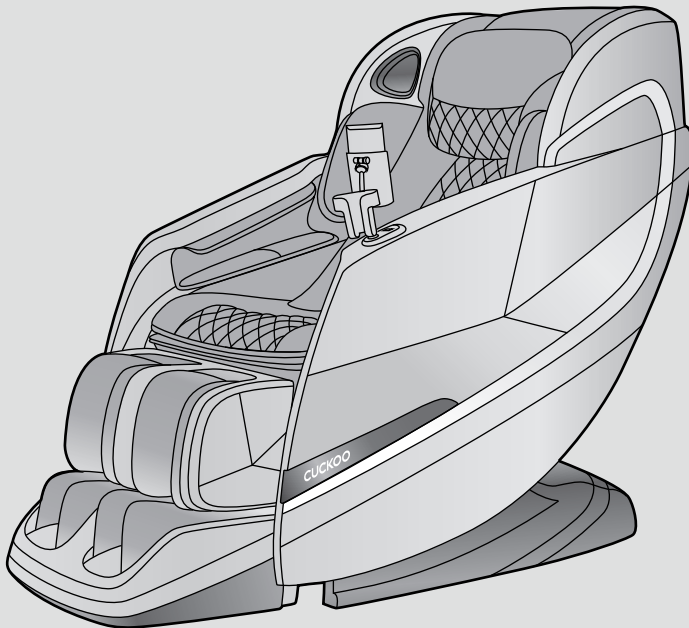

CUCKOO

DEAR USERS,

Thank you for choosing our Cuckoo Massage Chair. Please keep this instruction manual (including the warranty) in a safe place. It will be of great help when you have questions during use or when certain features do not work.

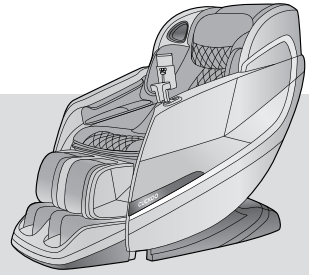

Benefits of Cuckoo Massage Chair

- With its delicate 4D massage module and ergonomic SL frame, it massages you everywhere.
- Its 12 different automatic massage modes efficiently relieve tension and fatigue.
- With the weightless feature, you can be massaged in a comfortable position that doesn't strain your body.
- The sole rolling massage revitalizes tired feet.
- The calf scrub massage provides relief and massages tense calves.
- You can receive a warm massage by using the heating function.
- Enjoy a massage while listening to music via Bluetooth.
- The anti-jamming safety sensor allows you to use the massage chair safely.



Read the Instruction Manual

The product warranty is included in the instruction manual.

In order to use the product properly, it is important to read the instruction manual beforehand.

After reading the instructions, keep the manual in a place clearly visible to the product's users.

※ Caution: Be sure to read the instruction manual so the product can be used for a long time without problems.

CONTENTS

Before Usage	● Benefits of Cuckoo Massage Chair	2
	Safety Warnings	4~6
	Safety Precautions	7~8
	Safety Assistance System	9
	Product Structure and Part Names	10
	How to Install the Massage Chair	11
	How to Use the Massage Chair	12
	The Remote Control Buttons	13
	An Overview of the Remote Control Features	14
	Notification, Shoulder Recognition and Body Shape Analysis Features	15
	Anti-Jamming Safety Assistance System	16
During Usage	● An Overview of the Features and How to Use Them	17~29
	Cleaning and Storage	30
Before Reporting a Malfunction	● Items to Check Before Reporting a Malfunction	31
Service Guide	● Customer Card/Product Warranty and Customer Dispute Settlement Criteria	32
	Service Guide and Disposal Information	33
	Product Specification and Inquiries for Product Failure	34

Safety Warnings

- Heed the safety warnings to use the product safely and properly and prevent the occurrence of an accident or harmful situation.
- The safety warnings include warnings and cautions. The definitions for both are as follows.



Warning A potentially dangerous situation that may result in death or serious injury if not averted.



Caution A potentially dangerous situation that may result in minor injury if not averted.



This symbol is used to alert you to any situations that may be dangerous under certain circumstances.

Carefully read the instructions and follow them when using the product to prevent any danger from occurring.



This symbol is used to prohibit certain actions.



This symbol is used to instruct you to perform certain actions.




Warning




(Prohibited)

About the Power

The product voltage is AC 120V (for South Korea). It cannot be used with a transformer. Please use a grounded 120V outlet for the power plug. There is a risk of fire due to overheating of the outlet.

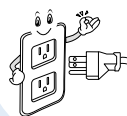


If the power cord or plug is damaged or if the outlet is loose, stop using the product and contact our customer service center.

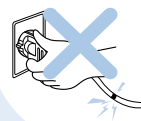

When using an extension cord, please use a grounded outlet.

- Using an ungrounded outlet may result in electric shock or injury.

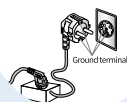

- If the power cord's sheath inadvertently becomes peeled or broken, this could result in fire or electric shock. Therefore, be sure to frequently check the power cord, plug, and outlet.
- If the power cord or plug becomes damaged, in order to prevent a dangerous situation from arising, contact the manufacturer, the store, or a qualified technician (service engineer) to get the entire cord replaced.
- This product must be repaired at a designated service center.
- This product does not have parts that customers can assemble themselves, and disassembly is not allowed due to the risk of electric shock or injury.
- If the fuse is blown, please contact our customer service center for repairs.


Do not place heavy things on top of the power cord, and avoid having the product press down on the cord.

- It can cause a fire or an electric shock. Be sure to frequently check the condition of the power cord.



Do not forcibly bend, tie, or pull the power cord.

- This may result in a fire caused by an electric shock or a short circuit. Be sure to frequently check the condition of the power cord.

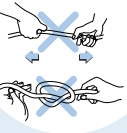

Use a dry cloth when cleaning the power plug to remove any unwanted debris.

- This can cause a fire. Be sure to frequently check the condition of the power plug.



Be careful not to attach metal or foreign objects, such as pins, to the power connector.

- This could lead to electric shock, damage, or fire.
- In particular, make sure infants, children, and pets do not play with it.




Be careful that both the power cord and plug are not chewed up by animals or punctured by sharp metal materials, such as a nail.



- Damage caused by impact may lead to the occurrence of a short circuit, electric shock, or fire.
- Be sure to frequently check the condition of the power cord and plug.

Installation Information

Do not use or store this product in places with high humidity, such as bathrooms.

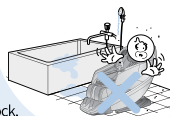

- This may cause a fire, an electric shock, malfunction, or the formation of mold. Additionally, do not spill water on the product, and do not use it when wet. (Please contact the customer service center.)

Safety Warnings



Installation Information

Do not use the product on top of heating appliances, such as electric or hot water mats, and do not use it near sources of open flames, such as stoves.



- This may result in a fire or product failure.

Install the product on a sturdy and flat surface.



- Doing otherwise could lead to product damage or safety accidents.

This product is not meant for outdoor use. Please use it indoors.

Using the Massage Chair

People who fall under the following conditions should refrain from using the massage chair.



- Those recognized as unable to use the product, as determined by doctors, such as those with thrombosis and embolism, severe varicose veins, and acute varicose veins.
- Those suspected of having acute cervical sprains.
- Those with abnormal symptoms, such as sprains or sudden muscle contractions and damage.
- Those in early pregnancy or those who have recently given birth to a child.
- Those who have a spine (vertebrae) abnormality due to an accident or disease in the past, or those with a curved spine.
- Those with osteomyelitis or at risk of having it or with severe osteoporosis.
- Those with acute intestinal diseases or severe heart failure.
- Those with severe seizure symptoms or psychosomatic diseases. (perception disorders)
- Those with a high degree of peripheral circulatory disorder due to diabetes, etc., and a loss of temperature sensation.
- Those being treated for severe acute venous tumors.
- Those with limited ability to express themselves or limited mobility.
- Those who have been deemed by a doctor or expert to be unable to use a massage chair for other reasons.

People who fall under the following conditions should use the product only after consulting with a doctor.

- Those who are concerned about side effects from using the product, such as pregnant women.
- Those whose body temperature is higher than 38 degrees Celsius due to acute inflammatory symptoms and chills.
- Those with acute skin diseases, malignant tumors, or any symptoms from skin diseases.
- Patients who are currently hospitalized or under the care of a doctor and require stability.
- Those who have other body abnormalities.
- Those who have had electronic chips or other objects implanted into their bodies.
- Patients with cardiovascular diseases or distal circulatory disorders and sensory impairment.
- Those with osteoporosis or previous fractures.
- Those who need absolutely quiet surroundings.
- Those who have back pain.
- Those with weakened muscles due to old age.

Infants, children, and pets

Infants, children, and pets should be kept under the supervision and guidance of a guardian so that they do not play or climb on top of the massage chair.



Do not let infants, children, or pets get under the massage chair, in the rear part, or in the leg control area.



- Otherwise, accidents or injuries may occur.

Please only use the reclining mode after confirming that there are no people, pets, or objects in the rear part or the front or bottom of the leg area.



- There is a risk of injury, product damage, or malfunction.

When lowering the legs, please confirm that there are no people, pets, or objects underneath before operating.



- There is a risk of injury, damage, or malfunction.
- There is a risk of short circuits and electric shock.

This device is not intended for use by infants, children, or pets. Exercise caution to keep them from playing with the product.



The elderly and vulnerable

People who fall under the following conditions should refrain from using the massage chair.



- Those with abnormal symptoms such as sprains or sudden muscle contractions and damage
- Those in early pregnancy or those who have recently given birth to a child.

Safety Warnings



Warning



(Prohibited)

The elderly and vulnerable

People who fall under the following conditions should use the massage chair only after consulting with a doctor.



- Patients who are currently hospitalized or under the care of a doctor and require stability.
- Those who are going through long-term hospital treatments or are still recovering.

For the elderly, symptoms such as muscle damage or rupture may occur, so be careful when using the product.



Elderly people should use the product under the supervision and guidance of a guardian.



Cautions During Use

Please do not use the product for anything other than its intended purpose (massages).



- It can cause product failure or accidents.

Check the position of the massage ball before using it, and sit down slowly.



- There may be a risk of an accident or injury occurring while using it.

This product has a heating function. Those who are insensitive to temperature changes, those with reduced mobility, infants, and children should all exercise caution. Furthermore, there is a risk of burns when using the heating function for long periods of time.



Cautions Before Use

Never use it without the back cover. This may result in injury or product damage.



While the product is in use, never put your head, hands, or feet between the chair legs, under the chair, or in the leg area.



- This may result in injury or product failure.

Do not use the massage chair while wet or without clothing, or when you're carrying sharp or hard objects, such as accessories on your head.



- Skin damage and product damage may occur.

If the product is not working or has problems, remove the power plug and contact the customer service center.



Do not use the product with a blanket or pillow on top. This may lead to overheating, fire, injuries, or malfunction.



Safety Precautions



Warning



(Prohibited)

About the Power

After using the product, turn off the power switch and remove unused power plugs from the outlet.



- This may result in fire or product failure.

In the event of a power outage, immediately turn off the power switch and remove the plug from the outlet.

Installation Information

Do not knock over the massage chair or hit it.



- There is a risk of product failure or injury.

Do not use or drag the wheels on surfaces that are easily scratched, such as hardwood floors or rugs.




- There is a risk of damage to the floor surface.

Do not move the product while people or objects are on it.



- There is a risk of product failure, damage to the bottom part, or injury.

Since the floor may become damaged, placing a rug, etc., under the product is recommended.

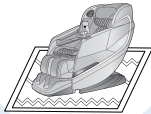

- This may damage the floor.

In the event that the leg rest and back rest are adjusted, leave space in the front and rear in advance.



- When adjusting the leg length, do not adjust the leg length with great force.


Using the Massage Chair

If any of the side effects listed below occur while using the product, stop use immediately.



- Abrasions, contusions, bruises, wounds (punctures), or cuts caused by the product.
- Damage to muscles, tendons, nerves, and the spine due to excessive use and pressure.
- Skin diseases, burns, etc.
- Fractures, dislocations, sprains, etc.
- Respiratory and digestive disorders, suffocation, etc.

The maximum usage time per use is 30 minutes. Do not exceed the daily maximum usage time of 60 minutes.

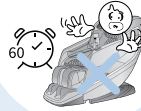

- This can cause safety accidents or injury.

This massage chair is meant for 1 person to use. It should not be used by 2 or more people at the same time.



- There is a risk of product failure or injury.

The recommended user weight for this product is 265lb or under. Please keep this in mind when using it.

265lb



- This can lead to safety accidents, injury, or malfunction.

This appliance is not intended to be used by a person with a physical, sensory, or mental disability or a person who lacks experience and knowledge and requires supervision or guidance to use the appliance safely (including children).



- Exercise caution to prevent children from playing with the product.
- This may lead to electric shock or injury.

The recommended safe use period of this massage chair is 5 years. If the recommended safe use period is exceeded, there may be a risk of fire or electric shock due to the aging of parts.

This product was designed for home use. The free customer service period is limited for commercial use and public facilities. This product is not intended for medical use in hospitals.

Safety Precautions



Warning



(Prohibited)

Cautions Before Use

Do not use it right after eating.

- Nausea and dizziness may occur.



Do not use after consuming alcohol.

- This may result in an accident or injury.



Do not climb on the back, shoulders, arm rests, or legs of the massage chair.

- There is a risk of injury and product failure.



When not using the product for a long time, be sure to unplug the power cord. If the product has not been used for a long time, check that it is operating normally before use.

- It may cause an electric shock or fire.



After installing the product, be sure to check that it operates normally, and use it properly after familiarizing yourself with the details of the instruction manual. Store the product warranty separately. (Customer service may be paid for the storage of the product warranty.)

Cautions Before Use

Do not fall asleep while using the product.

- There is a risk of injury.
- It can cause a fire or an electric shock.



Cautions During Use

While operating the product, do not use other treatment devices at the same time.

- Malfunctions may occur.



Do not remove the plug or turn off the power switch while the product is operating.

- There is a risk of injury and product failure.



Do not wipe or spray with benzene, alcohol, or thinner.

- It may result in an electric shock, fire, or discoloration.



When operating in the reclining mode, be careful not to get your head, hands, limbs, etc., caught between the back rest, seat, and arm rests.

- There is a risk of injury.



Before using the massage chair, remove all items from your pockets.

- There is a risk of accident or injury, and this may cause a malfunction.



Be careful to not let the remote control cord get caught around your legs.


- There is a risk of injury.



Safety Assistance System

Child Lock System

This function has been installed to prevent malfunction and misuse by infants/children.

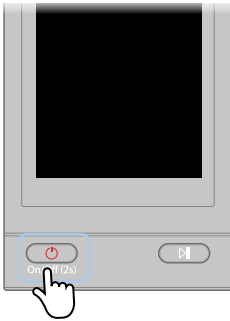


- 1 If you press the power button for more than 2 seconds, the lock will be unlocked and the massage chair will turn on.
- 2 When you are done using the massage chair, press again for 2 seconds or longer to turn it off.

Anti-Jamming Safety Assistance System

This system is an auxiliary function/measure to ensure safety around infants, children, pets, and other obstacles while operating or turning off the massage chair.



- ⚠ Make sure to check the surrounding environment (for infants, children, pets, other obstacles, etc.).
- ⚠ This system does not guarantee accident prevention.

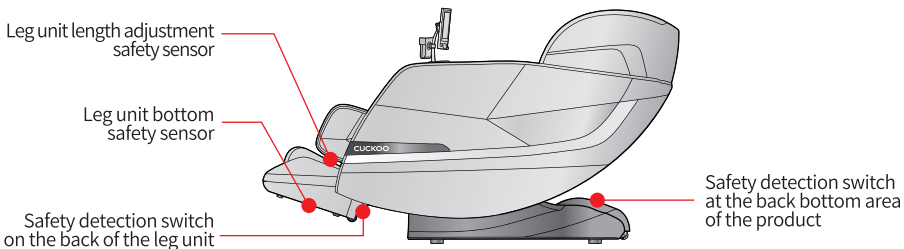

► Steps to take when the anti-jamming safety assistance system is activated

- 1 Check around the massage chair and safety sensor. If there are infants, children, pets, or other obstacles, move them away promptly.
- 2 After confirming that there is nothing around the massage chair, press the OK button on the obstacle detection indicator displayed on the remote control.
- 3 Restart the desired function.

Product Structure and Part Names

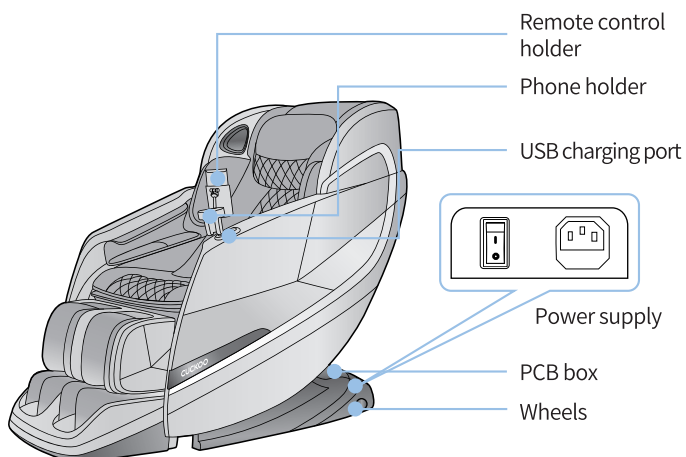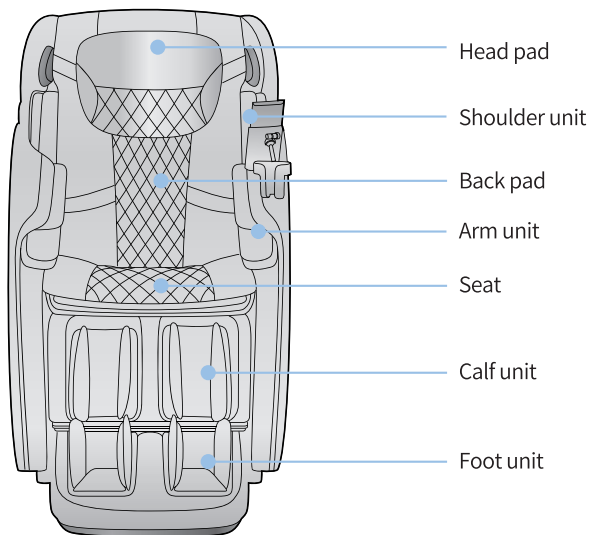


Accessories



Remote control (wired)



Instruction manual

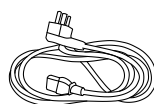

Power cord




Quick guide

How to Install and Move the Massage Chair



How to Install the Massage Chair

- 1 Check the space where you plan to install the massage chair.
- 2 Make sure the installation area is level.
- 3 When adjusting the back rest and legs, consider securing an extra space of 33 cm or more for the legs and 10 cm for the back rest.
- 4 Place mats on the floor to prevent damage to the floor.
- 5 Avoid installing it near places where it can be easily exposed to direct sunlight, as well as heating appliances.

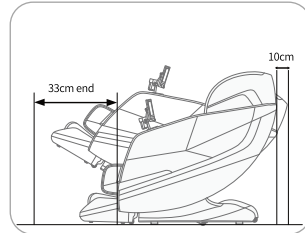

How to Move the Massage Chair


- 1 Press the back rest to open the front part (the leg area).
- 2 With the front part (leg area) in the air, move it by pushing it on the floor using the wheels. Never move the product while it's in contact with the floor. The floor will be damaged.
- 3 When moving the product, do so with 2 or more people.
- 4 The product is heavy, so please move it carefully.
※ During transportation, do not apply force to the leg unit or foot unit.

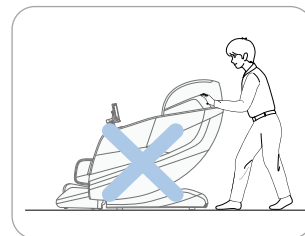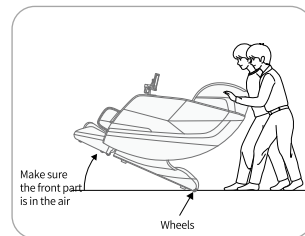


How to Use the Massage Chair

How to Use the Massage Chair


- 1 Check the surroundings of the product.
 - ▶ Make sure that there are no people, pets, or objects around the massage chair, such as the front (leg part) and back (back rest part) of the product.

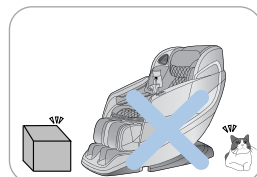


- 2 Check the product.
 - ▶ Check that there are no damaged parts on the surface of the massage chair other than the head pad. If any damage is found, do not use the product and proceed with customer service after turning off the power plug.

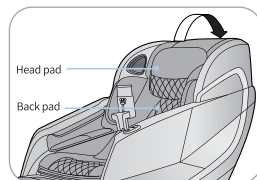


- 3 Check if the plug and remote control are damaged or if there are any unwanted debris.

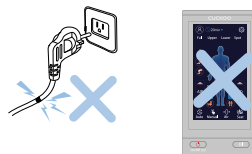


- 4 If no issues are found, insert the plug into the outlet and turn on the power switch on the product's body.

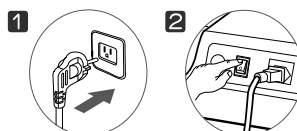

- 5 Before sitting down, check that the massage ball is in its default position on the backrest. Then, sit with your head and back pressed against the massage chair.

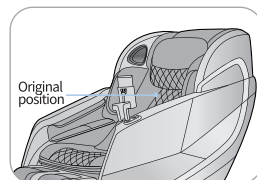

- 6 Press the red power button on the remote control for more than 2 seconds, read the message, and press OK. Select the function you want using the remote control.

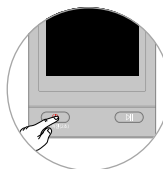


Warning!







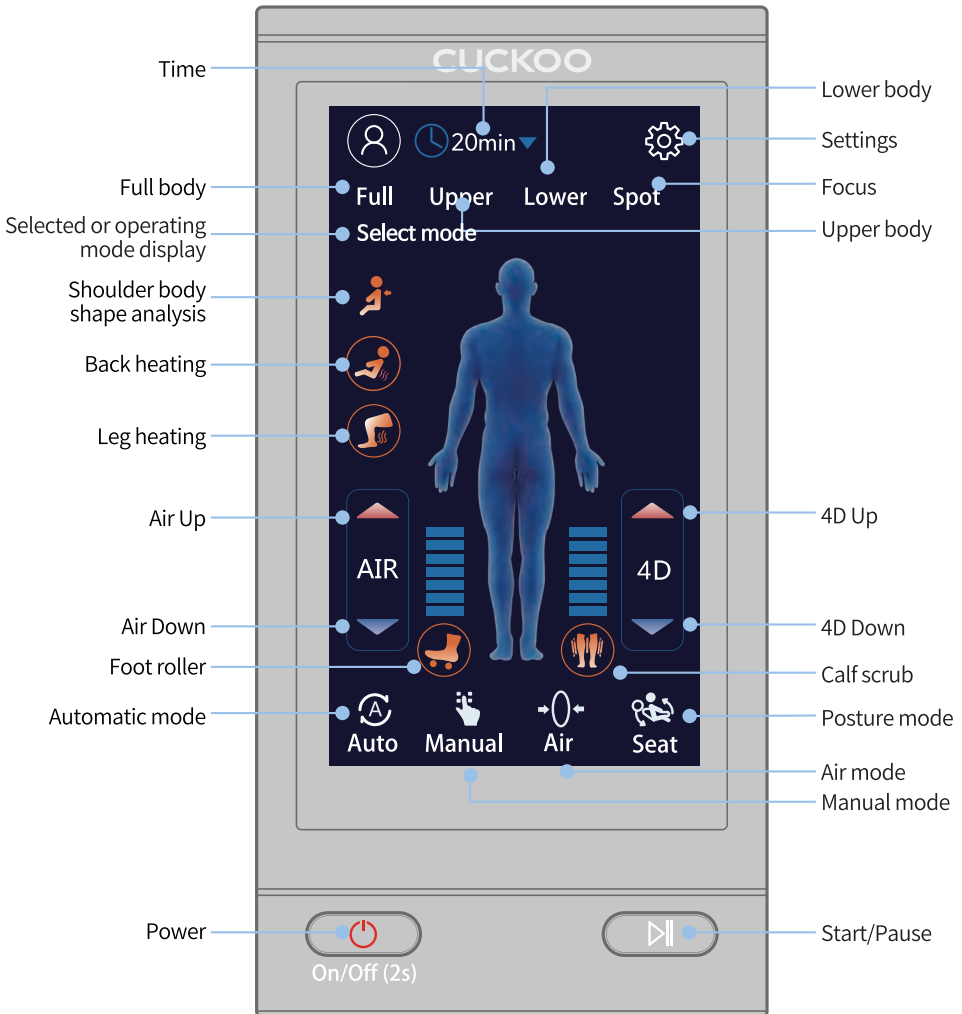













Before operating the product, check your surroundings to ensure the area is clear of children and pets. Press "OK" to continue.



The Remote Control Buttons



An Overview of the Remote Control Features

Category	Button	Description of Operation	Note
Power	 On/Off (2s)	Application of power for product operation (To turn the power on or off, it must be pressed for more than 2 seconds.) (Inputted) Product On/(When inputted again) Product Off	
Start/Pause		Pausing during operation (When the button is pressed) Product pause/(When pressed again) Product operation	Converts to the pause mode
Automatic		Enters automatic course	12 automatic programs
Manual		Enters manual course	10 manual programs
Air		Enters air course	7 air modes + 4 partial air modes
Posture		Executes reclining angles, such as Weightless	Weightless, etc. massage chair with adjustable reclining angle
Time		You can choose from operation times of 10, 20, or 30 minutes	Operation time can be changed during the massage
Settings		Enter the settings screen	Turning functions, such as language, Bluetooth, lamp, etc., on or off
Shoulder		Re-analyze shoulder body shape	When selected, the shoulder body shape analysis position can be detected
Back heating		On/Off control for the heating function	Circular outward motion during operation
Leg heating		On/Off control for the heating function	Circular outward motion during operation
Foot		On/Off control for operation of the foot roller	Circular outward motion during operation
Calf		On/Off control for the operation of the calves	Circular outward motion during operation
Full body		Full body massage from neck to buttocks	Basic settings
Upper body		Upper body massage from neck to back	Can be changed: Full body, lower body
Lower body		Lower body massage from waist to buttocks	Can be changed: Full body, upper body
Focus		Focus on selected areas and adjust the vertical position	Can be activated only in the Manual mode, and it is possible to manually set the massage ball up or down
Air Up		Intensity control direction button	Maximum 7 levels
Air Down		Intensity control direction button	Minimum 1 level
4D Up		Intensity control direction button	Maximum 7 levels
4D Down		Intensity control direction button	Minimum 1 level
OK		Initial screen switch button	A button that appears during shoulder detection/body shape recognition/ mode change, and automatically changes to the next step within 8 seconds without having to press it

Notification, Shoulder Recognition, and Body Shape Analysis Features





Notification

If you press the remote control's power button for more than 2 seconds, a message will appear. Before operating the massage chair, please check if there are infants, children, pets, or other obstacles around the massage chair.



Shoulder recognition and body shape analysis are possible

- 1 When entering the Automatic/Manual/Air mode, the shoulder recognition function is activated. Once the shoulder position is detected, press the OK button. If the shoulder position is not correct, adjust the position by pressing the arrows.
- 2 After shoulder recognition is completed, the body shape analysis function will be activated. The body shape analysis feature is a function that analyzes your body shape, from the buttocks to the back, a total of 8 times.
 - ※ If your body shape cannot be analyzed, an error message will be shown. Sit with good posture and press the OK button to start the body shape analysis again.
 - ※ If the body shape analysis does not start for about 20 minutes, the power is automatically turned off.

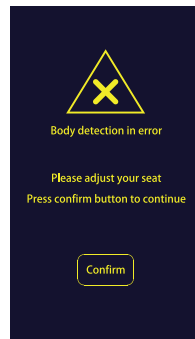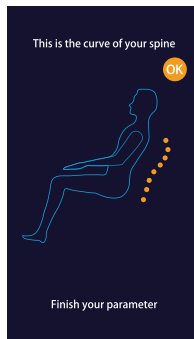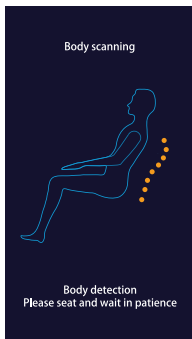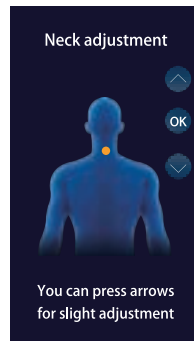

Body shape recognition complete

Body shape recognition failed


Anti-Jamming Safety Assistance System

Anti-Jamming Safety Assistance System

This system is an auxiliary function/measure to ensure safety around infants, children, pets, and other obstacles while operating or turning off the massage chair.

When the anti-jamming safety assistance system is activated, a caution message will be displayed on the remote control. Make sure to check the surrounding environment (for infants, children, pets, other obstacles, etc.) and press the OK button.

- ⚠ This safety assistance system does not guarantee accident prevention.
- ⚠ Before using the massage chair, be sure to pay special attention to the surroundings before operating.

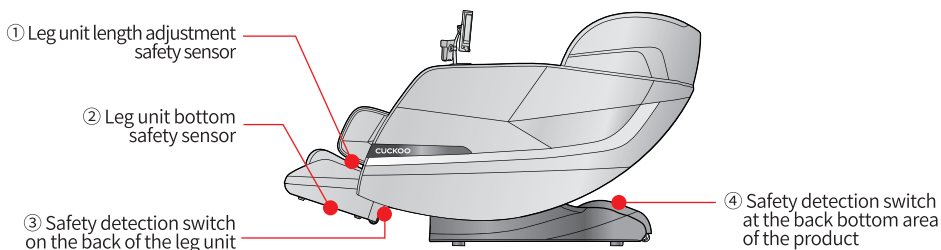

► Operation of the anti-jamming safety assistance system

Safety device	Details
① Leg unit length adjustment safety sensor	In the process of shortening the space between the foot and the calf, if an obstacle is detected, a warning message will be displayed and the foot part will be extended to the maximum length.
② Leg unit bottom safety sensor	If an obstacle is detected while the leg unit is coming down, a warning message will be displayed and the leg unit will move up as much as possible.
③ Safety detection switch on the back of the leg unit	If an obstacle is detected while the leg unit is coming down, a warning message will be displayed and the leg unit will move up as much as possible.
④ Safety detection switch at the back bottom part of the product	If an obstacle is detected while the product is reclining, a warning message will be displayed and the product will move up as much as possible.

► Steps to take when the anti-jamming safety assistance system is activated

- 1 Check around the massage chair and safety sensor. If there are infants, children, pets, or other obstacles, move or remove them promptly.
- 2 After confirming that there is nothing around the massage chair, press the OK button on the obstacle detection indicator displayed on the remote control.
- 3 Restart the desired function.



An Overview of the Features and How to Use Them

Automatic mode	Release tiredness	A relaxation massage program for fatigue recovery
	Recover	A gentle massage program for morning energy
	Rest mode	A massage program that gently relaxes the full body
	Thai massage	A massage program that relaxes stiff muscles throughout the body
	Knead mode	A massage program that focuses on kneading movements
	Full body mode	A massage program that relaxes the entire body by thoroughly massaging stiff muscles throughout the body
	sport recovery	A massage program that helps to relax your stiffened body after exercise
	Neck/shoulder	A massage program for knotted neck and shoulders
	Sleep mode	A massage program that helps you sleep by enabling you to experience the right posture and comfort
	Back focus mode	A massage program that relaxes stiff muscles in the back
	Lady mode	A massage program that relaxes stiff muscles in the back/buttocks
	Man mode	A motion-oriented massage program that relieves fatigue in the entire lower body

Manual mode	Knead	A massage method that gently kneads
	Shoulder	A combination massage method focusing on the neck/shoulder
	4D knead	A combination massage method using 4D rising/falling and kneading motions
	Scapular	A combination massage method focusing on the shoulder blades
	Deep knead	A massage method that adjusts speeds to loosen tight muscles
	Waist	A combination massage method focusing on the lower back
	Tapping	A rhythmically beating massage that helps with relaxation
	4D rolling	A massage method that feels as if you are being massaged with hands, using 4D acupressure on the lower back
	Circular	A massage method that uses all manual massage methods
	Lower body	A combination massage method focusing on the lower body
Partial mode	Full body	A massage in which the massage ball goes back and forth throughout the body
	Upper body	A massage in which the massage ball goes back and forth from the neck to the back
	Lower body	A massage in which the massage ball goes back and forth from the lower back to the buttocks
	Spot	A massage that concentrates on the selected area and adjusts the position up and down


An Overview of the Features and How to Use Them

Air mode, partial air, and other

No.	Category	Mode	Summary	Note
1	Air mode	Recommend	Air compression massage recommended by the manufacturer	<ol style="list-style-type: none"> ① Turn the remote control on ② Select the Air mode ③ Select the full-body air you want ④ Adjust air position and strength
2		Morning mode	A stretching air compression massage to wake you up in the morning	
3		Full body rest	A gentle air compression massage for muscle relaxation	
4		Lunch mode	A relaxing air compression massage perfect for a nap	
5		Blood circulation	A powerful air compression massage for blood circulation	
6		Sleep mode	A relaxing air compression massage for deep sleep	
7		Stretching	An additional function to stretch along with an air compression massage	
8	Partial Air	Shoulder	Shoulder air compression massage	<ol style="list-style-type: none"> ① Turn the remote control on ② Select the Air mode ③ Select the Partial Air option you want ④ Adjust air position and strength
9		Waist	Lower back air compression massage	
10		Arms	Hand/arm air compression massage	
11		Calf/feet	Calf/foot air compression massage	
Parts where inputting is possible during operation		Power/Pause		(Power) Power Off/ (Pause) Motion Pause, Pause remaining time
		Posture, time, Settings, Leg, Foot, calf, full body, upper body, lower body, upper/lower air, shoulder recognition		Corresponding options are available Touch-enabled
Mode switching during operation		Automatic mode/Manual mode/Air mode		<p>Operation time resets when switching to the Automatic mode (20 minutes reset)</p> <p>※ The operating time resets when switching to the Automatic mode from the Automatic mode, Manual mode, or Air mode</p> <p>However, the operation time is not reset when switching to the Manual mode or Air mode</p>
Parts where input is not possible during operation		Focus		

An Overview of the Features and How to Use Them


Automatic mode (12 modes)

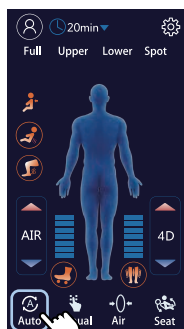

Display – Automatic (Menu)



Confirm after selecting a mode

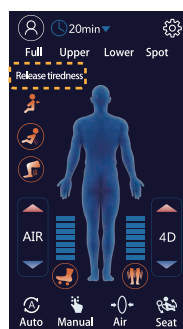

Displays the selected or operating mode


1. If you press the power button for more than 2 seconds, a notification will appear. Check the message and tap OK to display the Standby mode screen.
 2. If you press the Automatic Mode button on the remote control, you can see the 12 automatic modes on the display window of the remote control.
(Please refer to the table for the description of functions of the Automatic mode.)
 3. You can select a desired mode using the direction buttons and the OK button to start using it.
 4. Change the time to 10, 20, or 30 minutes by pressing the Time button.
 5. While a mode is in operation, you can switch to another mode or a different massage mode by touching the desired mode for activation. (Please refer to the instructions for each mode.)
- ※ Upon initial power-up and mode entry, the system detects shoulder position and performs body shape analysis.
 - ※ During the body shape analysis, please do not press other buttons.
 - ※ If the shoulder position is incorrect, it can be adjusted up and down when detecting the shoulder.
 - ※ When using the Automatic mode, the Air mode can also be operated depending on the massage mode. Please refer to the additional modes below.

[Basic setting when using the Automatic mode]

No.	Mode	Air mode	Time	Angle	Massage speed	Intensity - Air	Intensity - 4D	Massage interval	Heat	Foot roller	Calf
1	Release tiredness	Recommendation	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
2	Recover	Full body rest	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
3	Rest mode	Morning mode	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
4	Thai massage	Lunch break	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
5	Knead mode	Blood circulation	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
6	Full body mode	Stretching	20 minutes	Weightless angle	Automatic	Level 3	Level 4	Automatic	X	X	X
7	sport recovery	Stretching/Blood circulation	20 minutes	Weightless angle	Automatic	Level 3	Level 4	Automatic	Back/Legs	O	O
8	Neck/shoulder	Morning mode	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
9	Sleep mode	Lunch break	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
10	Back focus mode	Sleep mode	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
11	Lady mode	Recommendation	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
12	Man mode	Full body rest	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O

An Overview of the Features and How to Use Them

Manual mode (10 modes)

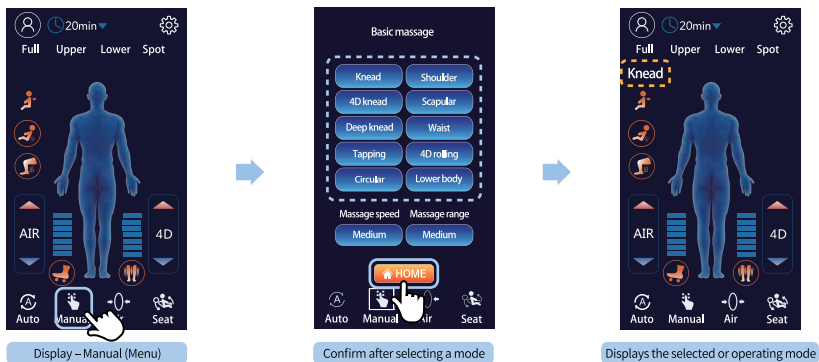

1. If you press the power button for more than 2 seconds, a notification will appear. Check the message and tap OK to display the Standby mode screen.
2. When you press the Manual Mode button on the remote control, the display window will show 10 manual modes, categorized massages by body part, and focused massages. (Please refer to the table below for descriptions of the functions of the Manual mode.)
3. You can select a desired mode using the direction buttons and the OK button to start using it.
4. Change the time to 10, 20, or 30 minutes by pressing the Time button.
5. While a mode is in operation, you can switch to another mode or a different massage mode by touching the desired mode for activation. (Please refer to the instructions for each mode.)


- ※ Upon initial power-up and mode entry, the system detects shoulder position and performs body shape analysis.
- ※ During the body shape analysis, please do not press other buttons.
- ※ If the shoulder position is incorrect, it can be adjusted up and down when detecting the shoulder.

[Basic setting when using the Manual mode]


No.	Mode	Time	Angle	Massage speed	Intensity - Air	Intensity - 4D	Massage interval	Heat	Foot roller	Calf
1	Knead	20 minutes	Normal angle	Medium	Level 3	Level 4	Automatic	X	O	O
2	Shoulder	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
3	4D knead	20 minutes	Normal angle	Medium	Level 3	Level 4	Automatic	X	O	O
4	Scapular	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
5	Deep knead	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
6	Waist	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
7	Tapping	20 minutes	Normal angle	Medium	Level 3	Level 4	Medium	X	O	O
8	4D rolling	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O
9	Circular	20 minutes	Normal angle	Medium	Level 3	Level 4	Automatic	X	O	O
10	Lower body	20 minutes	Normal angle	Automatic	Level 3	Level 4	Automatic	X	O	O

An Overview of the Features and How to Use Them


Air mode

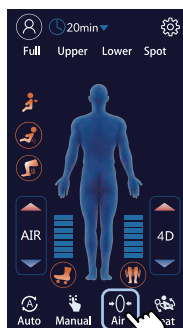

Display – Automatic (Menu)

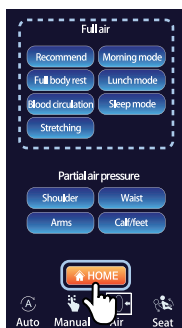

Confirm after selecting a mode

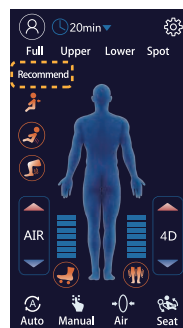

Displays the selected or operating mode

1. If you press the power button for more than 2 seconds, a notification will appear. Check the message and tap OK to display the Standby mode screen.
2. If you press the Air button on the remote control, you can choose from 11 Air modes. (Please refer to the table for the description of functions of the Air mode.)
3. You can select a desired mode using the direction buttons and the OK button to start using it.
4. Change the time to 10, 20, or 30 minutes by pressing the Time button.
5. While a mode is in operation, you can switch to another mode or a different massage mode by touching the desired mode for activation. (Please refer to the instructions for each mode.)


- ※ Upon initial power-up and mode entry, the system detects shoulder position and performs body shape analysis.
- ※ During the body shape analysis, please do not press other buttons.
- ※ If the shoulder position is incorrect, it can be adjusted up and down when detecting the shoulder.

[Basic setting when using the Air mode]


No.	Mode	Time	Angle	Massage speed	Intensity - Air	Intensity - 4D	Massage interval	Heat	Foot roller	Calf
1	Recommend	20 minutes	Normal angle	X	Level 3	X	X	X	O	X
2	Morning mode	20 minutes	Normal angle	X	Level 3	X	X	X	O	X
3	Full body rest	20 minutes	Normal angle	X	Level 3	X	X	X	O	X
4	Lunch mode	20 minutes	Normal angle	X	Level 3	X	X	X	O	X
5	Blood circulation	20 minutes	Normal angle	X	Level 3	X	X	X	O	X
6	Sleep mode	20 minutes	Normal angle	X	Level 3	X	X	X	O	X
7	Stretching	20 minutes	Weightless angle	X	Level 3	X	X	X	X	X
8	Shoulder	20 minutes	Normal angle	X	Level 3	X	X	X	O	X
9	Waist	20 minutes	Normal angle	X	Level 3	X	X	X	O	X
10	Arms	20 minutes	Normal angle	X	Level 3	X	X	X	O	X
11	Calf/feet	20 minutes	Normal angle	X	Level 3	X	X	X	O	X

An Overview of the Features and How to Use Them


Posture mode (reclining operation method)

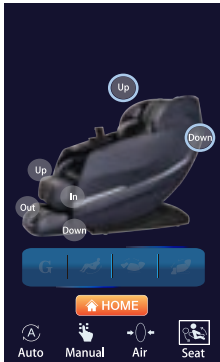

The angle of the product's backrest can be adjusted up and down. When the angle of the backrest is lowered, the leg unit rises, adjusting the angle accordingly.

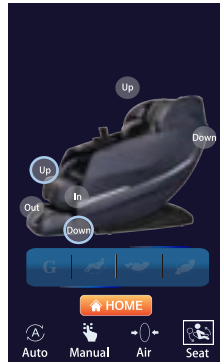

The angle of the leg unit angle can be adjusted up and down.

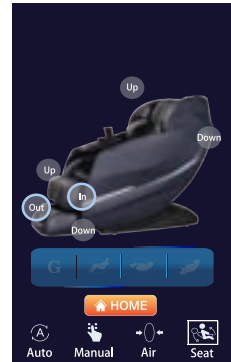

You can adjust the foot length.


- ※ It operates when you touch and hold the button.
- ※ When the massage mode function begins after reclining (the rising or falling of the backrest) has been selected, the massage chair reverts back to and operates at the default angle.
- ※ For foot-calf length adjustment, the switch recognizes your heels and automatically adjusts the length (up to 180 mm).

Warning

When reclining a massage chair, make sure to first check that there are no infants, children, pets, or other obstacles around or near the massage chair before operating it.

An Overview of the Features and How to Use Them

Posture mode (Weightless, Cradle, Backrest Adjustment)

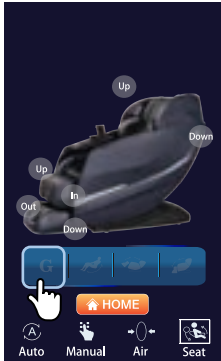

Weightless mode

If you tap the Weightless button, the functions are applied in this order: Level 1, Level 2, Level 1, Standby.




Disable Weightless: “G” gray, standby status




Activate Weightless Level 1: “G” yellow, first Weightless level




Activate Weightless Level 2: “G” red, maximum Weightless level

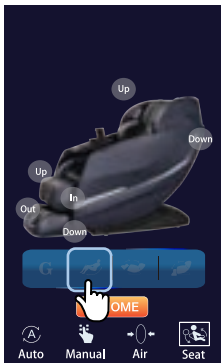

Cradle mode

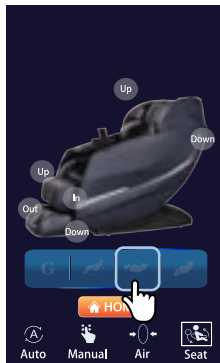

The entire massage chair reclines backward as much as possible.

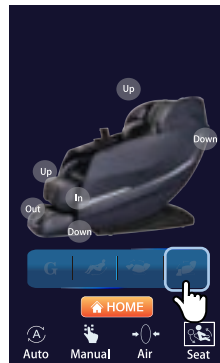


The entire massage chair rises to the default angle.

- ▶ **Cradle mode:** This is a mode that goes back and forth while the massage chair is in a Weightless state. When the yellow light is on, the Cradle mode has been set.
- ▶ **Backrest recline:** The entire massage chair reclines backward as much as possible.
- ▶ **Backrest rise:** The entire massage chair rises to the standby angle.

An Overview of the Features and How to Use Them

Select message area


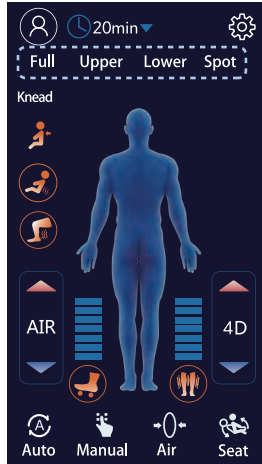


This is a function that massages by moving the massage balls on the area that you want to focus on.

No.	Mode	Summary	Note
1	Full body	Full body massage from neck to buttocks	Basic settings
2	Upper body	Upper body massage from neck to back	Full body, lower body change function
3	Lower body	Lower body massage from waist to buttocks	Full body, upper body change function
4	Spot	Focus on selected areas and adjust vertical position	Manually set the massage ball up or down, only in the Manual mode


Shoulder adjustment function

When you click the shoulder adjustment function button, the shoulder position adjustment display is shown. Use the arrows to adjust to your shoulders' height, then press the OK button.

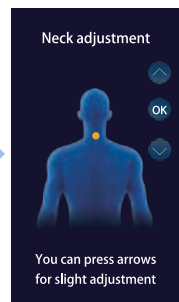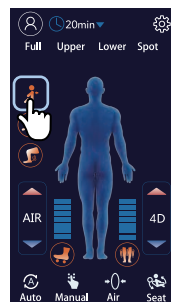

An Overview of the Features and How to Use Them


Heat

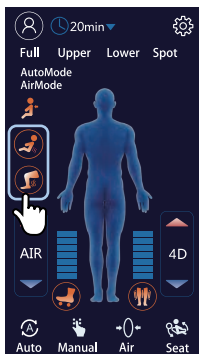

1. When you tap the Heat button on the remote control, a red circle appears on the display window. (Please refer to the table below for a description of the heating display.)
2. If you want to turn the heating on or off for the desired area, touch the Heat button again.
3. The selected mode operates for the default time of 20 minutes.

No.	Heating part	An Overview of the Features
1	Back/lower back	Heat is generated in the back/lower back area (left and right of the lower back area).
2	Calf/foot	Heat is generated in the calf/foot area (left and right of the feet and the left and right of the calves).

Foot roller/Calf scrub

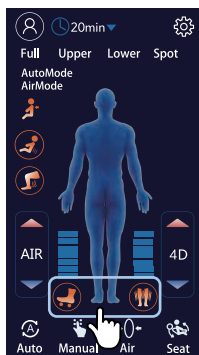


1. When you touch the Foot rolling/Calf scrub button on the remote control, a red circle appears on the display window.
2. If you want to stop the foot rolling/calf scrub while it is operating, press the Foot rolling/Calf scrub button once more and the red circle will disappear from the display window.
3. The selected mode operates for the default time of 20 minutes.

No.	Heating part	An Overview of the Features
1	Foot soles	Get a rolling massage that operates on the soles of your feet.
2	Calf scrub	As the calf scrub operates, it massages the calves in a left-and-right motion.

No.	Mode	Operation is possible	An Overview of the Features
1	Automatic mode	O	The foot roller function is automatically set in the Automatic mode (excluding the Full body mode), Manual mode, and Air mode. ※ The foot roller and calf scrub functions cannot be chosen when the Automatic mode for the full body is operating.
2	Manual mode	O	
3	Air mode	O	

An Overview of the Features and How to Use Them

Massage speed

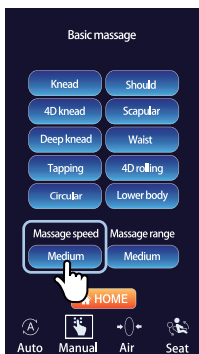


1. When using the massage chair, adjust the massage speed by tapping the Manual mode, then Massage speed on the remote control.

No.	An Overview of the Features
1	To adjust the massage speed in the Manual mode, press the massage speed button. Adjust the massage speed intensity to fast, medium, or slow. (Medium is the basic level)

No.	Mode	Operation is possible	Operation is not possible
1	Automatic mode	-	O
2	Manual mode	Kneading massage/4D kneading massage/ Beating massage/Wave massage	Neck and shoulder massage/Shoulder blade massage/Combination kneading massage/ Lower back massage/4D acupuncture/ Lower body massage
3	Air mode	-	O

Massage range

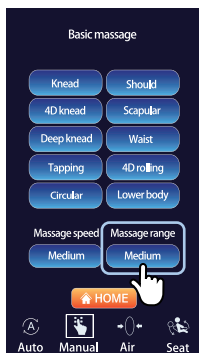


1. When using the massage chair, adjust the massage intervals by tapping the Manual mode, then Massage intervals on the remote control.

No.	Mode	Operation is possible	Operation is not possible
1	Automatic mode	-	O
2	Manual mode	Beating massage	Kneading massage/Neck and shoulder massage/ 4D kneading massage/Shoulder blade massage/ Combination kneading massage/Lower back massage/4D acupuncture/Wave massage/ Lower body massage
3	Air mode	-	O

An Overview of the Features and How to Use Them

Air intensity

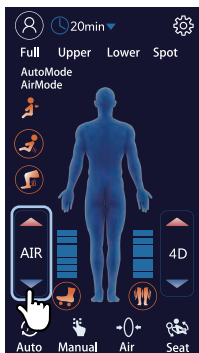


1. When using the massage chair, press the Air intensity button on the remote control to adjust the intensity.
2. When the button is pressed by modes, the air intensity can be adjusted. (Please refer to the table below for the air intensity control function.)

No.	An Overview of the Features
1	Press the air intensity button when you want to adjust the air intensity in the Automatic mode/Manual mode/Air mode. Possible to change air intensity strength from levels 1 to 7 The basic level is different for each mode.

No.	Mode	Operation is possible	Operation is not possible
1	Automatic mode	O	-
2	Manual mode	O	-
3	Air mode	O	-

4D intensity

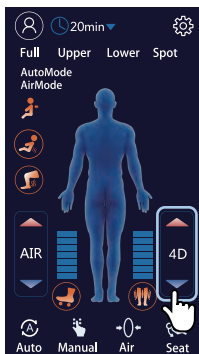


1. When using the massage chair, press the 4D intensity button on the remote control to adjust the intensity.
2. For each mode, the 4D intensity can be adjusted. (Please refer to the table below for the 4D intensity control function.)

No.	An Overview of the Features
1	Press the 4D intensity button when you want to adjust the 4D intensity in the Automatic/Manual mode. You can adjust the 4D intensity strength from levels 1 to 7. The basic level is different for each mode. ※ Adjustment is not possible in the Air mode.

An Overview of the Features and How to Use Them

Pause

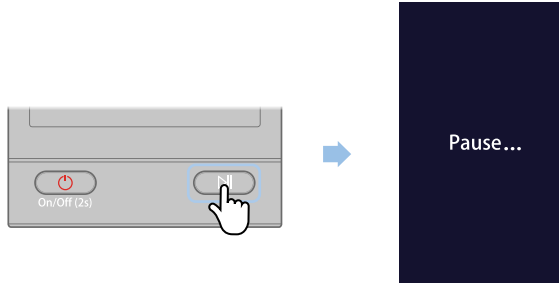

1. When the massage chair is operating, press the Pause button to pause the massage chair.
2. If you press the Pause button again, the massage chair will start to operate again.
3. When the pause function is executed, all functions will be disabled.

No.	During the massage	An Overview of the Features
1	Automatic mode	When the pause button is pressed in the Automatic mode, Manual mode, or Air mode, the product temporarily pauses.
2	Manual mode	
3	Air mode	

An Overview of the Features and How to Use Them

Settings mode



※ On the standby screen, tap the Settings button in the upper right.

No.	During the massage	An Overview of the Features
1	Language	You can set the remote control language to Korean, English, Chinese, or Japanese.
2	Bluetooth	You can turn the Bluetooth function on and off. - When playing music through a connected mobile phone or audio device, the selected music plays on the left and right speakers. - If the main power is on, playing music is possible even when the remote control is turned off.
3	Auto foot lift up	Turn on/off the function that automatically defaults to the recline when the power is turned on.
4	Auto storage	When the massage mode is completed, the function to automatically restore the default massage chair angle can be turned off and on. - You can only turn on/off the automatic shutdown function when the automatic leg raise function is turned off.
5	Screen luminance	Adjust the brightness of the remote control in 3 levels.
6	Lamplight	Turn the logo lamp on the side of the product on and off.

How to Connect Bluetooth


1. Go to the massage chair setting function and press the Bluetooth icon to turn on Bluetooth.
2. Turn on Bluetooth on your phone or audio device.
3. Find “CMS-E410CP” in the Bluetooth-enabled devices and connect to it.

※ Play music while connected via Bluetooth.

Cleaning and Storage

1 General Cleaning

Wipe it with a clean and soft cloth.

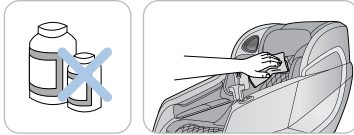

1 If the product gets soiled, gently clean the affected area with a 3-5% neutral detergent.

※ Alcohol, benzene, gas, and acetone must not be used.



2 Remove contaminants using a mild detergent and a brush.

※ Excessive brushing can damage the fabric.



3 Rinse the cloth with water and wipe again.



4 Let it dry.

⚠ Warning

- Do not store the product in a place exposed to direct sunlight for a long time or a place with high temperatures, such as near stoves.
- This may result in discoloration and deterioration.
- After wiping off any stains or dust, store it in a dry place. When not using the product for a long time, place a cover over it to prevent dust from accumulating.

⚠ Warning

- As the tightening may result in injury, do not allow any part of your body to get caught between the massage balls. Do not insert fingers and feet into the gap between the backrest and the seat and the sides of the armrests, or between the leg massager and the footrest. Also, do not insert any part of your body, including the fingers, into the gaps of the legs.

※ The parts in the image shown above may differ from the actual parts.

- **Remote control** – Wipe it with a dry towel. Do not wipe it with a wet towel.
- **Back pads and other covers** – If these are heavily soiled, wipe them first with a towel soaked in a 3-5% neutral detergent, then wipe them with a dry towel and let them air-dry.

⚠ Warning

- Before cleaning, make sure to remove the plug and do not touch it with wet hands.

Check before asking for support

▼ If the product is not used properly according to the manual, this may result in it not working, even if it isn't a malfunction. If you experience any malfunction, check your product as described below. If the problem persists, please contact the customer service center (1588-8899).

Issues	Causes	Solutions
Power defect	<ul style="list-style-type: none"> When the power button is not pressed on the remote control Contact failure of the power cord and socket Fuse blown Defective electronic circuit Defective power cord 	<ul style="list-style-type: none"> Press the power button on the remote control. Plug it into the power cord and socket correctly. Please contact the customer service center.
The difference in the heights of the left and right massage balls	<ul style="list-style-type: none"> Due to their structure, a difference of about 2cm between the left and right massage balls may occur. 	<ul style="list-style-type: none"> This is normal, as the product is designed to have a structure with alternating taps.
Abnormal sounds during operation	<ul style="list-style-type: none"> There may be mechanical sounds coming from the product. Examples of these include a rattling sound when the massage ball moves up and down, the sound of the gear motor during the massage, the sound of the massage ball adjusting its speed, the sound of the motor rotating, the sound of the massage ball automatically adjusting, the air pump operation sound, and the air exhaust sound when the airbag is in operation, etc. 	<ul style="list-style-type: none"> These kinds of mechanical sounds are not malfunction.
If abnormal sounds get louder during operation	<ul style="list-style-type: none"> If used for a long time If used for a very long time 	<ul style="list-style-type: none"> Turn off the power and restart the product after 30 minutes. Please contact the customer service center.
In the case of a sudden stop during operation	<ul style="list-style-type: none"> Power Off Operation time completed 	<ul style="list-style-type: none"> Please reattach the power supply. If it does not work, please contact the customer service center. Turn off the power and restart the product after 30 minutes.
When the back angle motor and leg angle motor does not move	<ul style="list-style-type: none"> Check for any obstacles Malfunction due to excessive use Malfunction due to excessive impact 	<ul style="list-style-type: none"> After removing any obstacles, turn on the power. Turn off the power and restart the product after 30 minutes. If it does not operate, please contact the customer service center.
If the original position cannot be restored	<ul style="list-style-type: none"> Recovery defect due to excessive use 	<ul style="list-style-type: none"> Please contact the customer service center.
Remote control overheating	<ul style="list-style-type: none"> Malfunctions due to long periods of use 	<ul style="list-style-type: none"> Please contact the customer service center.
Overheating of the power cord and the remote control wire	<ul style="list-style-type: none"> Excessive load and abnormal causes 	<ul style="list-style-type: none"> Please contact the customer service center.
Airbag operation defects	<ul style="list-style-type: none"> Disconnection of the air connection hose Air-related power failure 	<ul style="list-style-type: none"> Please reconnect the connecting hose. (If this happens frequently, please contact the customer service center.) Please contact the customer service center.
Error 1-8 message	<ul style="list-style-type: none"> Check for any obstacles Motor defects Remote control defects 	<ul style="list-style-type: none"> If the Error 1-8 message appears, turn off the power switch and then turn it back on. If it continues to occur even after turning the power switch on and off repeatedly, please contact the customer service center (1588-8899).

Customer Card

Product name : Electric massage chair
 Model name :
 Date of sale : Year Month Date
 Customer name : Phone : Address :
 Store name : Phone : Address :



Anniversary information and product inventory status

Date of birth	Gregorian/Lunar		Wedding anniversary	Gregorian/Lunar		
	Electronic rice cooker	Electric pressure rice cooker	Juicer/blender	Dish dryer	Electric thermo pot	Vacuum cleaner
Period of use	Year	Year	Year	Year	Year	Year
Manufactured						

Remarks

※ Details provided above are used to improve customer service.

1. Make sure to fill in the details above when selling the product and give them to the customer.
2. The store should keep the customer card for customer service purposes.

Product Warranty

Product name : Electric massage chair Model name :
 Date of purchase : Year Month Date
 Customer name : Phone : Address :
 Store name : Phone : Address :

1. The product warranty includes benefits based on the details listed on the warranty card.
2. The warranty period begins from the date of purchase, so please have the seller list the date of purchase.
(If the date of purchase cannot be confirmed, the warranty period will begin six months after the manufacturing date.)
3. The warranty period will be reduced by half (6 months) if products for household use are used for business purposes (business activities, non-typical environments for their use, etc.) or if the product is a commercial product.
4. This warranty card will not be reissued.
5. Parts retention period: 6 years

CUCKOO
Cuckoo HomeSys Co., Ltd.



※ When requesting repairs, you must present this warranty card with the date of purchase on it in order to receive adequate service, so please store it wisely.

Customer Dispute Settlement Criteria

Types of consumer damage		Compensation details	
		Within warranty period	After warranty period
The performance or functional failure that occurs naturally over the course of normal usage (within the warranty period)	When a major repair is requested within 10 days of purchase	Product exchange or refund	
	When repair for a major part is requested within a month of purchase	Product exchange or free repair	
	When major repair for an exchanged product is requested within a month of exchange	Refund	
	When a defect occurs	Free repair	
	Recurring product failure despite repairs being performed for the same defect (the third time)	Product exchange or refund	
The performance or functional failure due to the intention or negligence of the consumer	The product failing for the fifth time despite receiving repairs four times across various parts	Product exchange or refund	Refund with an additional 30% of the depreciation amount (based on age)
	If the repair parts are not in stock and the repair is not possible	If the manufacturer has misplaced the product requested for repair by the consumer	
	Damages incurred during the shipping process or installation after purchase	Product exchange	
	If a repair is possible	A paid repair	A paid repair
<ul style="list-style-type: none"> ■ In the event of malfunction due to natural disasters (such as fire, sea damage, gas, earthquakes, wind and flood damage, etc.) ■ In the event of replacing consumable parts that wear out normally during use ■ In the event of failure due to abnormal power supply or defective connection equipment ■ Other events due to external causes other than defects in the product itself ■ In the event of malfunction due to a repair or modification by a person other than a repair engineer at a Cuckoo dealership or service center 	If the repair parts are not in stock and the repair is not possible	Product exchange after receiving the amount equivalent to a paid repair	Product exchange after applying depreciation and receiving the amount equivalent to a paid repair
		A paid repair	A paid repair

• Matters not specified are subject to the Consumer Damage Compensation Regulations. • Customer Service Center: 1588-8899 without area code • The above compensation regulations are based on the Fair Trade Commission Notice No. 2009-L. • Device washing, adjustment, and instructions are not malfunctions

Regarding Services

• Rights of customers

Customers reserve the right to receive repair services for product failures during use free of charge for a year from the date of purchase.

However, product failures caused by customer negligence or natural disasters will be repaired for a fee even if the product is within the warranty period.

• Liabilities regarding services provided for a fee (cost covered by the customer)

Under the following instances, the service will be performed for a fee, even if the request was made during the warranty period.

1. If the product failure was caused by inserting foreign substances (water, beverages, coffee, toys, etc.) in the product
2. If the product damage or functional failures resulted from dropping the product or applying force to it.
3. If the product's exterior damage or deformity was caused by thinners, benzenes, or other organic solvents
4. If the product failure was caused by using parts or consumables not officially manufactured by Cuckoo
Use official Cuckoo parts by inquiring at our customer service center and purchasing them from designated service centers.
5. If the product failure was caused by using a power supply with the incorrect voltage
6. If the parts of the product were misplaced or damaged due to the customer disassembling the product without permission
7. If the product failure was caused by another person who is not an authorized repair service engineer from the Cuckoo customer service center making repairs or modifications to the product
8. If the product failure was caused by natural disasters (lightning, fire, storms, floods, gas, sea damage, earthquake, etc.)
9. If the product failure was caused by the customer's failure to observe the safety warnings in the Cuckoo product instruction manual (You can use the product for a long time if you heed these safety warnings.)
10. If the product failure was the result of another customer's negligence.

How to Dispose of Home Appliances

• This product is recycled through the following partnership between the government and our company to protect the environment.

1. Home appliance disposal incurred after purchasing new products can be requested at the store where you purchased the product (retrieval free of charge).



2. If you have home appliances to throw away, contact the nearest local community service center based on the garbage disposal system. (Fees may vary between regions, so contact the local community service center for details.)



Product Specifications

Product name	Electric massage chair	
Model name	CMS-E410CP	
Rated power consumption	200W	
Number of massage balls	4	
Operation time	20 minutes	
Rated voltage	120V~, 60Hz	
Weight	Around 107.7 kg	
Product size (difference of ± 10 mm)	When standing	1550(L) x 760(W) x 1220(H)mm
	When laid down	1932(L) x 760(W) x 1085(H)mm
Automatic mode	12 types	
Exterior material	Artificial leather (PU), ABS, etc.	

※ Details indicated in this instruction manual (exterior, design, and specifications) may change without notice for quality improvement.

※ The printed specifications of the product are subject to change.

Product Failure Inquiry

A product that has been used for a long time may fail due to deterioration of the parts caused by heat, humidity, dust, etc.

If such issues occur

- ❶ The appearance of issues not described in the Check Before Asking for Support (page 31).
- ❷ You can feel the electricity flowing when you touch the product.
- ❸ In the event of other abnormalities or failures.

Stop using the product

After removing the plug, be sure to contact our customer service center.

Service Inquiry **(888)700-0425**

※ Dialing (888)700-0425 will involve charges for local calls.

※ You can use our 1:1 chat service on our website to make submitting product failure inquiries and customer service requests more convenient.

Contract-Related Inquiries

If you have any such inquiries regarding contracts,

- ❶ Subscription (new installation), ❷ Change (installation location, contract information),
- ❸ If you have any questions about cancellation, please contact us at the number below.

Contract-Related Inquiries **(888)700-0425**

※ Dialing (888)700-0425 will involve charges for local calls.

※ You can use our 1:1 chat service on our website to make submitting product failure inquiries and customer service requests more convenient.

Memo

This product is intended for domestic use only.

CUCKOO

If there are any issues or inconveniences while using the product,
please contact our customer service center.

Service
Inquiry **(888)700-0425**

Please contact us if you have any inquiries regarding
contracts (registration, change, cancellation).

Contract-
Related
Inquiries **(888)700-0425**

www.cuckoorental.com

Please provide us with the product model name, product defect status, and contact information. We will provide friendly consultation and prompt service for your complaints, suggestions, and inquiries.

- After reading, keep the instruction manual in a place where it is clearly visible to you.
- The product warranty is included in the instruction manual.
- Caution: Be sure to read the instruction manual to use the product for a long time without problems.

Z0383-0243A0 Rev.0