





moonki[®]
S O U N D
AUDIO PROFESIONAL

User Manual MA-MT265B

Functional Brief Description	
MIC 1	Microphone Socket 1
MIC 2	Microphone Socket 2
AUX	External Audio Input Socket
OFF/ ON	Power Switch
DC 5V	Micro USB Charge Socket
-MIC VOL+	Microphone Volume Control up/Down
-VOLUME+	Volume Control up/Down
-ECHO+	Microphone Echo Control up/Down
MODE	Mode Switch
LIGHT	Light Mode
EQ	Sound Effect Mode, Bass/Treble
DEL/TWS	DELTE/Connect to TWS Mode, Switch off TWS Mode
▶	Play and pause
↺	Repeat/Bluetooth Device Remove
MIC PRI	Microphone Priority
◀◀	Last Song
▶▶	Next Song

MODE SWITCH ▼

Press "MODE" button to Switch "BT → LINE" mode. (Non human voice version warning tone)

Long Press "MODE" button, display show  /  means turn off / turn on the prompt voice. The first time booting will enter into Bluetooth mode by default, booting again will enter the mode before power off. (shutdown mode memory ,volume and channel search memory)

BLUETOOTH CONNECTING ▼



Press "MODE" button to switch Bluetooth mode  (No human voice warning tone) The Bluetooth signal light quick shining:

Mobile Phone or other device open the Bluetooth function ,searching: Model MA-MT265B, Click it and to connect.(the first time for connecting need to manual match) After connect successfully (Warning Tone: BT_CONNECT), the Bluetooth signal light long shining, then can play the music (Bluetooth signal light


slow shining when playing); Music pause, Bluetooth signal light long shining. If you want to connect a new device to disconnect the current connection, and then according to the above steps to search the connection.

- **Bluetooth Player** Under Bluetooth mode, press "▶| " can play/pause music, short press "▶▶ " for next song; short press "◀◀ " for last song; Press "▶| " for pause, press once again to replay, long press "▶▶ " and "◀◀ " useless.

- **Force Disconnect Bluetooth Device:** Under in Bluetooth mode, long press "🔄 ", can force disconnect the current Bluetooth device (Warning Tone: BT_DISCONNECT), the Bluetooth signal light will shining, at the meantime, other Bluetooth device can search the Model MA-MT265B

- **Warning Tone on/off:** Under in Bluetooth mode, long press "MODE" 5 second and the screen show  ~  it can off/on the warning tone for mode switch, digital button useless .

AUX MODE ▼

1. Insert the AUX cable, then press the button "MODE" to change it to AUX mode (Display  (Warning Tone: AUX_MODE); when take out the AUX cable, then press button "MODE", then change to other mode.

2. In AUX mode, short press "▶| " button is Mute (Display ), press once again "▶| " exit Mute.





3. Short press "MODE" button to switch next mode, other buttons doesn't work.

VOLUME CONTROL ▼

In playing state, press "-VOLUME+" to adjust volume up/down.

EQ CHOOSE ▼

1. Press "EQ" button to switch Treble and Bass, press "+/-" to adjust the volume , display (Treble)

H"  ~  ; (Bass) B  ~  , after completing adjustment, no operation after 2 seconds, it will automatically return to the volume status.

MICROPHONE INPUT ▼

In random mode, the microphone can insert into the device, the microphone volume and reverberation size can be adjusted by independent.

MIC PRI: microphone priority. When using the microphone, short press MIC PRI button to automatically turn down the music volume.

RGB LIGHT CONTROL ▼

In random mode, press "LIGHT" button once, the light is turned on, press again to switch the light flashing mode, long press "LIGHT" button to turn off the light.

TWS FUNCTION ▼

- 1.Prepare two speakers, enter both speaker into BT mode, but not connect BT connection with any devices; choose random one speaker as auxiliary speaker (right channel) , long press the auxiliary speaker "TWS" button into TWS mode, the screen display with show and light up rapidly with "TWS" , it starts to search the main device (left channel); the main speaker (left channel) no need to operate. When both speaker play "DI" warning tone, means the TWS devices connected successfully, both speaker display screen "TWS" word long bright.
- 2.The auxiliary speaker (right channel) screen display show "bt_L" , the main speaker (left channel) display show "bt" , then use your mobile or other devices to connect the BT with your device and speakers as Bluetooth connecting instruction on your devices.
- 3.Long press "TWS" button to disconnect the TWS mode.
- 4.Press the MODE button of speaker during the TWS mode, both speakers will disconnect the TWS mode and the current device will enter into BT mode, continue play the music , the other device will enter into searching BT mode.
- 5.TWS require the both speakers are under BT mode and do not connect to any devices, long press one speaker TWS button enter into TWS automatically searching and pairing mode.
- 6.When both speakers under TWS connected mode, operate each speaker ◀▶/▶▶/▶▶/EQ/ buttons can control both two speakers, when operate Light/VOLUME+ - only control the current speaker.

RECHARGE ▼

Please use the DC5V / 1A or 2A current safety standards charger or above to meet safety standards charger.

When the symbol "☑" is flashing, it needs to be charged immediately . Automatically shut down when the battery is below the protective voltage(Automatically shut down below 6.0V), it will display

0 FF

, and then display - - - - ,the device cannot enter standby mode.

Please turn down power switch to protect battery life if not charge timely. When charging, the symbol "☑" will long light bright. The light goes off when the battery voltage reached 8.3 V.

In the charging state, the red charging indicator behind the machine will light up until in full charge.