

MOONKI

Wireless speaker MO-L2077BT Instruction Manual



Key and slot function:

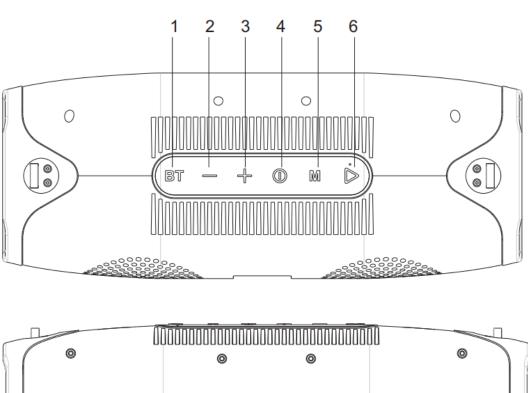

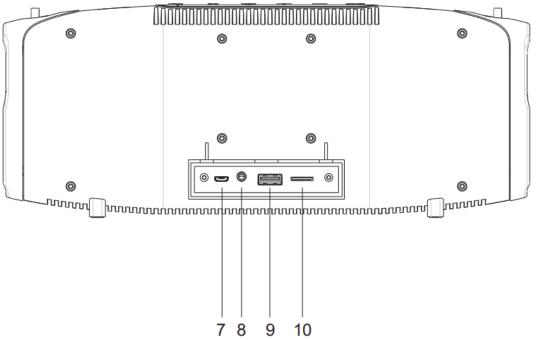

1	Press and hold to disconnect bluetooth
2	Volume Down \ Skip Backward
3	Volume Up \ Skip Forward
4	Power on & off
5	Mode

6	Play\Pause\Answer
7	Micro USB charging socket
8	Aux input
9	USB disk playing socket
10	TF card : Micro SD memory card

Operating your speaker

Bluetooth Mode

Press to turn on the device and enter Bluetooth Mode,

Follow the operating instructions for Bluetooth connection on your device and allow searching bluetooth speaker ,

Usually this is done by going to "set up "menu, connect for "Bluetooth" function and then selecting the option to search for Bluetooth device "MO-L2077BT",

Your device (mobile phone, PC, tablet,. etc.) will detect the Bluetooth speaker and connect. if your phone requires a password or a PIN number, enter 0000 and confirm it.

After connection, you can adjust volume and select last/next song by pressing

and .If you want to get the coming phone call, short press

, then you can make phone call by the speaker. Press again to end the phone call.

Music playback from USB disk

Power on the speaker and insert the USB flash disk inside to play music. The music will start to play automatically

To playback your music, press the button to play/pause the music.

Press and hold on the Φ or Γ for the next track or previous track.

Aux-in Mode

Press to turn on the device, then connect with the speaker by Aux in cable to PC, Mobile or other audio source by Aux in cable. And then audio signal can be played by the speaker from external audio resource.

During Aux-in mode, press the - for volume down/ up

Charging

Charge the speaker through the micro USB cable from a computer or through a DC adaptor. Status LED Indication will be red, when charge full, the light will be off.

Radio Operation

Before using the Radio function please insert the Micro USB cable into the micro USB charging socket as a receiving antenna.

- -Use the to select the radio function.
- -Long press the M to start scanning and automatic storage of radio stations.
- -Once you have registered stations, press and hold on the \Box to select the station previous or the \Box to select the next station.

True Wireless Stereo bluetooth connection (TWS function for two speakers)

- 1.Power on two speakers and the default setting is the Bluetooth mode, the LED light flash(a sound is heard confirming the speaker is set into Bluetooth pairing mode).
- 2.Turn off the bluetooth function on your phone or other bluetooth device, long press of either speaker and (a sound is heard confirming the TWS function opened), after few seconds two bluetooth speakers voice prompt, when you see one of speaker LED light is falshing and another LED light is on but not flashing, it shows two speakers bluetooth connected;
- 3. Open the mobile phone Bluetooth search the "MO-L2077BT";
- 4. Find the name "MO-L2077BT" select the connection;
- 5.Bluetooth speaker voice prompt, it show bluetooth connected ,then you will enjoy the music from two speakers .
- 6. Long Press again if you want to quit the TWS function and enjoy music by 1 speaker .

Note: The default password-less, if some equipment prompt for a password, enter 0000.

Product specifications:

◆ Battery: 3.7V 3000mAh

◆ Power: 10W *2

◆ Frequency response:20Hz-20kHz

◆ Unit size: 296*118mm*118mm

◆ Charging:5V/1A

◆ Accessories: Micro USB cable, Strap

Note:

Do not let children play with the product

Do not throw the product into fire

Do not use in very humid or high/low temperature environments. Product performance will decrease when used in such environments.