

PRECAUCIÓN

Evite exponer el parlante a fuentes de humedad. Si se usa al intemperie, asegúrese que este a buen resguardo.

No use ni almacene este equipo en lugares húmedos, puede ocasionar mal funcionamiento o riesgo de choque eléctrico.

Si el cable de alimentación esta dañado, debe reemplazarse por el fabricante, o un agente habilitado y calificado para evitar riesgos.

Para evitar incendios o riesgo de choque eléctrico, no exponga este equipo a la lluvia o humedad. Limpiar solamente con un paño seco.



 
CAUTION

Avoid exposing the speaker box to moisture. If they are set up outdoors, Be Sure they are under cover.

Do not use nor store the equipment near wet or dap places. It may cause a malfunction or shock hazard.

If the power cord is broken, it must be replaced by the manufacturer or service agent or qualifield personnel to avoid risks.

To reduce the risk of fire or electric shock, do not expose this equipament to rain or moisture. Clean only with a soft, dry cloth.

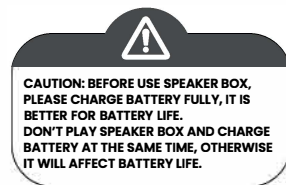


CUIDADO

Evite expor o alto-falante a fontes de umidade. Se usado em ao ar livre, certifique-se de que está bem protegido.

Não use ou armazene este equipamento em locais úmidos, pois pode causar mau funcionamento ou risco de choque elétrico.

Se o cabo de alimentação estiver danificado, deve ser substituído por o fabricante, ou um agente autorizado e qualificado para evitar riscos.

 Para evitar incêndio ou risco de choque, não exponha este equipamento à chuva ou umidade. Limpe apenas com um pano seco.

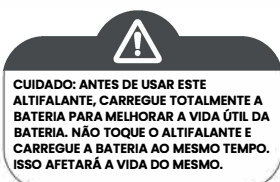

MS-P15BW

PARLANTE BLUETOOTH • 4000W

BLUETOOTH SPEAKER | CAIXA DE SOM BLUETOOTH

MS-
MS-P15BW
P15BW

Moonki Sound



MS-
MS-P15BW
P15BW



Welcome to yours speaker's instruction guide

1. Packing Contents

- 1 Speaker
- 1 Remote Control
- 1 User's Manual
- 1 Power Cable
- 2 X UHF Wireless microphone

2. Specifications

15" 2-way active speaker

PMPO Power: 4000W

RMS Power: 300W

Woofer: 15" diameter with LED lighting, with 2.4" (60mm) KSV voice coil.

Tweeter: Diameter 1" (25 mm)

Frequency response: 50HZ-18KHZ

Sensitivity: 98dB(+/-3dB)

Connectivity:

Bluetooth, Canon Line In, XLR

Line Out

Unit Measurements:

35 x 41,5 x 69cm

Unit Weight: 20kgs

Box Measurements:

48,5 x 40 x 74,5CM

Box Weight: 23 kg

3. Panel Specification

Play/Pause: Press to play a song or pause while playing a song.

Previous: Press once to jump previous song/Press and hold to back forward.

Next: Press once to jump to next song/Press and hold to fast forward.

Cycle play: To select a player mode, the options are:

- One: select this to play the current song indefinitely
- Random: Random Play
- Folde: Repeat folder
- All: With this option you can repeat all the music Stops the current song.

Stops current song.

Mode: Select an operating modality.

Connection Bluetooth

 
1. To pair the speaker with a bluetooth phone or audio device, press "MODE" repeatedly on the MP3 player until select this mode.
2. Put your phone or device to be used in bluetooth device discovery mode.

4. Wireless Microphone


1- Grille

2- Power on/off / mute function

3- Battery Cover. Access to the battery

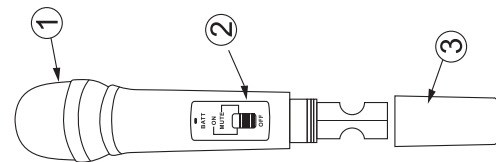

 The manufacturer reserves the right to modify specifications without prior notice.

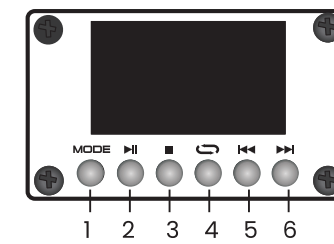

- 1- Mode
- 2- Play/Pause
- 3- Enter Folder
- 4- Repetition Mode
- 5- Previous
- 6- Next

