

#### Conexión Bluetooth

1. Para emparejar el parlante a un dispositivo bluetooth, presione MODO repetidamente en el display del reproductor hasta seleccionar este modo.
2. Habilite la conexión Bluetooth en su dispositivo.
3. Cuando el dispositivo muestre el parlante en la lista de conexiones, confirme el emparejamiento.

#### Conexión Bluetooth

1. To pair the speaker with a bluetooth phone or audio device, press "MODE" repeatedly on the MP3 player until select this mode.
2. Put your phone or device to be used in bluetooth device discovery mode.
3. When your phone or device shows the "BLUETOOTH" device, confirm the link.

#### Conexão Bluetooth

1. Para emparelhar o alto-falante com um telefone bluetooth ou dispositivo de áudio, pressione "MODE" repetidamente no MP3 player até selecionar este modo.
2. Coloque seu telefone ou dispositivo a ser usado no modo de descoberta de dispositivo bluetooth.
3. Quando seu telefone ou dispositivo mostrar o dispositivo "BLUETOOTH", confirme o link.

#### PRECAUCIÓN

Evite exponer el parlante a fuentes de humedad. Si se usa al intemperie, asegúrese que este a buen resguardo.

No use ni almacene este equipo en lugares húmedos, puede ocasionar mal funcionamiento o riesgo de choque eléctrico.

Si el cable de alimentación esta dañado, debe reemplazarse por el fabricante, o un agente habilitado y calificado para evitar riesgos.

Para evitar incendios o riesgo de choque eléctrico, no exponga este equipo a la lluvia o humedad. Limpiar solamente con un paño seco.




#### CAUTION

Avoid exposing the speaker box to moisture. If they are set up outdoors, Be Sure they are under cover.

Do not use nor store the equipment near wet or damp places. It may cause a malfunction or shock hazard.

If the power cord is broken, it must be replaced by the manufacturer or service agent or qualified personnel to avoid risks.

To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture. Clean only with a soft, dry cloth.

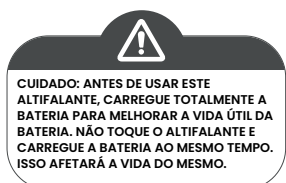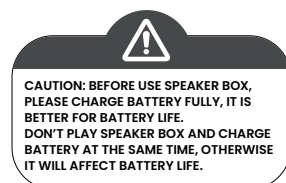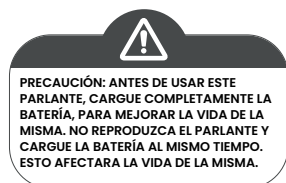

MS-X265BT

# moonki® SPEAKER MS-X265BT

HECHO EN RPC



MS-X265BT

MANUAL DE USUARIO | USER MANUAL | MANUAL DO USUÁRIO



Welcome to choose our seaker

### 1. Packing Contents


- 1 x Speaker
- 1 x Remote control.
- 1 x User manual
- 1 x USB - TYPE C cable

### 2. specs:

2-Way Bluetooth Powered Speaker  
 PMPO Power: 900W  
 RMS Power: 60W  
 Noise/Signal Ratio:76.1dB  
 Response Frequency: 65HZ-18KHZ  
 Woofers: 2 x 6.5"  
 Tweeters: 1 x 1"  
 Bluetooth version: 5.0  
 Equalization: Normal (Nor), Classic (cla), Popular (pop), Rock (roc), Jazz (jaz), Vocal (voc).  
 Inputs: Bluetooth, Auxiliary, DC

Input  
 Charging input: USB TYPE-C 5V  
 Battery type: lithium  
 Battery Life: 3 HRS (depending on usage mode)  
 Charging time: 4.5 HRS  
 Unit measurements: 240\*257\*641CM  
 Unit Weight: 5.6kg  
 Box Measurements: 29.5\*29.5\*73CM  
 Box Weight: 5.7kg  
 Includes: USB Type-C Cable, Remote Control


### 3. Control remoto

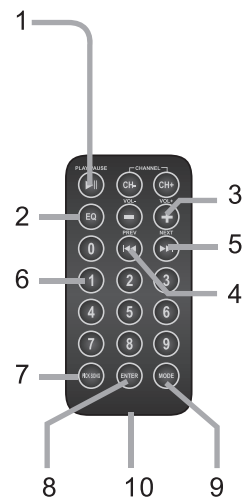

- 1- Press to play a song or pause while playing a song.
- 2- In play mode press to set one equalizer mode,
- 3- Vol+/Vol -
- 4- Previous: Press once to jump previous song, press and hold to rewind.
- 5- Next / : Press once to jump next song, press and hold to fast-forward.
- 6/7/8- The buttons have no function.
- 9- Model: Select and operating modality, the options are AUX, bluetooth.
- 10- Battery compartment (CR2025)

The manufacturer reserves the right to modify specifications without prior notice.

### 4. Panel Specifications

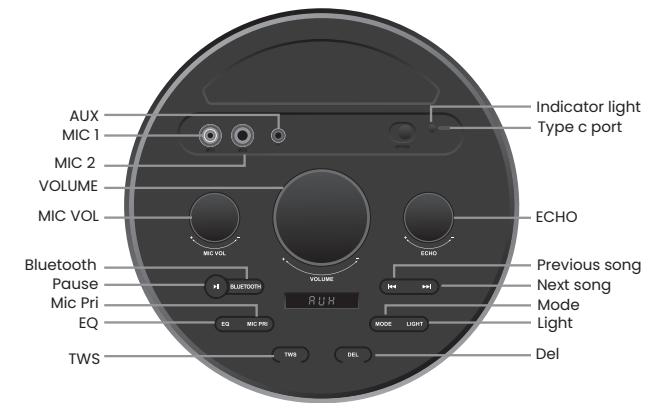

**MIC1/ MIC2:** 6.3.5mm input for wired microphones  
**AUX:** 3.5mm AUX IN  
**OFF/ON:** switch on/off  
**Indicator light:** When using the Type-C charging cable to charge audio through the Type-C port, the charging indicator is red. When the battery is full, the charging indicator is green

**Type-c port:** Charge by this 5V type-c port  
**MIC VOL:** adjust the volume of the microphone  
**VOLUME:** Adjust the master volume  
**ECHO:** Adjust the ECHO effect  
**BLUETOOTH:** press the button to enter bluetooth mode

**Pause button:** When playing music, press this button to pause playback.  
**EQ button:** In music playing mode, you can switch between normal, classic, pop, rock, jazz and rock modes by pressing this button.  
**Mic PRI Button:** Press this button to set the phone's priority mode.  
**TWS button:** enter the Bluetooth mode first, then press the TWS button, the master screen flashes, and when the slave does not flash, the pairing is successful. Bluetooth devices can be connected through the main speaker to play music synchronously between the two devices.  
**Del Button:** In "TWS" mode, the paired device can be deleted by pressing this button.  
*\*only two units of the same model can be paired*  
**Next song button:** In music play mode, you can switch to the next song by pressing this button.  
**Mode Button:** Press this button to switch between "aux", "bluetooth".  
**Light button:** short press to control the "volume" potentiometer blue backlight and two subwoofer red light at the same time.

