



ALUMINUM HANGING SHOWBOX HANGER ASSEMBLY INSTRUCTIONS

1. Your Hanging Showbox Hanger will arrive fully collapsed, with pins holding the legs in a folded position. Remove all four of the pins and set them aside for now. Swing the bottoms of the legs out so that they are perpendicular to the hanger shelf. **Figure 1**



FIGURE 1

2. On each side, use a pin to connect the bottom hole on the shelf to the middle or bottom hole on each leg. You can place the extra pins back in the top holes on the shelf to prevent losing them. **Figure 2**
3. To adjust the height of the posts, loosen the bottom set of knobs and pull the bottoms of the legs out to your desired height. Tighten the knobs. **Figure 3**



FIGURE 2

**BOTTOM
KNOB**



FIGURE 3

**BOTTOM
KNOB**

4. Stand the hanger up on its feet and make sure that the shelf is level. Attach it to your pen using zip ties, trailer ties or chains.



5. The top set of knobs allows you to adjust the height of the chains that connect to your showbox. It's easiest to move these pieces to your preferred height before attaching your showbox. **Figure 4**

6. To attach the showbox to your hanger, use the hooks and chains located on the back of the box. Attach the hooks to the hanger's chains, and then attach the chains on your showbox to the back set of hooks on the hanger shelf. For extra security, you can wrap the chain around the shelf's support beam before hooking it. Make sure that your box is level and out of your animals' reach. **Figure 5**

Tip: We recommend having two people to lift the showbox onto the hanger.

7. When folding your hanger for storage or transport, make sure the legs are fully collapsed and the top set of knobs are pushed as far up as possible. Using the four included pins, secure the legs in a folded position on each side of the hanger shelf.

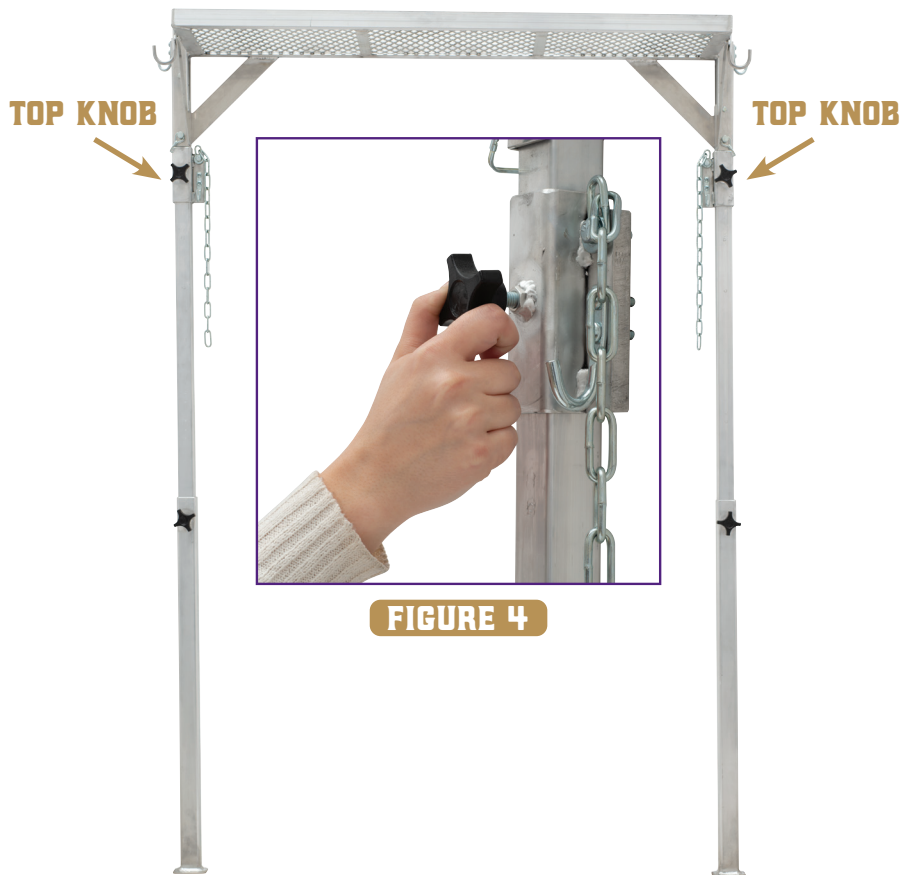


FIGURE 4

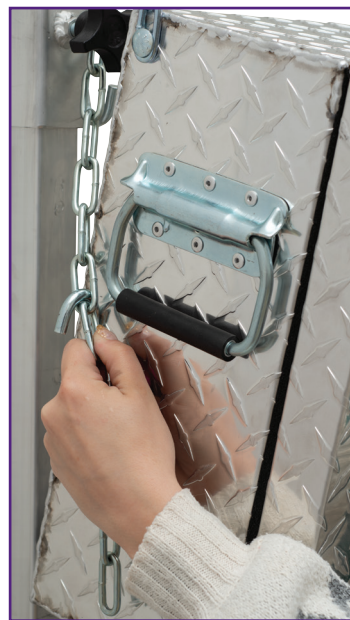


FIGURE 5