

# Accessori

### **EGG & PANCAKE RINGS**

Part #: 31741



### **PANCAKE FLIPPER**

Part #: 31742




#### **BEFORE USE:**

 
 Hand-wash with warm soapy water is recommended. Do not use harsh detergents or chemicals.

#### **SAFEGUARDS:**

- Dishwasher safe.
- Avoid resting Silicone Egg Rings and Pancake Flipper against hot surfaces.
- Silicone Egg Rings and Pancake Flipper are heat-resistant up to 445°F.
- Use caution when removing Silicone Egg Rings and Pancake Flipper from any hot surface. Silicone material can retain heat after use, please allow time to cool before cleaning.

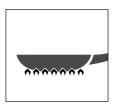







### **HOW TO USE:**

## Egg & Pancake Rings:

- 1. Preheat the Medley XL or the frying pan.
  - Spray lightly with cooking oil or add oil.
- **2.** Spray the ring with your cooking spray of choice.
- Use handle to place ring in the pan with NuWave logo upright on heated surface, then crack the egg or add the pancake mix inside the ring.
- 4. When the egg or pancake has set, remove the ring by lifting up with the handle.

### Pancake Flipper:

- 1. Preheat the Medley XL or the frying pan
  - Spray lightly with cooking oil or add oil.
- 2. Spray the flipper with your cooking spray of choice.
- Use the side handles to place the flipper in the pan with NuWave logo up on heated surface, then add the pancake mix inside the rings.
- **4.** When the mix has set on top, turn the flipper over using the handles, then remove the flipper.

Use oven mitts when handling the flipper while cooking.

Item No: IN31828-Rev.2-V2-CB