

# X1

## Tranya Sports Earbuds

 
 
 
### User Manual

V2020919





**15-MONTH WARRANTY**  
 ACTIVATE WITHIN 14 DAYS  
[tranya.com/pages/register-product](http://tranya.com/pages/register-product)  
 Email: [support@tranya.com](mailto:support@tranya.com)

### PACKAGE LIST

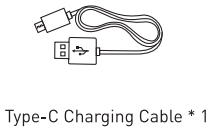
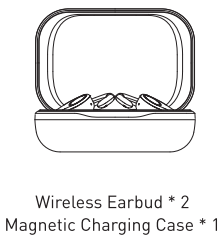


### IMPORTANT NOTES

  
- 1 Register your product on [tranya.com](http://tranya.com) to get an EXTRA three-month warranty for free.
- 2 Before using the X1 wireless earbuds, please charge both the case and earbuds.
- 3 Three pairs of rubber eartips. Please choose the best for you.

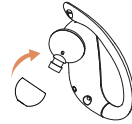

  - 4 If both earbuds don't sync together, please reset the earbuds.
- 5 If the earbuds don't charge, please clean the charging slot on the case and the contact surface on the earbuds.

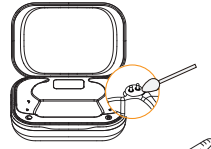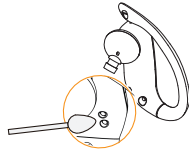

 
- 6 If the sound becomes low without control, please use tweezers to take out/remove the net inside the earbuds.

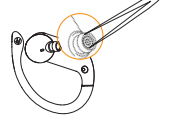


### PHYSICAL BUTTON CONTROL

Play/Pause		Press one time(L/R)
Previous/Next track		Press 3 times(L/R)
Volume down/up		Press twice(L/R)
Activate Siri/other voice control software		Press and hold for 1 second (L/R)
Answer/End a call		Press one time(L/R)
Reject a call		Press and hold for 1 second(L/R)
Game Mode <small>(Automatically return to normal mode after power off)</small>		Press 4 times(L/R)
 
### POWER ON

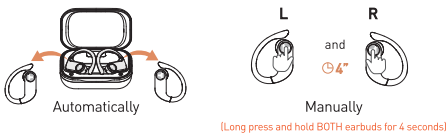


### POWER OFF

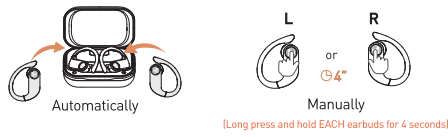 

Note: When the charging case is at low battery or out of power, the earbuds will not automatically power on/off, please turn them on/off manually.

### WEARING

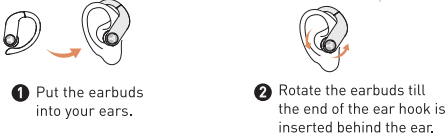 

### CONNECT THE EARBUDS



 
1 Power on the earbuds and turn on the Bluetooth in your phone.



2 Select "X1" and confirm.

### CHARGING

#### 1 Power Display

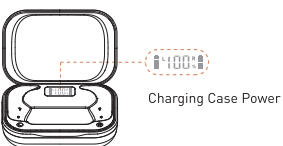

#### 2 Charging the Earbuds

**Charging:** White indicator is on; Power display lights up for 10s.  
**Fully charged:** White indicator is off.

 


#### 3 Changing the Case

a. Charge it with a wireless charging pad(Not included).





b. Charge it with the included Type-C cable.




### HOW TO RESET THE EARBUDS

If your earbuds stop syncing with each other, please follow below steps to reset the earbuds:

  - 1 Pick up both earbuds and turn them off.



 - 2 Press and hold BOTH earbuds up to 6-8s until the red and white lights blink.

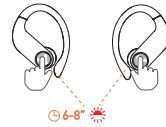

- 3 The earbuds will sync together and enter the pairing mode automatically.


### FAQ

 Q: Why does signal interruption occur in some places, such as along the railway and the airport?

A: There are usually lots of underground cable lines along the places mentioned above, which might cause electromagnetic interference and result in the signal interruption.

Q: My earbuds don't charge, what can I do?

A: Please try to follow below steps:  
 1. Clean the charging slot on charging case.  
 2. Clean the charging connector on earbuds.



Q: Why won't my earbuds power on/off automatically?

A: The earbuds would not power off automatically when the case is at low battery or out of power. Please recharge the case. And you can long press for four seconds to power on and long press for four seconds to power off the earbuds.

Q: Will the Bluetooth mouse cause the signal interference?

A: Perhaps. When your Bluetooth mouse and earbuds are connected to the same device, it might happen.