



L5P SOTF User Guide

Using Switch on the Fly (Cruise Control Method)

Requirements:

- The OEM Vehicle must be equipped with OEM cruise control on the steering wheel
- The Vehicle must be ON or Running, AND the Cruise Control must be deactivated

Step 1: Activate SOTF Menu

- Press the Cancel (X) button
 - If the Engine is not running the RPM tach displays the active tune position
 - If the Engine is running the Glow Plug light blinks the number of the active tune position (if you are in tune position #2 it will blink twice)

Step 2: SOTF Menu is active

- Once active, the SOTF menu is active for 10 seconds
- Press the RESUME (+) button
 - Active SOTF Tune position increases by 1 position
 - If the engine is OFF the RPM tach will display the new tune slot position
 - If the engine is ON the glow plug light will blink the a number of time correlated to the tune position you are in (if you are now in tune position #3 the glow plug light will blink three times).
- Press Set (-) button
 - Active SOTF Tune position decreases by 1 position
 - If the engine is OFF the RPM tach will display the new tune slot position
 - If the engine is ON the glow plug light will blink the a number of time correlated to the tune position you are in (if you are now in tune position #3 the glow plug light will blink three times).

Step 3: Deactivating the Switching Menu

- The Switching menu automatically deactivates itself after 10 seconds of no cruise control buttons being pressed
- To manually Deactivate the SOTF menu and resume normal Cruise control functions
 - Press Cancel (X) button
 - Deactivates the switching menus
 - Pressing Cancel (X) again or after menu was deactivated will display the current SOTF tune position that you are in.

Works Cited:

"Switch on the Fly User Guide V1." *HP Tuners, LLC*, HP Tuners, LLC, 1 Mar. 2021, https://www.hptuners.com/pub/HPTuners_SOTF_UserGuide_20210222V1.1.pdf