


Air Product Inflation Instructions

Please take care when using any air product that the area is free from any object that may puncture or damage your product.

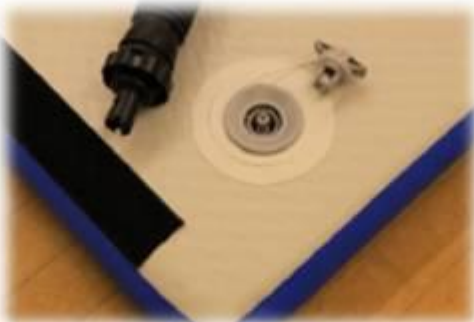

Pic 1 to open valve



Pic 2 inflation hose



Pic 3 to close valve

How To Inflate:

- Locate the valve on your air product. Twist counter-clockwise to unscrew the dust cover for the valve.
- By pressing and turning the spring pin either clockwise or anticlockwise you will change the position of the pin. If the pin stays down the valve is open and air will be released, press and turn the pin to close the valve and the air should cease to escape (see Pic 3)
- Fix the tube of the hand pump onto the valve and inflate to desired pressure.
- Remove the tube from the valve, make sure the pin is closed and then close the dust cap.

How To Deflate:

- To deflate simply place the valve in the open position by pushing in the centre pin and roll up your air product - the air will come out naturally (see pic 1).

For further information please do not hesitate to get in touch with us via info@myhomegymnastics.com



Repair Instructions for MHG Air Products

1. Clean the areas around the damage. Make sure there are no internal fibres hanging out
2. Dry the area and remove any debris
3. Cut a patch 1-2 inches larger than the hole, the bigger the patch the larger the surface area the glue has to work with and will be more effective
4. Cover the patch in glue right to the edges
5. Apply glue to the product where the patch will go
6. Place the patch over the hole and make sure all of the glue is squeezed out of every edge
7. Clean the excess glue off with a wet cloth and place something flat and heavy over the patch to ensure the patch sticks
8. Once the patch is dry (1-2 hours) inflate the air product and make sure no air is escaping from the patch
9. Put a small amount of glue around the edge of the patch to ensure all edges are secured down

