


PROJECT E
BEAUTY



Gloa

FACE & BODY
CLEANSING BRUSH

USER GUIDE
Model Number: PE743

MULTILINGUAL INSTRUCTIONS

MULTIPLE LANGUAGES USER MANUAL

For other languages (French, Spanish, Italian, German),
scan the following QR code



SCAN QR
CODE

TO GET USER
MANUAL

NUMÉRISER LE
CODE QR

POUR OBTENIR LE
MANUEL DE L'UTILISA-
TEUR EN FRANÇAIS

SCANSIONA
IL CODICE QR

PER OTTENERE IL
MANUALE D'USO IN
ITALIANO

ESCANEAR
CÓDIGO QR

PARA OBTENER EL
MANUAL DE USUARIO
EN ESPAÑOL

QR-CODE
SCANNEN

DEUTSCHES BENU-
TZERHANDBUCH
ERHALTEN

FUNCTION & FEATURES

FUNCTIONS

Experience a deeper, spa-like cleanse for your face and body with the Project E Beauty Gloa Face & Body Cleansing Brush. This whole body cleansing system comes with three interchangeable brush heads: a cleansing brush, a silicone brush, and a body brush.

Your new favorite cleansing brush uses bidirectional micro-circulation technology that moves the inner and outer brush heads in opposite directions. This ensures a thorough and more effective cleanse and exfoliation. Adjust the speed from low to high to further customize your cleansing routine.

FEATURES

- Uses advanced bidirectional rotation technology
- Dual speed spin brush, low and high
- 3 interchangeable brush heads for the face and body
- IPX7 waterproof rating
- Suitable for sensitive and oily skin types

WHAT'S IN THE BOX?


- Main Unit x 1
- Deep Cleaning Brush x 1
- Silicone Brush x 1
- Body Brush x 1
- Type C Charging Cable x 1

GLOA FACE & BODY CLEANSING BRUSH



HOW TO USE GLOA?

HOW TO CHARGE

 For best performance, it's recommended to fully charge your device before using it the first time and before storing it for an extended period of time.

- Connect one end of the provided USB cable to the charging port found at the lower back of the main unit. Connect the other end to a power supply.
- The indicator light should blink continuously while charging and should stop flashing after the battery is fully charged.
- To avoid incidents, please ensure that the wire is not tangled before charging.
- The device does not work during charging. If any irregularities occur, stop using the device immediately, turn it off, and consult with a customer service representative to provide after-sales service.
- If the device is not used frequently, we recommend charging it at least once every three months to prevent battery discharge from affecting its normal usage.
- Low Power Alert: When the battery level drops to 5%, the white LED indicator light will flash continuously for 5 times. After that, the device will automatically power off.

Charging Time : ≤ 5 hours

Working Time: 20 days

HOW TO USE

PREPARING FOR A TREATMENT

1. To avoid staining the bristles, remove makeup first with your preferred makeup remover.
2. Attach your preferred brush head.
3. Wet your face/body and the brush head with warm water before use. You can either apply the facial cleanser directly on the brush head or on your face first.
4. Hold the device so the brush head is flush against your skin, then press the power button to select a mode.
5. Start with the forehead and cheeks. Gently glide the brush over the surface in a slow rotating motion. See figure 1.



Fig. 1

6. Proceed to your nose and chin area. Gently move in circles from the inside going outwards. See figure 2.



Fig. 2


7. Press the power button once to turn on the device. Press a second time to change the direction of the brush head.
8. On the lower part of the power button, press once for low speed and press a second time for high speed.
9. Rinse your face with water and pat dry using a clean towel. Continue with the rest of your skincare routine.



Fig. 3

OPERATING INSTRUCTIONS

 - Forward rotation mode: Short press the on/off key when the device is powered off. The device will enter the low speed, forward rotation mode (the outer brush rotates clockwise and the inner brush rotates counterclockwise) and the lower indicator light will shine slightly.

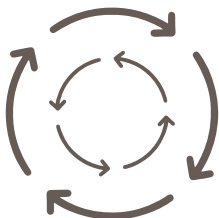

- Reverse rotation mode: Short press the on/off key when the device is in forward rotation. Then the device will enter the low speed, reverse rotation mode (the outer brush rotates counterclockwise and the inner brush rotates clockwise) and the upper indicator light will shine slightly.
- Speed switching:
 - Short press the speed key when the device is in low speed, forward rotation and the device will enter the high speed, forward rotation mode. The lower indicator light will shine brightly.
 - Short press the speed key when the device is in low speed, reverse rotation and the device will enter the high speed, reverse rotation mode. The upper indicator light will shine brightly.
- Power off: Short press the on/off key for 2 seconds to turn off the device.

- Auto power off: The device will automatically power off after 10 minutes of use. Please restart it if you need to continue.

Notes:

To avoid discomfort or injury, it is recommended to start at a low speed and gradually increase to a higher speed. The inner and outer brushes rotate in opposite directions when used. Please choose the brush head and speed according to your skin type and comfort level.

BRUSH HEADS



Deep Cleansing Brush

- With ultra-soft bristles for gentle yet effective daily cleansing
- Perfect for oily or combination skin



Silicone Brush

- With food-grade soft silicone bristles for gentle cleansing
- Ideal for sensitive and acne-prone skin



 
Body Brush

- Large brush with firm bristles to cleanse and exfoliate the whole body
- For all skin types


INSTALLATION / REMOVAL / CLEANING THE BRUSH HEAD

- To attach the brush head, align the bottom of the brush head with the base of the main unit and press down firmly until you hear a click.
- To remove, hold the brush head and pull it off. DO NOT twist to prevent damage to the product.
- Wash the brush head with warm water and air dry after every use.
- Replace the brush heads every 3 months.
- Make sure that the main unit is turned off when installing the brush head.
- The main unit features a flat bottom design, enabling it to stand upright when not in use.


CHECK

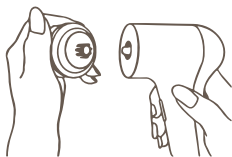

INSTALL

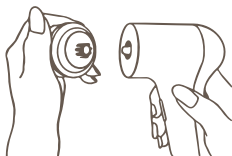 

REMOVE

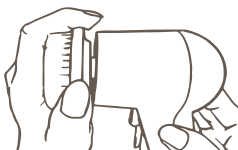 

OPERATING TIPS

- DO NOT put too much pressure on the skin or move the brush too fast.
- Excessive cleaning is not recommended. Limit cleaning time to less than 20 seconds per area.
- It is recommended to use this cleaning brush on your face at least 3 times a week.
- DO NOT use the brush on your eyes, throat, and mouth areas.
- DO NOT start the facial brush or rotate the brush heads while cleaning.
- Please stop using the device in case of tingling or any skin discomfort. If discomfort persists, consult your doctor.
- DO NOT use clay matrix, silicone soluble or granular facial cleanser, cuticle removing cream, or scrub cream to avoid damage to the silicone bristles.
- This product is for personal use only, do not share with others.
- Please operate the product according to the instructions. Refrain from using third-party accessories.
- DO NOT use the product when the product or charging cable is damaged.

TECHNICAL SPECIFICATIONS

Model	PE743
Dimensions	153 x 49 x 93mm (excluding the cleaning brush)
Rated input	5V 1000mAh
Working voltage	3.6V
Battery capacity	2500mAh
Waterproof grade	IPX7
Weight	Main body: 196g Cleaning brush: 20g

DISPOSAL



2012/19/EU

Directions for proper disposal of the product according to EU directive 2012/19/EU

At the end of its working life, this equipment must not be disposed of as a household waste. It must be taken to special local community waste collection centers or to a dealer providing this service. Disposing of electrical and electronic equipment separately avoids possible negative effects on the environment and human health deriving from an inappro-

appropriate disposal and enables its components to be recovered and recycled to obtain significant savings in energy and resources. In order to underline the duty to dispose of this equipment separately, the product is marked with a crossed-out dustbin.

1 YEAR WARRANTY

ACTIVATE YOUR 1 YEAR FREE WARRANTY NOW.

Gloa | Face & Body Cleansing Brush comes with a full one year warranty against manufacturer defects. It does not include damage caused by misuse, accident, abuse, neglect or other external causes.

All we need is your name, email and order ID. That's it.



Scan the QR code or visit
www.projectebeauty.com/pages/warranty

QUESTIONS?

Website: projectebeauty.com

Email: sales@projectebeauty.com

Tel: +1-626-759-4232

Our customer care expert team is available to answer any questions you may have.

