

Instructions to reset PLC touchscreen.

- 1.) On the main screen press and hold anywhere on the blank screen (anywhere there is no existing buttons)
- 2.) Select info mode
- 3.) At the password prompt enter 1111 and press enter
- 4.) Select the working mode button
- 5.) At the bottom right press Init
- 6.) Click Yes to confirm when prompted

This will clear the PLC memory. Once the system is restarted you will need to go into the menu and set the following:

- 1.) Alarm duration will be reset to 0. Enter your desired time.
- 2.) Water flow. Reset your system multiplier
- 3.) Temperature probe. Scale should be set to 0.1. Select Fahrenheit or Celsius
- 4.) PID. Enter Proportional 10, Integral 10 Derivative 0, Sample time 100