



M1W HE 三模键盘用户手册

M1W HE Multi-modes RGB Keyboard

User Manual

快速开始指南 ▶

 
Quick Start Guide

感谢您购买及使用本产品



为了给您带来更好的使用体验，在使用产品前请仔细阅读本说明书，并请妥善保管，以便日后参观。

产品介绍

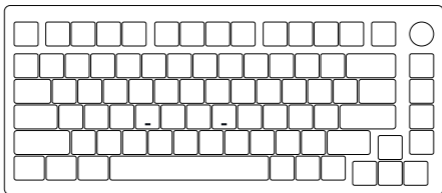

包装内容



系统需求

Windows®XP / Vista / 7 / 8 / 10或更高版本

安装步骤

将键盘USB连接线插入电脑的USB接口即可开始使用。

独立指示灯

状态	指示灯位置	回连	配对	连接成功
BT1	按键E灯	红灯慢闪	红灯快闪	红灯常亮2s熄灭
BT2	按键R灯	蓝灯慢闪	蓝灯快闪	蓝灯常亮2s熄灭
BT3	按键T灯	黄灯慢闪	黄灯快闪	黄灯常亮2s熄灭
2.4G	按键Y灯	绿灯慢闪	绿灯快闪	绿灯常亮2s熄灭
有线	按键U灯	无	无	白灯常亮2s熄灭
状态	指示灯位置	指示方式		
低电	空格键键位灯	红灯慢闪		
充电		红灯常亮		
充满		灯灭		
Caps	Caps按键灯位	白灯常亮		
锁WIN	左WIN键灯位	白灯常亮		

M1W HE RGB组合键功能



Fn+	F1	我的电脑
	F2	电子邮件
	F3	= Windows搜索
	F4	浏览器主页
	F5	多媒体播放器


Fn+	F6	播放 / 暂停
	F7	上一首
	F8	= 下一首
	P	Prtsc
	C	计算器


Fn+	I	Insert
	M	静音
	<	= 音量减小
	>	音量增加
	W	将WASD与 ↑ ↓ ← → 键对调

调整按键行程快捷键

Fn+1	轴行程为2mm	Fn+2	轴行程为0.5mm
Fn+3	行程为0.5mm+火力模式		
Fn+4	驱动自定义轴行程通道，默认2mm轴行程		

 M1W HE RGB系统功能 (Windows)

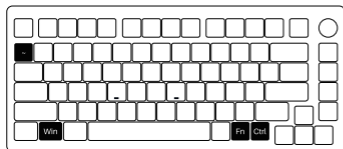



旋钮功能

- 默认为音量功能
- 逆时针为调低音量
- 顺时针为调高音量
- 按下中间切换为亮度功能
- 逆时针为降低亮度
- 顺时针为增加亮度

锁Win键

Fn + 左Win

 
恢复出厂设置

长按 Fn + ~ 5秒

切换成菜单键


长按Fn + 右Ctrl 3秒

M1W HE RGB系统功能 (Mac)

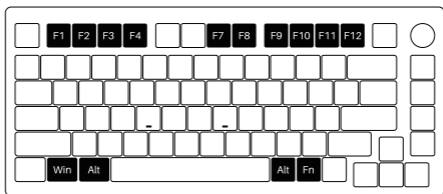

F1	降低显示屏亮度	F7	上一曲	F11	调低音量
F2	增加显示屏亮度	F8	播放/暂停	F12	调高音量
F3	开放任务控制	F9	下一曲	左Win	Option
F4	呼出Siri	F10	静音	左Alt	Command
右Alt	Command	Fn+F1-F12 = F1~F12			

 M1W HE RGB灯光调节

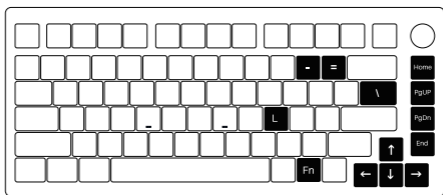

fn+	灯光速度变慢	fn+home	常亮、涟漪、如影随形、川流不息、流星
fn+=	灯光速度变快	fn+pgup	繁星点点、霓虹、光波、层出不穷、彩泉涌动
fn+↑	灯光变亮	fn+end	呼吸、极光、正弦波、雨滴、峰回路转
fn+↓	灯光变暗	fn+pgdn	斜风细雨、踏雪无痕、聚合、一石二鸟、百花争艳
fn+←	灯光方向向左	fn+\	切换背光致7种单色+RGB循环
fn+→	灯光方向向右	fn+L	灯光关闭/开启

M1W HE RGB连接使用指南



Fn+	E		蓝牙设备1	 开关位于 CAPS按键右侧	上：MAC (内置电源开)
	R		蓝牙设备2		中：Windows (内置电源关)
	T	=	蓝牙设备3		下：Windows (内置电源开)
	Y		2.4G无线设备		
	U		有线模式		

蓝牙配对

键盘开机后，按下Fn+E/R/T进入蓝牙模式，长按Fn+E/R/T组合键3S，键盘进入对码状态，红\蓝\黄色指示灯快闪，连上后指示灯常亮2S，如果没有连上设备指示灯熄灭，键盘进入睡眠。

2.4G配对

键盘开机后，按下Fn+Y进入2.4G模式，再按下Fn+Y组合键3S进入配对模式后，插入接收器，指示灯快闪，配对成功后退出对码，模式灯常亮2S，找不到配对设备30s后，退出对码模式灯熄灭，键盘进入睡眠。

电量查询

在无线模式下，按Fn+空格组合键可检查电池电量。如果电池电量低于30%，数字1-2键将显示红灯。如果电池电量低于100%，数字1-9键将显示绿灯，电池电量充满则数字1-0键显示绿灯。

1	2	3	4	5	6	7	8	9	0
<30%	<40%	<50%	<60%	<70%	<80%	<90%	<100%	充满	
亮红灯					亮绿灯				

按键/灯光自定义说明和调用说明

1. 键盘三种工作模式下均可连接驱动并进行灯光和按键自定义
2. 键盘三种工作模式下可搭配驱动实现音乐律动
3. 请在我司官网下载“MonsGeek_setup”驱动
4. 驱动下载地址www.monsgeek.cn

MONSGEEK保修和服务声明

1. MONSGEEK为中国大陆的客户提供一个保修。
对于其他地区，请联系您的卖家（MonsGeek分销商）以了解具体的保修政策。
2. 如果保修期到期，客户需要支付维修费用。如果用户喜欢自己修理键盘，MonsGeek也会提供说明。用户应对自行修复过程中发生的任何损失承担全部责任。
3. 在未经制造商/卖方指示的情况下拆开键盘将立即导致保修无效
4. 官方售后服务时间为每周一至周五上午10:00至下午18:00节假日以国家法定节日休息为准。
5. 退货和保修政策在不同的平台上可能有所不同，并在购买时取决于具体的经销商。

公司：深圳银宸科技有限公司

地址：深圳市宝安区松岗街道碧头第一工业区朗碧路33号

电话：0755-23216420

网址：www.monsgeek.cn

产地：中国·深圳

Company: Shenzhen Yinchen Technology Co., Ltd

Address: 33 Langbi Rd, Bitou First Industrial Zone, Bao'an District, Shenzhen, China



WARNING:
Water and Beverages can't be
poured into the Keyboard.



 
中国制造/Made in China

注意
事项

人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等，键盘为电子产品
请按照电子产品保护方式爱惜使用。

To provide you with a better user experience, please read this manual carefully before using the product.

Overview

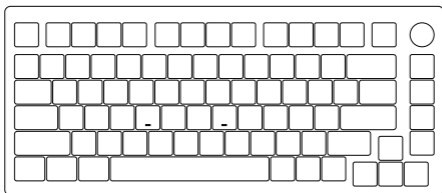

Packing List



Minimum System Requirement

Windows®XP / Vista / 7 / 8 / 10 or higher version


Connectivity Method

Connect the keyboard to your computer by plugging in the USB cable into an available USB-A port to start using it.

LED Indicator Overview

Description	Position	Re-Connecting	Pairing	Connected
Bluetooth device 1	LED for Key E	Red light blinks slowly	Red light blinks fast	Red light stays on for 2 seconds and then turns off
Bluetooth device 2	LED for Key R	Blue light blinks slowly	Blue light blinks fast	Blue light stays on for 2 seconds and then turns off
Bluetooth device 3	LED for Key T	Yellow light blinks slowly	Yellow light blinks fast	Yellow light stays on for 2 seconds and then turns off
2,4G wireless device	LED for Key Y	Green light blinks slowly	Green light blinks fast	Green light stays on for 2 seconds and then turns off
Wired mode	LED for Key U	N/A	N/A	White light stays on for 2 seconds and then turns off
Description	Position	Indicator		
Low Battery	LED under Spacebar	Red light blinks slowly		
Charging		Steady red		
Fully Charged		Light off		
Caps	LED for Caps Key	Steady white		
Lock WIN	LED for left WIN Key	Steady white		

 M1W HE RGB HotKeys

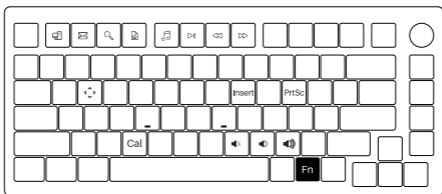

Fn+	F1	My Computer
	F2	E-mail
	F3	= Windows Search
	F4	Browser Homepage
	F5	Multimedia Player


Fn+	F6	Play/Pause
	F7	Previous Song
	F8	= Next Song
	P	Print SCR
	C	Calculator


Fn+	I	Insert
	M	Mute
	<	= Decrease Volume
	>	Increase Volume
	W	Swap WASD with ↑ ↓ ← →

Shortcuts to Adjust Travel Distance

Fn+1	Switch Travel Distance = 2mm	Fn+2	Switch Travel Distance = 0,5mm
Fn+3	Switch Travel Distance = 0,5mm + Ultra Sensitive Mode		
Fn+4	Customize switch actuation distance through MonsGeek Driver (2mm by default)		

 M1W HE RGB System Commands (Windows)

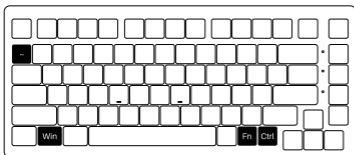



Rotary Knob

- Default is volume function;
- Rotate counterclockwise to decrease the volume;
- Rotate clockwise to increase the volume.
- Press the middle to switch to brightness function;
- Rotate counterclockwise to decrease brightness;
- Rotate clockwise to increase brightness.

Lock Windows Key

Press Fn and Left Win Key

 
Restore Factory Settings

Hold down Fn and press ~ Key for 5S

Revert Ctrl into Menu Key


Hold down Fn and press Right Ctrl Key for 3S

M1W HE RGB System Commands (Mac)

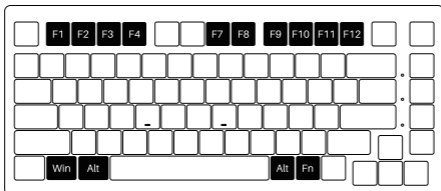


<u>F1</u>	<u>Decrease display brightness</u>	<u>F7</u>	<u>Skip back (Audio)</u>	<u>F11</u>	<u>Decrease Volume</u>
<u>F2</u>	<u>Increase display brightness</u>	<u>F8</u>	<u>Pause/Play (Audio)</u>	<u>F12</u>	<u>Decrease Volume</u>
<u>F3</u>	<u>Open mission control</u>	<u>F9</u>	<u>Skip forward (Audio)</u>	<u>Left Win</u>	<u>Option</u>
<u>F4</u>	<u>Activate Siri</u>	<u>F10</u>	<u>Mute</u>	<u>Left Alt</u>	<u>Command</u>
<u>Right Alt</u>	<u>Command</u>				<u>Fn+F1-F12 = F1~F12</u>

 
M1W HE RGB Backlight Settings

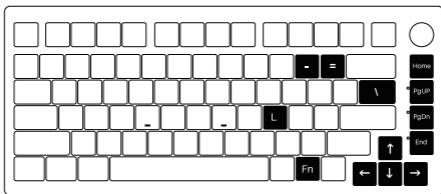

<u>fn++</u>	<u>Slower Animation</u>	<u>fn+home</u>	<u>Effect1, Effect2, Effect3, Effect4, Effect5</u>
<u>fn+=</u>	<u>Faster Animation</u>	<u>fn+pgup</u>	<u>Effect6, Effect7, Effect8, Effect9, Effect10</u>
<u>fn+↑</u>	<u>Bright</u>	<u>fn+end</u>	<u>Effect11, Effect12, Effect13, Effect14, Effect15</u>
<u>fn+↓</u>	<u>Dim</u>	<u>fn+pgdn</u>	<u>Effect16, Effect17, Effect18, Effect19, Effect20</u>
<u>fn+←</u>	<u>Set animation direction to left</u>	<u>fn+\</u>	<u>This shortcut allows you to set the backlight color to 7 single color with RGB loop effect</u>
<u>fn+→</u>	<u>Set animation direction to right</u>	<u>fn+L</u>	<u>Light Off/On</u>

 M1W HE Wireless/Wired Connection Guide

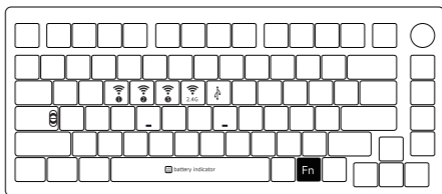

Fn+	E	Bluetooth Device 1	 The switch is located under the CAPS key	Top: Mac (built-in power supply on)	
	R	Bluetooth Device 2		Middle: Default Windows (built-in power supply off)	
	T	=		Bluetooth Device 3	Bottom: Windows (built-in power supply on)
	Y			2.4G Wireless Device	
	U			Wired Mode	

Bluetooth Pairing

After turning on the keyboard, press Fn+E/R/T to enter Bluetooth mode. Press and hold the Fn+E/R/T combination key for 3 seconds to put the keyboard in pairing mode, with the red/blue/yellow indicator light flashing quickly. Once the connection is established, the indicator light will stay on for 2 seconds. If the device fails to connect, the indicator light will turn off and the keyboard will enter sleep mode.

2.4G Pairing

After turning on the keyboard, press Fn+Y to enter 2.4G mode. Then press and hold the Fn+Y combination key for 3 seconds to enter pairing mode. Then insert the receiver, and the indicator light will flash quickly. Once pairing is successful, the LED indicator will stay on for 2 seconds. If no available device is found within 30 seconds, the LED indicator will turn off and the keyboard will enter sleep mode.

Battery Level Check

Press the Fn + Space combination keys to check the battery level.

If the battery level is below 30%, the Number 1 & Number 2 keys will show a red light.

If the battery level is below 100%, the Number 1-9 keys will display green light correspondingly.

If the battery is fully charged, the Number 0 key will show a green light.



Red light

Green light

Key Remapping/LED Effects/Customized Actuation Setup Instruction

1. Fundamental features such as key/lighting effects customization can be programmed with MonsGeek Driver.
2. Hall effect switches related functions can be programmable in MonsGeek Driver. Please check for the latest firmware and driver for optimized gaming experiences and new features.
3. Users can download the driver via www.monsgeek.com

MONSGEEK Warranty and Service Statement

1. MONSGEEK provides One-Year warranty for customers in mainland China. For other regions, please contact your seller (MonsGeek distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. MONSGEEK will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
3. Disassembling the keyboard without manufacturer/seller's instruction will immediately void the warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

Company: Shenzhen Yinchon Technology Co., Ltd

Address: 33 Langbi Rd, Bitou Community 1st Industrial Zone, Bao'an District, Shenzhen, China

Tel: 0755-23216420

Website: www.monsgeek.com

Origin: Shenzhen, China



WARNING:

Water and Beverages can't be poured into the Keyboard.



中国制造/Made in China

Precautions

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.

