

# wind car


## Principle

The assembled wind car drives the propeller through the rotating motor to generate air flow, which pushes the car run.

## Notes

- 1 keep 1--1.5MM space between the axle sleeve and the wooden axle frame to ensure that the wheel can rotate freely
- 2 Install the wheel, you can put the wheel and shaft perpendicular to the table top, with a small hammer or hard object gently knock in.
- 3 If the windmill does not move forward or the direction is opposite, then exchange the connecting motor wire position will be ok .

## ACCESSORY

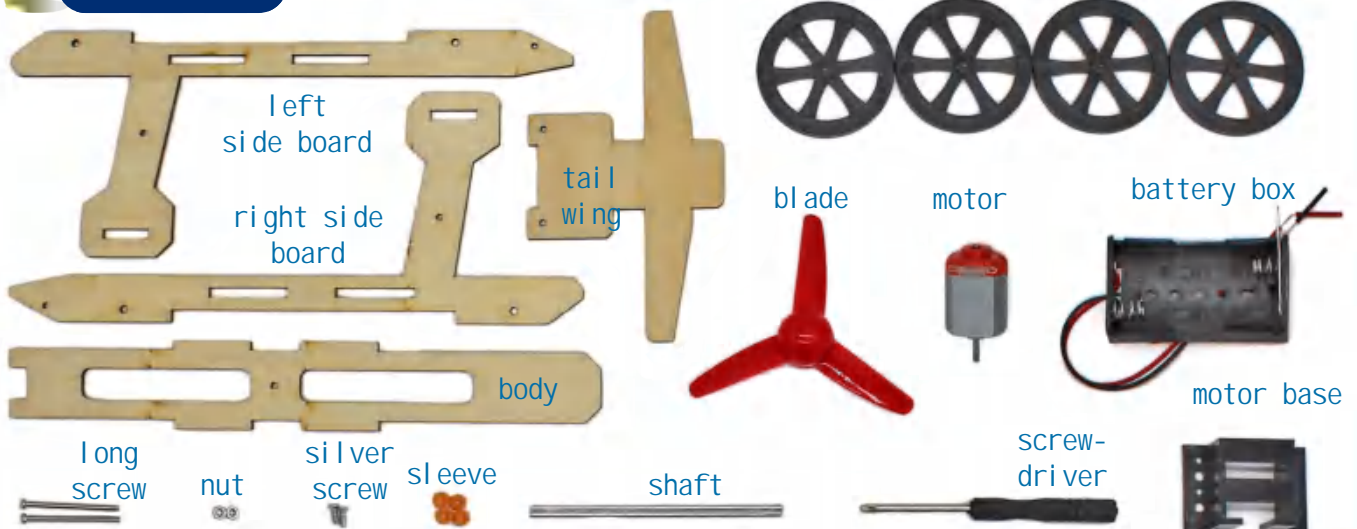


Insert tail wing into left side board

1



Insert right side board

2

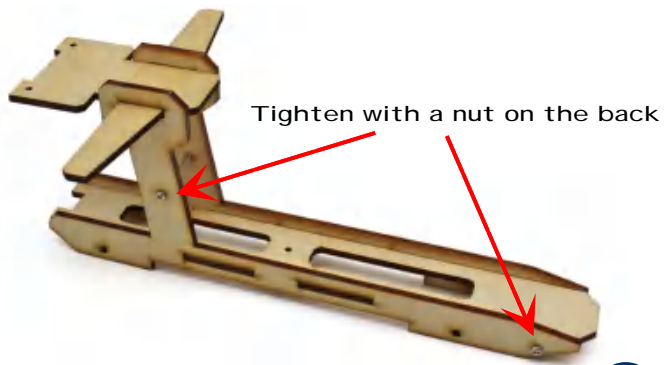

Secure the frame with screws

3



Installation fan blade on motor and install motor base


4

assemble silver screw



fix motor base

5

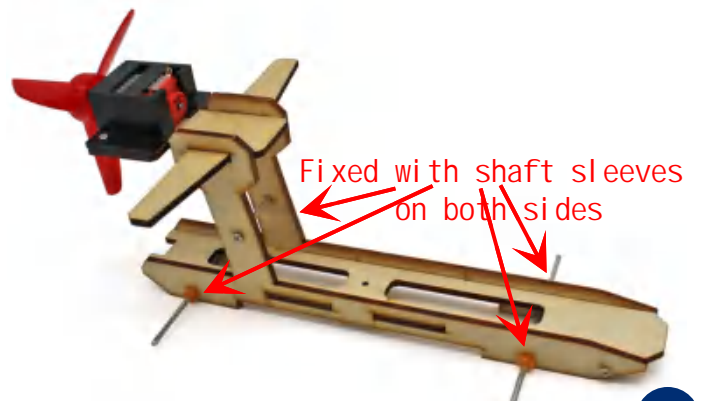

install shaft

6



instal wheels

7



Paste the battery box and connect with motor

8

wind power car



wind car 002



tank

