

## Programming the Edge Remote Control Receiver to Work with a New Remote

### A. Remove 4 Screws



### B. Move Down PCB with Panel



### **C. Remove Small Cover on Receiver**



### **D. Follow next specification for programming**

Locate the two test pins that are shown below. These are difficult to see when the receiver is installed in the machine and you may find a mirror helpful. You will need to shorten the two pins with a screw driver. "Shorting" means bringing the two pins in contact by touching both at the same time with a piece of electrically conducting metal.





1. Turn the machine on to power up the remote control receiver.
2. Short the two test pins. An LED on the left of the receiver box will stay on.
3. Press and hold either button on the remote control transmitter, when the LED of the remote control transmitter goes off, release the button.
4. Press and hold the same button on the transmitter again. When the LED lights up and goes off again you will confirm that the code of the transmitter has been learned by the receiver.
5. Each receiver can store up to 4 codes.

**E. Turn off Machine; Install Small Cover and the PCB with Panel Back**