

79101

Rotatable Screen Timer
rotary sprinkler timer

Feature


- Generally, outdoor faucets are installed at a lower height. Compared with ordinary Timers, the screen of this Timer can be rotated to adjust the angle of the panel. Users do not need to squat down to set the product, and can easily operate the panel by simply adjusting the angle of the screen.
- Angle can be adjusted to remove/prevent dust buildup on the panel.
- Swivels up to 90 degrees up and up to 36 degrees down.

Specification

- Batteries: Two AA (1.5V) alkaline batteries (not included)
- Withstanding water pressure: 10-100 PSI
- Withstanding temperature: Do not exceed 120°F, please avoid low temperature.

⚠ WARNING: FOR OUTDOOR COLD WATER USE ONLY

Mode Description

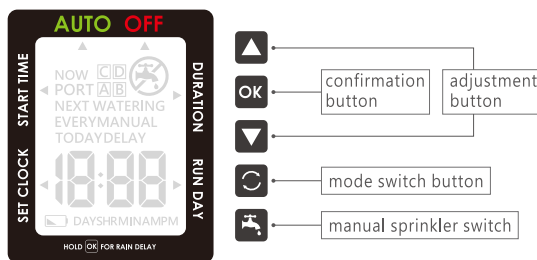


- **SET CLOCK** Set standard time
- **START TIME** Select the time to start watering
- **DURATION** Set the length of time for watering
- **RUN DAY** Set watering frequency
- **AUTO** Enable customized sprinkler/manual operation function
- **OFF** Turn off the sprinkler function

STEP.1 SET CLOCK




1. Press **⌚** to switch the mode to **SET TIME** to set the standard time.
2. Press **OK** to start setting, after the number flashes **▲ ▼** to adjust Time, after setting, please press **OK** to confirm the time.
3. Set the hour, minute and **AM** or **PM** according to the above actions.

 STEP.2 START TIME

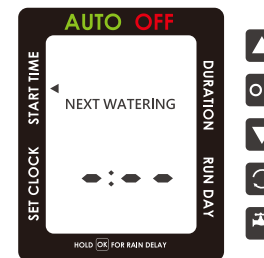

1. Press **⌚** to switch the mode to **START TIME** to set the watering start time.
2. Press **OK** to start setting. After the number flashes, you can adjust **▲ ▼** the time. After setting, press **OK** to confirm the time.
3. Set the hour, minute and **AM** or **PM** according to the above actions.

 
STEP.3 DURATION

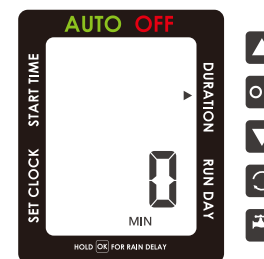

1. Press **⌚** to switch the mode to **DURATION** to set the duration of watering.
2. Press **OK** to start setting, after the number flashes **▲ ▼** to adjust Time, after setting, please press **OK** to confirm the time.

Remarks: Sprinkling duration can be 1-360 minutes.

 
STEP.4 RUN DAY

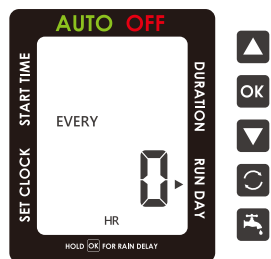

1. Press to switch the mode to **RUN DAY** to set the sprinkler frequency.
2. Press to start setting. After the number flashes , you can adjust the time. After setting, press to confirm the time.
3. You can choose the watering frequency of 1 hour, 3 hours, 6 hours, 12 hours or 1-7 days.

Example: If you set it to 1 hour, it means watering every 1 hour.

 STEP.5 AUTO

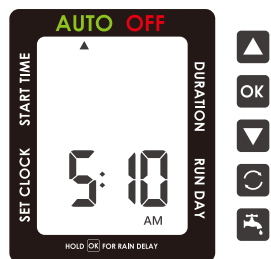

1. Press to switch the mode to **AUTO**, and the timer will start sprinkling water automatically according to your settings.
2. The screen will alternately flash the current time and the next watering time.

 
Remarks: STEP1-4 must be completed before using AUTO mode.

MANUAL WATERING



1. Please set the manual sprinkler function in **AUTO** mode.
2. Press to start manual watering.
2. Press again to turn off the sprinkler.


SINGLE WATERING

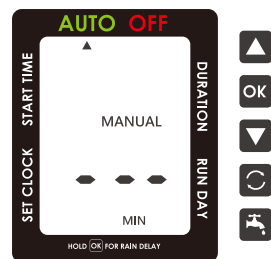

1. Please set the single sprinkle function in **AUTO** mode.
2. Press down to set the time. After the minute number flashes, you can adjust the sprinkling duration. After the setting is complete, press to start up.
3. During sprinkling, press any button to end the sprinkling function.

Remarks: Sprinkling duration can be 1-360 minutes.

 RAIN DELAY

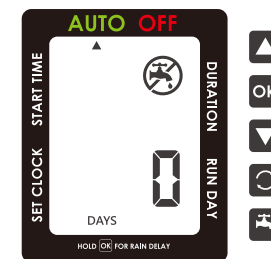

1. Please set the rain delay function in **AUTO** mode.
2. Press and hold for three seconds, when the screen appears and the numbers start to flash, you can set the delay days.
3. To adjust the number of days, press to complete the setting.
4. The screen will alternately flash the current time and the number of days to delay watering.
5. Press any button to end the rain delay function.

Remarks: The number of days of delay can be 1-7 days.

Troubleshooting

If you cannot sprinkle water at the scheduled time

● **please check:**

- Whether the time setting is correct, and confirm that the time is AM or PM
- Please adjust the mode to AUTO
- Whether the delayed watering mode is turned on

Unable to turn off the sprinkler

● **please check:**

- If time setting for DURATION ?
- If time setting for RUN DAY ?

Unable to sprinkle water

● **please check:**

- Is it set to manual mode ?
- Is the faucet turned on ?
- Is the battery low ?
- Check if the time is correct ?
- Is the delayed sprinkler function turned on ?