

WiFi Setup for Chrome Players

For newer versions of Chrome:

1. Reboot your player by unplugging it from power for a few seconds. When it comes back up, if it can't connect to the Internet then it will present a screen where you can select your network and then type in your password.
2. Connect a wired or wireless keyboard and mouse to your player's USB port, select your network and type in its password (if applicable).

For older versions of Chrome:

Older version of Chrome had a bug where when the network screen is presented it won't let you type in your password. Here is how you get around this:

1. Connect a wired or wireless keyboard and mouse to the USB port on your player.
2. Reboot your player by unplugging it briefly from power.
3. SOON after starting up (on the white "Playr" screen), hit CTR+ALT+S to exit out of the signage app as directed at the bottom.
4. At this point you may now see a prompt for connecting to your WiFi. If not, then click on the time at the lower-right corner of the screen. Inside you will see a line that says "no network." If you click on that you can select your WiFi network and type in the password.
5. Disconnect your keyboard/mouse and then reboot your player (turn it off and back on) and it will begin playing over WiFi!
6. If your player hasn't been registered yet then you will see steps on-screen for how to connect it to your account.

Thank you!

SmartSign2go