Kids Game smart watch

Quick Guide

Touch instructions: Swipe left or right to switch menus. Swipe up and down to back the previous menu, touch enter the menu.

*Note: The function of this product could be subject to change. For the functional modification that will not affect the use of this product, this manual will not be revised. Thank you for your understanding.

1 Get Started

1.1 Power On/Off

Power On: Press and hold the power button

Shutdown: Press and hold the power button **U**

- *Before turn on the watch, make sure that the battery is properly installed in the device.
- * If the device fails to turn on, this could be caused by low battery. Please try again after recharging the device for 5 minutes.

1.2 Charging

Remove the silicone plug on the USB charging port, and then connect the Micro-USB end of the cable to the watch and the other end to the USB charger.

*After the charger is plugged to the power socket, the power icon at the top right of the screen will start scrolling, indicating that it is in charging mode. The power icon will stop scrolling with a full battery icon when fully charged.

2 Functions

2.1 User interface



You can switch between multiple wallpapers and watch faces.



2.2 Camera

In the main menu, slide to select "Camera" and click to enter, you can enter the preview interface, click the left button to take a picture, right button to enter the image viewer.

2.3 Photos

In the main menu, slide to select Photos and click to enter, you can view the saved photos.

2.4 Video

In the main menu, slide to select "Video" and click to enter, you can enter the preview interface, click the left button to start recording, right button to enter the video player.

2.5 Player

In the main menu, slide to select "Player" and click to enter. After entering, a list of recorded videos will be displayed, select and click to play.



2. 6 Music

Swipe to select music in the main menu, click to enter, you can play the downloaded stored music.

download".mp3"music to watch storage disk: My Music.

2.7 Record

In the main menu, slide to select "Record" and click to enter, you can record.


Note: need memory in watch.

2.8 Calculator

In the main menu, slide to select "Calculator" and click to enter, you can calculate.

2.9 Alarm

In the main menu, slide to select "Alarm" and click to enter, you can set the alarm, up to three different alarms are supported. can set switch on/off, set time and period.

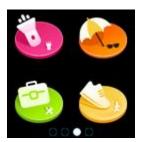

2.10 Torch

In the main menu, slide to select "Torch" and click to enter. The flashlight can be turned on and off as needed, and be careful not to illuminate the eyes directly.

2.11 Theme


Swipe to select wallpaper in the main menu Click to enter, you can change to the preset wallpaper.

2.12 Tools

In the main menu, slide to select the tool and click to enter, there are calendar, stopwatch, timer, file manager, reset wallpaper.

2.13 Pedometer

In the main menu, slide to select "Pedometer" and click to enter, You can choose to open, close and clear. After turning on Pedometer, the system will automatically record the number of steps per day.

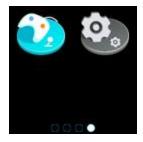

2.14 Set up

The following items can be set in the settings

♦Language

Can set 5 different languages

◆Time And Date

You can set the time and date of the watch. Optional date and time format

♦Ringtone volume

After switch on, you can adjust the volume of the ringtone Turn to the lowest to mute.

2.15 Games

sixteen games are installed in the watch

♦ Basketball Shoot master



How to play: Press the basketball to shoot, When the backboard is going to move to the middle, control to shot.

♦ Bee War



Protect your star from the attack by your enemy. Wipe out all of them before they arrive at your base station.

How to play: tap left/right to move your war craft to shoot, need to hit twice to destroy the enemy.

Score as much as you can! You have a total of three opportunities.

You can set "Easy", "Normal" and "Hard" modes separately, and set music on or off and view.

♦ Pinball Hit Bricks



How to play: Destroy all bricks to progress to the next level. White bricks give a special 3-ball bonus. Blue bricks need to be hit 2 times. Score as much as you can!

The "Easy", "Normal" and "Hard" modes can be set separately. And set turn music on/off or check the score.

♦ Car Grab Goods



How to play: Click the screen left or right to move the car, as much as possible to catch the airdropped supplies. You have a total of three opportunities. The "Easy", "Normal" and "Hard" modes can be set separately. And set turn music on/off or check the score.

♦Mario eat gold



How to play: You need to collect as many coins as possible and jump over platforms, Don't fall or hit the columns, or you'll die! Press once to jump, press twice for a big jump.

The "Easy", "Normal" and "Hard" modes can be set separately. And set turn music on/off or check the score.

♦ Ultimate racing



How to play: Press and hold the car to move left and right to switch lanes. The car in front may drop gold coins. Eat as many gold coins as possible. To avoid crashes, you have only one chance.

Can set turn music on/off or check the score.

♦ Math wizard




According to the question, decide whether the result is correct or not.

♦ Galaxy Wars



Move the fighter to kill as many enemies as possible, and move to the next level in 60 seconds

♦ Fighter pilot

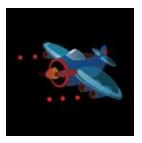

Fly your fighter plane through enemy territory and complete your mission to return safe and sound.

♦ Turnable



Spin that wheell and see where you land. Each color lands on a number which tell you how many times you need to click.

Pay close attention as you need to follow instructions carefully.

It may land on yellow and say NOT YELLOW 5x's. This means do NOT click yellow but any other color 5 times total.

Good luck!

♦ Penalty 2019



Beat the clock and see how accurate you are at hitting penalty shots

Even Number Game

4	6	3
9	5	2
8	9	6

Select to play an even or odd game. Depending on what game you are playing cli ck on all the even or odd numbers in the game. Make a mistake or miss a number and the game is over.

♦ Car Chaos



Get your red sports car out of the parking lot by moving around the cars to get o ut through the exit.

♦ Snake in the grass



Move the snake around the screen by swiping in the direction you want it to move. Eat different objects to give the snake temporary powers. but be careful, they could be hard to control.

♦ Pick up Ping pong



Move the racket to catch the table tennis and have a table tennis match.

♦ Jelly Fun



Exchange jelly seats so that three jelly can be arranged in a row or column.

3. Hardware Specifications

No.	Item	Parameter/Model
1	CPU model	MT6261
2	Communication system	GSM
3	Screen	1.44 inch; IPS HD colored touch screen
4	Resolution	128*128
5	Camera	80,000 pixels
6	Battery	400mAh lithium polymer battery
7	Internal memory	32MB
8	Cover material	Plastic (ABS+PC)
9	Strap material	Dow Corning food grade silicone
10	Watch size	5 2mm*38.2mm*1 3.8mm
11	Watch weight	41.2g
12	Optional languages	English (default), French, Spanish,
12	optional languages	German, Italy

4. Package Contents

No.	Item	Quantity
1	Cell Phone Watch (with battery)	1
2	USB cable	1
3	Instruction Manual	1

^{*} Please check the contents in the checklist carefully. If any of them is missing, please contact the seller in time. Thank you for choosing our product!