

The Avura Battery is a lithium-ion rechargeable battery designed for use with the Avura Pulse ozone generator.

## CHARGING

A fully charged battery pack will power the Pulse for approximately seven (7) hours of run time. The battery is shipped in a partially charged state. Before first use, charge the battery using the Avura Battery Charger for a minimum of six (6) hours to reach a full charge.

The four (4) battery level indicator lights show what percentage of charge remaining in the battery.

- 4 lights 100% charge or ~ 7 hours
- 3 lights 75% charge or ~ 5 hours
- 2 lights 50% charge or ~ 3.5 hours
- 1 light 25% charge or ~ 1.5 hour

## **SAFETY**



**WARNING** 



Risk of Fire and Electric Shock. No User Serviceable Parts

To prevent serious injury or death:

- · DO NOT charge unattended.
- · ONLY use original lithium-ion battery packs.
- DO NOT use the battery pack or charger for any use other than its intended purpose. The battery pack voltage must match the battery charger voltage.



- DO NOT expose to rain or allow any liquids on or inside the Pulse. The risk
  of electric shock and the potential for fire are increased should the unit,
  charger or battery pack be exposed to water or submerged in liquid of
  any kind.
- DO NOT charge the Pulse when ambient temperatures are below 32°F (0°C) or higher than 100°F (38°C). Do not charge in direct sunlight.
- ALWAYS inspect the battery charger and cords prior to each use. If dropped or damaged, do not use the charger and discard immediately.
- DO NOT use if the battery pack is dropped, punctured, crushed and/or dented. Contact Avura to order a replacement battery pack.
- · DO NOT modify battery pack any way.
- DO NOT use the battery pack if it shows visible damage. The battery pack may emit smoke or gases if it becomes damaged or is used incorrectly. Respiratory tract irritation may occur, and users should seek medical attention if they experience any adverse effects. Do not allow any others to approach the Pulse. For assistance, please call 641.450.1043 or email info@avura.com.
- Battery leakage may occur under extreme usage or temperature conditions.
   Avoid contact with skin and eyes. Battery liquid is caustic and could cause chemical burns. If battery liquid comes in contact with skin, wash quickly with soap and water. If the liquid contacts your eyes, immediately flush eyes with water for several minutes and seek medical attention.
- DO NOT force the battery pack into the Pulse. The battery pack should not be excessively difficult to insert or to remove.
- · Battery charging times may increase with battery age and usage.
- ONLY grab the charger by the plug and not the cable when plugging and unplugging from the wall.
- DO NOT place the charger or the battery pack near flammable materials.
   Ensure the battery pack is completely dry and the Pulse is placed on a fireproof surface before charging. There is a risk of fire due to the heat generated during charging.
- ALWAYS keep the battery pack and charger away from children.

