



- Manuel de l'utilisateur
- Manuel de pièces

- Operator's manual ●
- Parts manual ●

Pulvérisateur Utilitaire

Utility sprayer

Modèle ● Model

**PM5G12V**

**PM5G12V150**

**MS Gregson inc.**

4300 Vachon  
Drummondville  
Qc, Canada, J2B 6V4

Tel. 819-474-1910  
Fax 819-474-5317  
[info@msgregson.com](mailto:info@msgregson.com)  
[www.msgregson.com](http://www.msgregson.com)



LISTE DES RUBRIQUES

LISTOF CONTENTS

INTRODUCTION

INTRODUCTION

GARANTIE

WARRANTY

REMISAGE POUR L'HIVER  
ET / OU TRANSPORT PAR  
TEMPS FROID (GEL)

WINTERIZATION AND / OR  
COLD TEMPERATURE  
TRANSPORTATION (FREEZING)

SCHÉMA D'ASSEMBLAGE

DRAWING ASSEMBLY

SCHÉMAS ET LISTES DES  
COMPOSANTES

DRAWINGS AND  
COMPONENTS LISTS

VUES EXPLOSÉES DES COMPOSANTES

PARTS BREAK DOWN

## **INTRODUCTION**

Merci d'avoir choisi un produit de qualité de **MS Gregson inc.**. Nous sommes heureux de vous compter parmi les propriétaires satisfaits de nos pulvérisateurs.

Plusieurs années de recherche ont mené au développement de cette série de modèles et seulement des pièces et matériaux de qualité sont utilisés. Chaque machine est soigneusement testée et inspectée avant de quitter notre usine pour vous assurer des années de performance.

Pour une performance continue, souvenez-vous que cette machine représente un important investissement de votre part mais, bien entretenue, elle vous retournera votre investissement plus d'une fois. Comme pour tous les équipements mécaniques, votre machine requiert une installation adéquate, une bonne opération et l'entretien spécifié dans ce manuel.

Veuillez lire ce manuel très attentivement et au complet avant d'installer et d'opérer votre machine. Examinez votre machine, ses accessoires et la caisse d'emballage pour noter tout dommage ou pièce manquante. Rapportez rapidement au transporteur toute réclamation pour perte ou dommage.

## **POLITIQUE DE GARANTIE MS GREGSON**

### **GARANTIE LIMITÉE**

Les machines fabriqués par **MS Gregson inc.** sont garantis, à l'acheteur initial au détail, comme étant exempts de vices de matériaux ou de fabrication pour les délais spécifiés ci-dessous. Les conditions d'utilisation normale conformes aux instructions décrites dans le manuel de l'utilisateur s'appliquent. Cette garantie limitée est sujette aux exclusions ci-dessous énumérées. Elle est calculée à partir de la date de livraison à l'acheteur initial et s'applique aux composantes originales seulement. Les pièces remplacées sous cette garantie jouissent du délai restant de la garantie pour les composantes correspondantes.

### **GARANTIE DE 1 AN SUR LES PIÈCES, 1 AN SUR LA MAIN-D'OEUVRE**

Les composantes, excluant les accessoires mentionnés ci-dessous et les items d'entretien courant mentionnés ci-dessous, sont couvertes par une garantie de 1 an sur les pièces et la main-d'œuvre.

### **GARANTIE OFFERTE PAR D'AUTRES MANUFACTURIERS**

Les moteurs électriques ou à essence, batteries, pneus, jantes, contrôleur de taux ou autres items dont le manufacturier offre directement une garantie, sont réparés dans un centre de service autorisé du manufacturier correspondant. **MS Gregson inc.** ne peut offrir de garantie sur ces items.

### **EXCLUSIONS DE LA GARANTIE**

## **INTRODUCTION**

Thank you for having selected a quality **MS Gregson inc.** product. We are pleased to have you included among the many satisfied owners of our sprayers.

Years of research have brought into the development of these fine products and only top quality components and materials are used throughout. Every machine is carefully tested and inspected before leaving our plant to ensure you years of performance.

For a continuous performance, remember that this washer is a substantial investment for you, but properly cared and maintained it will return this investment many times. As with all mechanical equipment, your washer requires proper installation, proper operation and maintenance as specified in this manual.

Please read carefully the entire manual before installing and operating this machine. Examine machine, accessories and crate carefully for shipping damage or missing parts. Report promptly any shortages or damage claims to freight carrier.

## **MS GREGSON WARRANTY POLICY**

### **LIMITED WARRANTY**

The machines manufactured by **MS Gregson inc.** are warranted, to the original purchaser, to be free from defects in materials and workmanship for the periods specified below. Normal use conditions, according to the instructions in the operator's manual, apply. This limited warranty is subject to the exclusions listed below, is calculated from the date of delivery to the original purchaser, and applies to the original components only. Parts replaced under this warranty will assume the remainder of the corresponding part's warranty period.

### **1 YEAR PARTS, 1 YEAR LABOUR WARRANTY**

The components, excluding accessories listed below and normal wear items listed below, are warranted for 1 year on parts and labour.

### **WARRANTY PROVIDED BY OTHER MANUFACTURERS**

Motors, engines, batteries, wheels, rims, rate controller or other items which are warranted by their respective manufacturers, are serviced through these manufacturer's local authorized service centres. **MS Gregson inc.** cannot provide warranty on these items.

### **EXCLUSIONS OF WARRANTY**

- Ajustements de routine et articles d'entretien courant tels que lubrifiants, courroies, boyaux, joints toriques, tamis de filtre, fusibles, systèmes d'étanchéité de pistolets.
- Réparations requises suite à une collision, un accident, un choc, un abus, des modifications apportées à l'équipement sans autorisation, une installation inadéquate, un mauvais entretien, une utilisation contraire aux directives fournies dans ce manuel ou au bon sens commun.
- Réparations requises suite au gel ou à l'exposition à des produits corrosifs.
- Réparation requise suite à des fluctuations de tension électrique d'alimentation.
- Réparations requises suite à une alimentation insuffisante en eau ou à une eau de mauvaise qualité.
- Dommage aux cultures dû à un mauvais calibrage ou usage de l'équipement.
- Dommage aux cultures ou déversement dû à un bris de composante et/ou un accident.
- Frais résultant de l'arrêt de l'unité durant une réparation ou pour toute autre raison.
- Frais de transport et/ou de déplacement.

- Routine adjustments and normal maintenance items such as lubricants, belts, hoses, O-rings, filter screens, fuses, gun seal kits.
- Repairs required as a result of collision, accident, bumping, misuse, modifications made to the equipment without authorization, incorrect installation, lack of required maintenance, use contrary to the instructions included in this manual or to the common sense.
- Repairs required as a result of freezing or exposition to corrosive products.
- Repairs required as a result of voltage fluctuations of the electric supply.
- Repairs required as a result of insufficient water supply or poor quality water.
- Damage to crop due to wrong calibration or incorrect use of the equipment.
- Damage to crop or spill due to components failure and/or accident.
- Additional charge resulting from paralyzation and repair of the equipment.
- Transportation and/or travelling.

#### **EXÉCUTION DE RÉPARATION PENDANT LA PÉRIODE DE GARANTIE**

Pour obtenir le service de garantie sur des pièces garanties par **MS Gregson inc.** pendant la période de garantie, vous devez montrer à votre concessionnaire une preuve d'achat de votre équipement. Si l'équipement est installé de façon permanente, les réparations seront effectuées sur place par le concessionnaire. Pour obtenir le service de garantie sur les composantes garanties par d'autres manufacturiers, votre concessionnaire peut vous aider à obtenir ces services dans un centre local de service autorisé.

Le concessionnaire a la responsabilité d'effectuer les réparations couvertes pendant la durée de la garantie.

Ces réparations se feront à l'atelier du concessionnaire pour les équipements mobiles ou chez le client au choix du concessionnaire ; le client au détail a la responsabilité d'apporter son équipement chez son concessionnaire.

Les pièces changées sous garantie deviennent la propriété de **MS Gregson inc.**

#### **LIMITE DE LA RESPONSABILITÉ**

La responsabilité de **MS Gregson inc.** pour les dommages particuliers, accidentels ou conséquents est expressément déniée. En aucun temps, la responsabilité de **MS Gregson inc.** ne peut excéder le prix d'achat du produit en question. LA PRÉSENTE GARANTIE TIENT LIEU DE TOUTE AUTRE GARANTIE, EXPLICITE OU IMPLICITE, Y COMPRIS TOUTE GARANTIE IMPLICITE D'ADAPTATION POUR UNE UTILISATION PARTICULIÈRE. **MS Gregson inc.** n'autorise aucune autre partie, incluant les concessionnaires **MS Gregson** autorisés, à faire toute représentation ou promesse au nom de **MS Gregson inc.** ou à modifier les termes, conditions ou limitations d'aucune façon. Il est de la responsabilité de l'acheteur de s'assurer que

#### **EXECUTION OF REPAIRS WITHIN THE WARRANTY PERIOD**

In order to obtain warranty service on items warranted by **MS Gregson inc.** within the warranty period, you must show to your dealer a proof of purchase. If the equipment is permanently installed, repairs will be carried out on the spot by the dealer. For warranty service on components warranted by other manufacturers, your authorized **MS Gregson** dealer can help you obtain warranty service through these manufacturers' local authorized service centres. The dealer has the responsibility to carry out repairs within the warranty period.

Repairs will be done at the dealer's repair-shop for mobile equipments ( or at your site upon dealer choice); the purchaser has the responsibility to bring his equipment to his dealer's repair-shop.

The parts changed under warranty become the property of **MS Gregson inc.**

#### **LIMITATION OF LIABILITY**

**MS Gregson inc.** liability for special, incidental, or consequential damages is expressly disclaimed. In no event shall **MS Gregson inc.** liability exceed the purchase price of the product in question. THE WARRANTY CONTAINED HEREIN IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. **MS Gregson inc.** does not authorize any other party, including authorized **MS Gregson** dealers, to make any representation or promise on behalf of **MS Gregson inc.** or to modify the terms, conditions, or limitations in any way. It is the buyer's responsibility to ensure that the installation and use of **MS Gregson** products

l'installation et l'utilisation des produits **MS Gregson** respectent les codes locaux. Bien que **MS Gregson inc.** tente de s'assurer que ses produits rencontrent les codes nationaux, elle ne peut être responsable de la façon dont le client choisit d'installer ou d'utiliser le produit.

## REMISAGE

Rincer et drainer le réservoir, la rampe, les tubes, les boyaux ainsi que la pompe.

Faire fonctionner l'unité en aspirant une solution d'antigel (prestone) de façon à ce qu'elle en soit complètement remplie (boyaux et pompe). **NOTE : ne pas utiliser de liquide lavavitre.**

Enlever la base et le tamis du filtre.

Enlever le cadran à pression et remiser au chaud (ne supporte pas le gel).

S'assurer qu'il ne reste plus de liquide dans les filtres.

Avant de mettre à nouveau l'unité en marche, bien vider et laver le réservoir, les boyaux et la pompe.

conforms to local codes. While **MS Gregson inc.** attempts to assure that its products meet national codes, it cannot be responsible for how the customer chooses to use or install the product.

## STORAGE

Rinse and drain the tank, the boom, the tubes, the hoses and the pump.

Operate the system by sucking an anti-freeze (prestone) solution through the hoses and the pump. **NOTE: Do not use windshield washer fluid.**

Take-off base and filter screen.


Take-off pressure gage and put it in a warm place (it does not support freezing).

Make sure that no liquid is left into the filters.

Before starting the unit again, be sure that the tank, hoses and pump are well emptied and washed.




#	REF.	Q.	L"	#	REF.	Q.	L"	#	REF.	Q.	L"
60	BE-121R	1	5 "	48	BT-N14	2		1	AU-DECMSLOGOA-G	2	
61	BE-121N	1	5 "	49	BT-FW14	2		2	AC-SP0005SGC5	1	
62	BE-162PV/C	1	36 "	50	BT-1434	2		3	JB-2266914PBB	1	
63	LV-121K3150	1	6 "	51	AU-PPM1030	1		4	JB-467614NY	1	
64	LV-381K3150	1	30 "	52	SH-8030813239	1		5	JB-RB11434NY	1	
65	LV-381K3150	1	300 "	53	DO-761232	1		6	JB-RMM0406NY	1	
				54	AU-PP2X464	1		7	JB-33060334	1	
				55	GR-832332	2		8	JB-M1200NY40	1	
				56	AU-11612	1		9	JB-T2212P50	1	
				57	AU-ATC15	1		10	SN-078008	2	
				58	AU-MANUEL	1		11	JB-EL1212NY	1	
				59	JB-IMB0205NY40	1		12	AU-FCP161	2	
								13	DO-779129	1	
								14	MS-CAR5G	1	
								15	BT-M835	1	
								16	BT-FW516	5	
								17	BT-LW516	9	
								18	AU-E30/17	1	
								19	BT-N516	4	
								20	BT-CAR5162	4	
								21	JB-23120A12PP	1	
								22	JB-025FF00300	1	
								23	JB-EL1238NY40	1	
								24	DA-MH4SS	4	
								25	JB-18032ANYB	1	
								26	JB-4251375	1	
								27	JB-CPB028NYB	1	
								28	JB-RB1214NY40	1	
								29	JB-SE12NY40	1	
								30	JB-TT12NY40	1	
								31	JB-RMM0304NY	1	
								32	AU-16605	2	
								33	CA-4004OF	2	
								34	BT-10241RS	4	
								35	BT-FW316	4	
								36	BT-N1024	4	
								37	AU-L141200M	5	
								38	AU-PNS3-G	1	
								39	JB-EL3812NY40	1	
								40	DA-WASHER	1	
								41	JB-8121NY406	1	
								42	JB-22670P15V1	1	
								43	BT-516112	4	
								44	DO-761022	2	
								45	AU-RV58	2	
								46	GR-832505	2	
								47	AU-DECCR11	1	

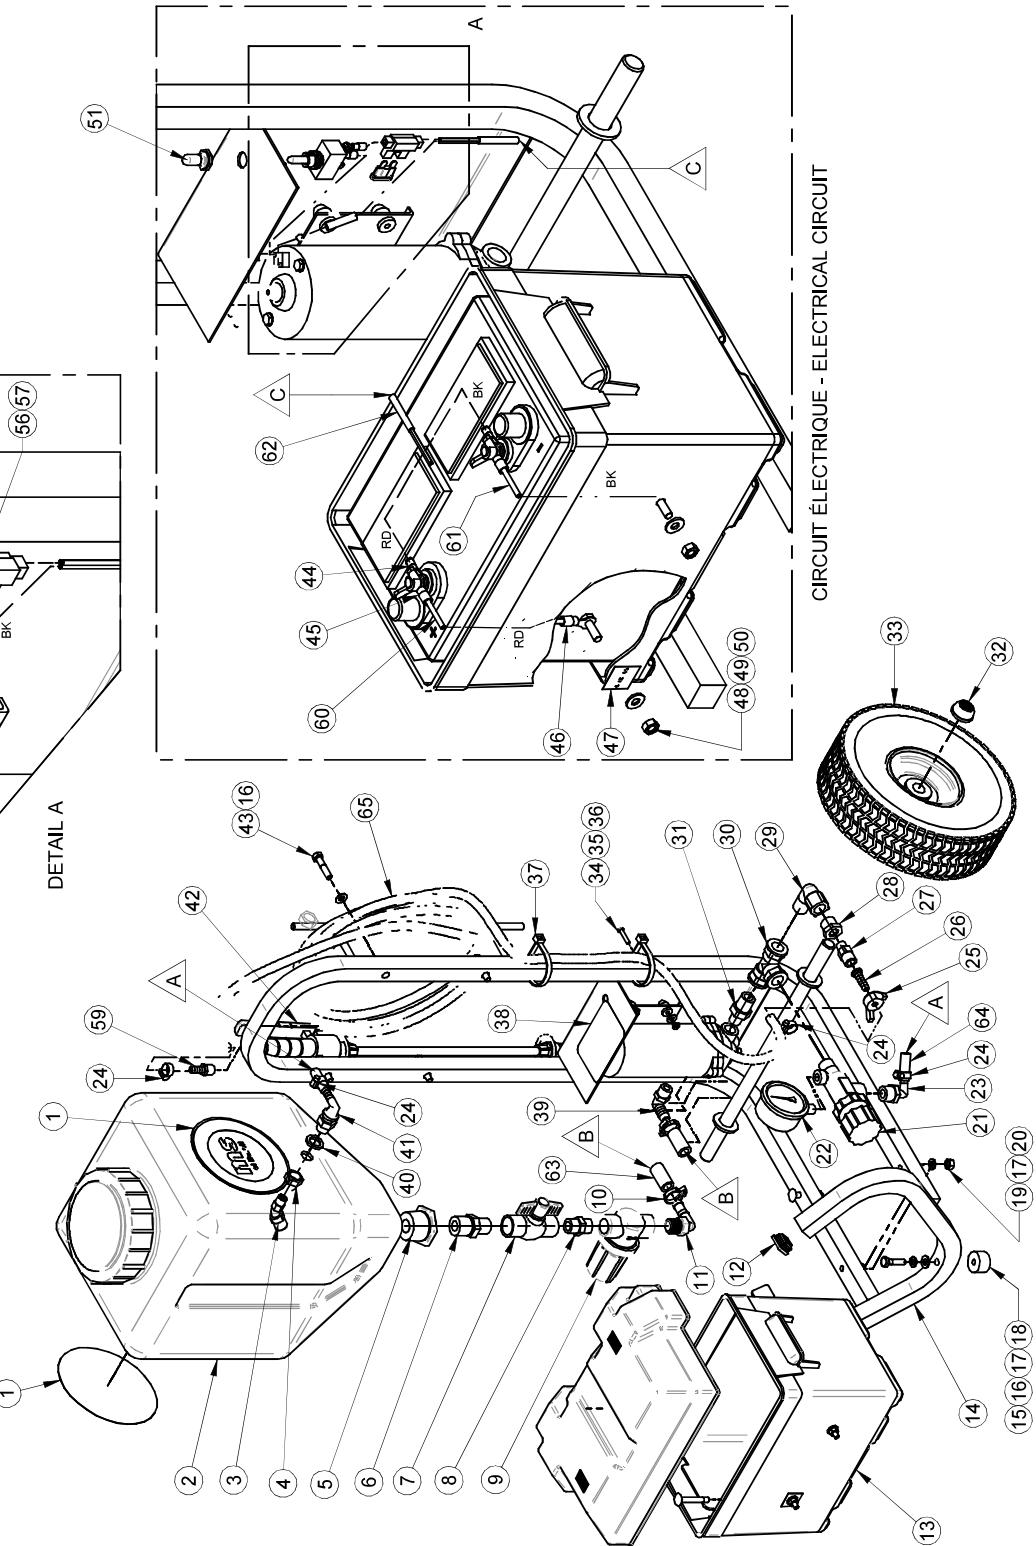

2012/06/18  
PM5G12V150


Pg.1-2  
Rev. 6

#	REF.	Q.	L"	Q.
1	LV-38K3150	1	42"	
2	JB-AA11SQ1	1		
3	JB-8121NY406	1		
4	JB-467614NY	1		
5	JB-2266914PBB	1		
6	JB-8079PP50	1		
7	JB-TFVP2	1		
8	JB-8027NY	1		
9	DA-MH4SS	4		
10	JB-IMB0303NY	3		
11	JB-036FFBT	1		
12	AU-99C	1		
13	JB-TT38NY	1		
14*	AU-15300M	8		

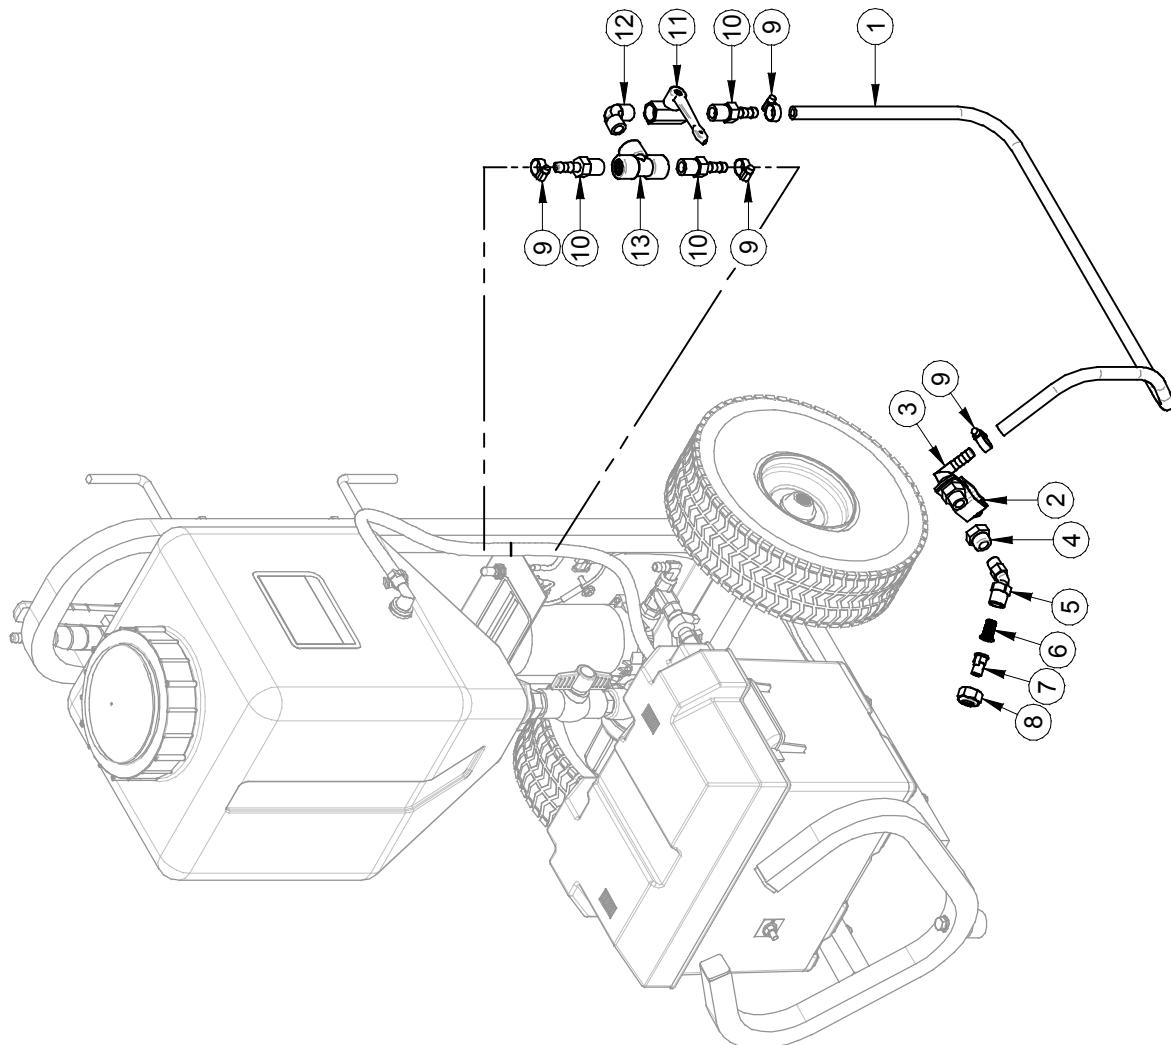


#	REF.	Q.	L"
1	LV-38K3150	1	42"

REF	NO	DESCRIPTION	Q
3B	SH-3018900	No control plate	1
	SH-121001	Screw	3
4	SH-9437900	Head housing	1
5	SH-9439109	Viton by-pass valve kit	1
6	SH-9439505	Viton diaphragm kit	1
7	SH-9338504	2.5 cam drive assy	1
8	SH-1111100	12V DC motor	1

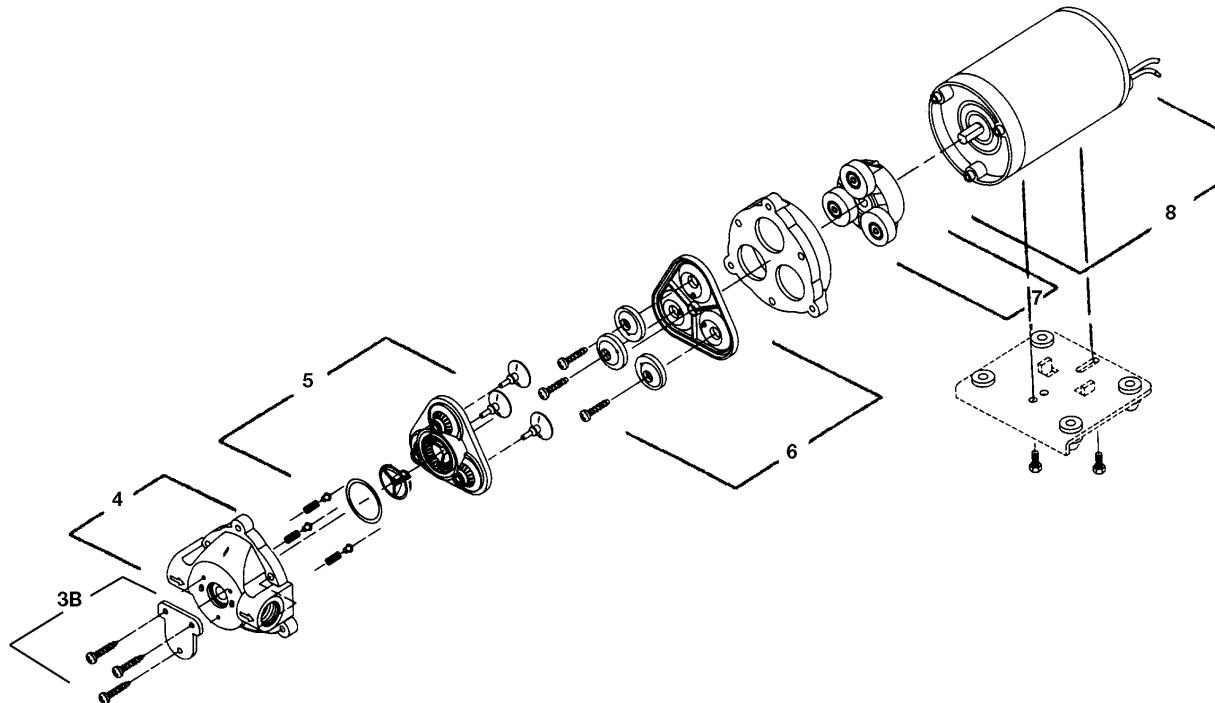


## SPÉCIFICATIONS / SPÉCIFICATIONS

POMPE COMPLÈTE / PUMP ASSEMBLY		POMPE COMPLÈTE / PUMP ASSEMBLY	
Débit	1.2 gal US/min - 4.5 l/min	Membrane	Viton
Flow rate	1.2 US GPM - 4.5 l/min	Diaphragm	Viton
Pression maximale	45 lb/po <sup>2</sup>	Valves	Viton
Maximum pressure	45 PSI	Valves	Viton
Contrôle	"By-pass" interne	Entrée-sortie	3/8" FPT
Control	Internal by-pass	Ports	3/8" FPT
Came	2.5 degrés	Température de liquide	170°F/77°C max.
Cam	2.5 degrees	Liquid temperature	170°F/77°C max.
Commutateur de pression	non	Auto-amorçage	jusqu'à 11 pi d'élévation
Pressure switch	none	Self-priming	Up to 11 ft vertical
Volt	12V DC	Pression max. d'entrée	30 lb/po <sup>2</sup>
Volt	12V DC	Max. inlet pressure	30 PSI
Ampérage	6.23 amp	Usage	Continu
Amperage	6.23 amp	Duty cycle	Continuous
Corps de pompe	Polypropylène	Poids	4.2 lb (1.9 kg)
Pump housing	Polypropylene	Weight	4.2 lb (1.9 kg)

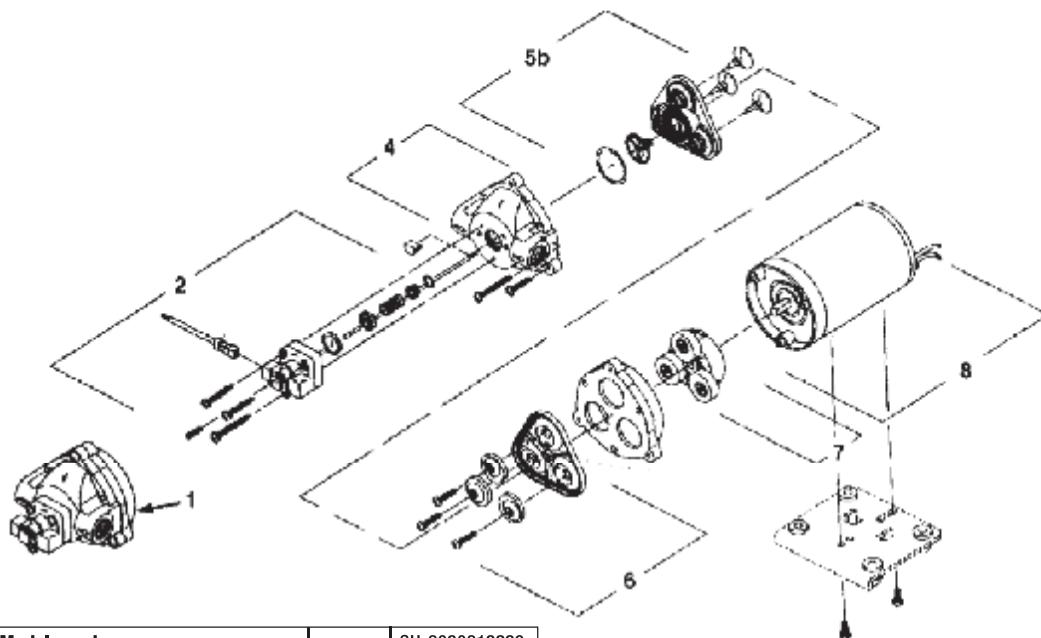

Model number		SH-8030813239
Complete pump assembly	1	N/A
Switch assembly	2	SH-8437520
Upper housing	3	SH-9437901
Bypass/ non bypass valve assembly	4	SH-9439015
Diaphragm assembly	5	SH-9438532
Drive/ impeller assembly	6	N/A
Motor	7	SH-1122700

POMPE COMPLÈTE / PUMP ASSEMBLY		POMPE COMPLÈTE / PUMP ASSEMBLY	
Débit .....	1.5 gal US/min - 5.5 l/min	Valves .....	.Viton
Flow rate .....	1.5 US GPM - 5.5 l/min	Valves .....	.Viton
Pression maximale .....	150 lb/po <sup>2</sup>	Entrée-sortie .....	.3/8" FNPT
Maximum pressure .....	150 PSI	Ports .....	.3/8" FNPT
Contrôle .....	Commutateur de pression	Température de liquide .....	170°F / 77°C max.
Control .....	Pressure switch	Liquid temperature .....	170°F / 77°C max.
Came .....	3.0 degrés	Auto-amorçage .....	jusqu'à 8' d'élévation
Cam .....	3.0 degrees	Self-priming .....	Up to 8' vertical
Volt .....	12V DC	Pression max. d'entrée .....	.30 lb/po <sup>2</sup>
Volt .....	12V DC	Max. inlet pressure .....	.30 PSI
Ampérage .....	12 amp	Usage .....	Continu
Amperage .....	12 amp	Duty cycle .....	Continuous
Corps de pompe .....	Polypropylène	Poids .....	4.2 lb (1.9 kg)
Pump housing .....	Polypropylene	Weight .....	4.2 lb (1.9 kg)
Membrane .....	Santoprene		
Diaphragm .....	Santoprene		

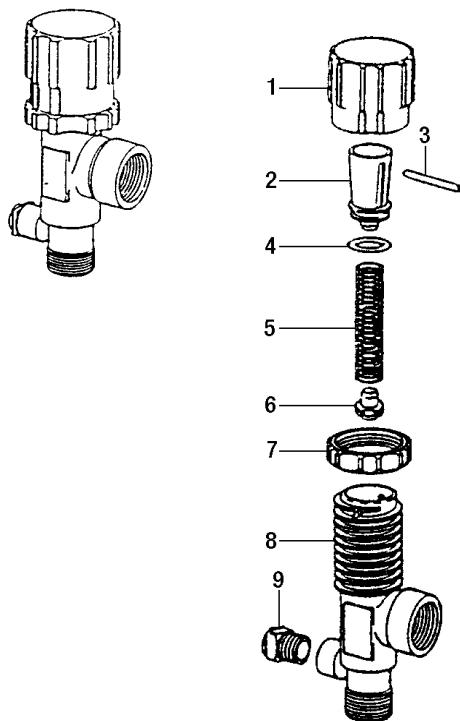


REF NO	DESCRIPTION	Q	
1	JB-CP23122NY	Adjusting cap, nylon (gray)	1
2	JB-CP23124PPB	Spring retainer, polypropylene (black)	1
3	JB-CP23126302SS	Retaining pin, type 302 s. steel	1
4	JB-CP771715EPR	O-ring, EPDM rubber (std)	1
	JB-CP771715VI	O-ring, Viton (opt.)	1
5	JB-CP23127302SS	Spring, type 302 s. steel (std)	1
	JB-CP23127316SS	Spring, type 316 s. steel (opt.)	1
6	JB-CP23125PPB	Guide seat, polypropylene (black)	1
7	JB-CP23123PP	Lock ring, polypropylene (gray)	1
8	JB-CP231281PPB	Body, polypropylene (black) / JB-2312012PP	1
	JB-CP231211PPB	Body, polypropylene (black) / JB-231203400	1
9	JB-840014NY	1/4 pipe plug, nylon	1


Pression max. : 150 lb/po<sup>2</sup>  
 Max. pressure : 150 PSI

STRAINER ASSEMBLY	
N°	DESCRIPTION
JB-12212PP50	1/2" x 50 mesh
JB-12212PP100	1/2" x 100 mesh
JB-12212NYC200	1/2" x 200 mesh
JB-12234PP50	3/4" x 50 mesh
JB-12234PP100	3/4" x 100 mesh
JB-12234NYC200	3/4" x 200 mesh

REF N°	DESCRIPTION	Q
1 JB-2317112PP	1/2" Strainer head	1
1 JB-2317134PP	3/4" Strainer head	1
2 JB-23173EPR	Rubber O-ring	1
2 JB-23173VI	Viton O-ring *	1
3 JB-CP231743304S	50 mesh filter	1
3 JB-CP231745304S	100 mesh filter	1
3 JB-CP231747304S	200 mesh filter	1
4 JB-23172PP	Filter bowl	1
4 JB-23172NYC	Filter bowl, clear	1

\* = Optionnel / Optional

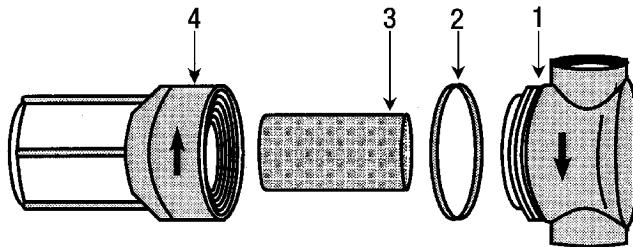

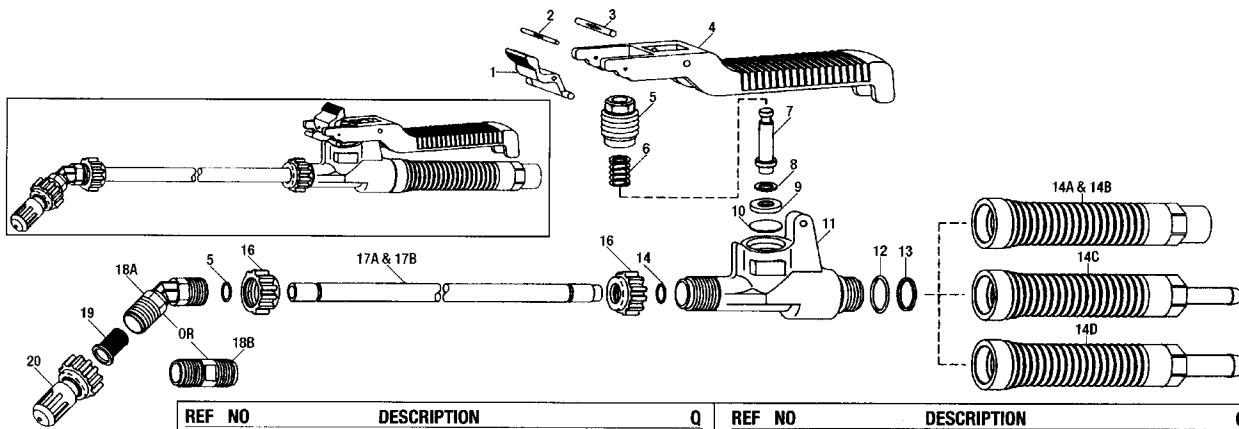

REF NO	DESCRIPTION	Q	REF NO	DESCRIPTION	Q
1 JB-CP22656NY	Trigger lock, nylon (gray)	1	17A JB-CP2266315FPR	Extension tube 15" length, polyester (black) for JB-22670PP15	1
2 JB-CP22671ZP	Groove pin, steel, zinc plated	1	17B JB-CP226324PP	Extension tube 24" length, polyester (black) for JB-22670PP24	1
3 JB-CP22672ZP	Groove pin, steel, zinc plated	1	18A JB-CP22673PP	45° adapter, polypropylene (black)	1
4 JB-CP22655PP	Trigger, polypropylene (black)	1	18B JB-CP22664PP	Straight adapter, polypropylene (black)	1
5 JB-CP22658PP	Spring retainer, polypropylene (black)	1	JB-CP2266515PP	Extension tube sub-assy (JB-22670PP15) (incl. #14, 15, 16A)	1
6* JB-CP22660PHSS	Spring, type 17-7PH, s. steel	1	JB-2266524PP	Extension tube sub-assy (JB-22670PP24) (incl. #14, 15, 16B)	1
7 JB-CP22657NY	Stem, nylon (gray)	1	19 JB-8079PP50	Strainer, polypropylene with s. steel screen	1
8* JB-CP22676NY	Gasket, neoprene	1	20 JB-5500PPBX8VI	Adjustable ConeJet spray tip asb., polypropylene (black)	1
9 JB-CP22659PP	Washer, polypropylene (black)	1	JB-226670PP1514	Spray gun with 15" extension	
10* JB-CP22661VI	Diaphragm, viton	1	JB-B22670PP1514	Spray gun with 15" extension	
11 JB-CP22651PP	Body, polypropylene (black)	1	JB-22670PP15300	Spray gun with 15" extension	
12* JB-CP77172016VI	O-ring, viton	1	JB-22670PP15406	Spray gun with 15" extension	
13 JB-CP39334VI	Gasket, viton	1	JB-22670PP2414	Spray gun with 24" extension	
14A JB-CP22654PP	Handle (1/4" NPT (F) conn.), polypropylene (black) for JB-22670PP14	1	JB-B22670PP2414	Spray gun with 24" extension	
14B JB-CPB22654PP	Handle (1/4" BSPT (F) conn.), polypropylene (black) for JB-22670PP14	1	JB-22670PP24300	Spray gun with 24" extension	
14C JB-CP2265314PP	Handle (1/4" hose shank conn.), polypropylene (black) for JB-22670PP300	1	JB-22670PP24406	Spray gun with 24" extension	
14D JB-CP2265238PP	Handle (3/8" hose shank conn.), polypropylene (black) for JB-22670PP406	1	JB-AB22670PP	Spare parts kit (incl. items marked with *)	
15* JB-CP77172110VI	O-ring, viton	2			
16 JB-CP22668PP	Cap, polypropylene (black)	2			



Flow Regulators are usually mounted behind cultivator shanks for the subsurface application of liquid fertilizers and soil fumigants. They are also used for above-ground streaming applications.

#### How to order:

Specify orifice plate number.

Example: CP4916-8



**Note:** Always insert Orifice Plate with side marked with number facing the outlet.

MATERIAL: Stainless Steel

#### Typical Assembly



To determine l/ha for orifice plates, use the following equations:

$$l/\text{ha} = \frac{60,000 \times l/\text{min} (\text{per nozzle})}{\text{km/h} \times W}$$

Tables based on spraying water.  
See page 150 for conversion factors for other weight solutions.

- = Nozzle spacing (in cm) for broadcast spraying
- = Spray width (in cm) for single nozzle, band spraying or boomless spraying.
- = Row spacing (in cm) divided by the number of nozzles per row for directed spraying.

	l/min							
	0.5 bar	1 bar	1.5 bar	2 bar	2.5 bar	3 bar	4 bar	
CP4916-8	0.013	0.018	0.023	0.026	0.029	0.032	0.037	
CP4916-10	0.021	0.029	0.036	0.042	0.047	0.051	0.059	
CP4916-12	0.031	0.043	0.053	0.061	0.068	0.075	0.087	
CP4916-14	0.040	0.057	0.070	0.081	0.090	0.099	0.11	
CP4916-15	0.045	0.064	0.078	0.090	0.10	0.11	0.13	
CP4916-16	0.053	0.075	0.092	0.11	0.12	0.13	0.15	
CP4916-18	0.069	0.098	0.12	0.14	0.16	0.17	0.20	
CP4916-20	0.086	0.12	0.15	0.17	0.19	0.21	0.24	
CP4916-22	0.098	0.14	0.17	0.20	0.22	0.24	0.28	
CP4916-24	0.12	0.17	0.21	0.24	0.27	0.29	0.34	
CP4916-25	0.13	0.18	0.22	0.25	0.28	0.31	0.36	
CP4916-26	0.14	0.20	0.24	0.28	0.31	0.34	0.39	
CP4916-27	0.15	0.21	0.26	0.29	0.33	0.36	0.42	
CP4916-28	0.16	0.23	0.28	0.32	0.36	0.39	0.45	
CP4916-29	0.18	0.25	0.30	0.35	0.39	0.43	0.50	
CP4916-30	0.18	0.26	0.32	0.37	0.41	0.45	0.52	
CP4916-31	0.20	0.28	0.35	0.40	0.45	0.49	0.57	
CP4916-32	0.22	0.31	0.38	0.43	0.48	0.53	0.61	
CP4916-34	0.24	0.34	0.41	0.47	0.53	0.58	0.67	
CP4916-35	0.25	0.36	0.44	0.51	0.57	0.62	0.72	
CP4916-37	0.28	0.39	0.48	0.56	0.62	0.68	0.79	
CP4916-39	0.31	0.43	0.53	0.61	0.69	0.75	0.87	
CP4916-40	0.33	0.47	0.57	0.66	0.74	0.81	0.94	
CP4916-41	0.34	0.48	0.59	0.68	0.76	0.83	0.96	
CP4916-43	0.37	0.53	0.64	0.74	0.83	0.91	1.05	
CP4916-45	0.40	0.57	0.70	0.81	0.90	0.99	1.14	
CP4916-46	0.44	0.62	0.76	0.87	0.98	1.07	1.24	

	l/min							
	0.5 bar	1 bar	1.5 bar	2 bar	2.5 bar	3 bar	4 bar	
CP4916-47	0.45	0.63	0.77	0.89	1.00	1.09	1.26	
CP4916-48	0.46	0.65	0.80	0.92	1.03	1.13	1.31	
CP4916-49	0.47	0.67	0.82	0.95	1.06	1.16	1.34	
CP4916-51	0.53	0.75	0.92	1.06	1.19	1.30	1.50	
CP4916-52	0.54	0.76	0.93	1.08	1.21	1.32	1.52	
CP4916-54	0.58	0.82	1.00	1.16	1.30	1.42	1.64	
CP4916-55	0.61	0.86	1.05	1.22	1.36	1.49	1.72	
CP4916-57	0.65	0.91	1.12	1.29	1.44	1.58	1.82	
CP4916-59	0.70	0.99	1.21	1.40	1.56	1.71	1.98	
CP4916-61	0.75	1.06	1.30	1.50	1.68	1.84	2.13	
CP4916-63	0.79	1.12	1.37	1.58	1.77	1.94	2.24	
CP4916-65	0.84	1.19	1.46	1.68	1.88	2.06	2.38	
CP4916-67	0.89	1.26	1.55	1.79	2.00	2.19	2.53	
CP4916-68	0.92	1.31	1.60	1.85	2.06	2.26	2.61	
CP4916-70	0.99	1.40	1.71	1.98	2.21	2.42	2.79	
CP4916-72	1.03	1.46	1.79	2.07	2.31	2.53	2.92	
CP4916-73	1.07	1.51	1.85	2.13	2.38	2.61	3.01	
CP4916-75	1.12	1.58	1.94	2.24	2.50	2.74	3.16	
CP4916-78	1.24	1.76	2.15	2.48	2.78	3.04	3.51	
CP4916-80	1.28	1.81	2.21	2.56	2.86	3.13	3.61	
CP4916-81	1.32	1.87	2.29	2.65	2.96	3.24	3.74	
CP4916-83	1.45	2.04	2.50	2.89	3.23	3.54	4.09	
CP4916-86	1.52	2.14	2.62	3.03	3.39	3.71	4.28	
CP4916-89	1.58	2.23	2.74	3.16	3.53	3.87	4.47	
CP4916-91	1.68	2.38	2.91	3.36	3.76	4.12	4.76	
CP4916-93	1.76	2.49	3.06	3.53	3.94	4.32	4.99	
CP4916-95	1.84	2.60	3.19	3.68	4.12	4.51	5.21	

	l/min							
	0.5 bar	1 bar	1.5 bar	2 bar	2.5 bar	3 bar	4 bar	
CP4916-98	2.01	2.85	3.49	4.03	4.50	4.93	5.69	
CP4916-103	2.10	2.97	3.64	4.21	4.70	5.15	5.95	
CP4916-107	2.36	3.34	4.09	4.72	5.28	5.78	6.67	
CP4916-110	2.50	3.53	4.33	5.00	5.59	6.12	7.07	
CP4916-115	2.76	3.90	4.77	5.51	6.16	6.75	7.79	
CP4916-120	2.87	4.06	4.97	5.74	6.42	7.03	8.12	
CP4916-125	3.16	4.47	5.47	6.32	7.07	7.74	8.94	
CP4916-128	3.29	4.65	5.69	6.57	7.35	8.05	9.30	
CP4916-132	3.53	4.99	6.11	7.06	7.89	8.64	9.98	
CP4916-136	3.83	5.41	6.63	7.65	8.55	9.37	10.8	
CP4916-140	4.08	5.77	7.06	8.16	9.12	9.99	11.5	
CP4916-144	4.22	5.97	7.31	8.44	9.44	10.3	11.9	
CP4916-147	4.34	6.14	7.52	8.69	9.71	10.6	12.3	
CP4916-151	4.74	6.70	8.20	9.47	10.6	11.6	13.4	
CP4916-156	5.01	7.08	8.67	10.0	11.2	12.3	14.2	
CP4916-161	5.26	7.44	9.12	10.5	11.8	12.9	14.9	
CP4916-166	5.53	7.82	9.57	11.1	12.4	13.5	15.6	
CP4916-170	5.94	8.40	10.3	11.9	13.3	14.6	16.8	
CP4916-172	6.18	8.74	10.7	12.4	13.8	15.1	17.5	
CP4916-177	6.45	9.12	11.2	12.9	14.4	15.8	18.2	
CP4916-182	6.71	9.49	11.6	13.4	15.0	16.4	19.0	
CP4916-187	7.11	10.1	12.3	14.2	15.9	17.4	20.1	
CP4916-196	7.89	11.2	13.7	15.8	17.6	19.3	22.3	
CP4916-205	8.55	12.1	14.8	17.1	19.1	20.9	24.2	
CP4916-218	9.60	13.6	16.6	19.2	21.5	23.5	27.2	
CP4916-234	11.2	15.8	19.4	22.4	25.0	27.4	31.6	
CP4916-250	12.9	18.2	22.3	25.8	28.8	31.6	36.5	

**Note:** Always double check your application rates. See pages 149-163 for useful formulas and information.



Flow Regulators are usually mounted behind cultivator shanks for the subsurface application of liquid fertilizers and soil fumigants. They are also used for above-ground streaming applications.

#### How to order:

Specify orifice plate number.

Example: CP4916-8



**Note:** Always insert Orifice Plate with side marked with number facing the outlet.

MATERIAL: Stainless Steel

#### Typical Assembly



To determine the orifice plates you need, use the following equations:

$$\text{GPM} \quad = \quad \frac{\text{GPA} \times \text{mph} \times W}{5,940}$$

$$\text{GPA} \quad = \quad \frac{5,940 \times \text{GPM} \text{ (Per Nozzle)}}{\text{mph} \times W}$$

- W = Nozzle spacing (in inches) for broadcast spraying
- = Spray width (in inches) for single nozzle, band spraying or boomless spraying.
- = Row spacing (in inches) divided by the number of nozzles per row for directed spraying.

Tables based on spraying water.  
See page 150 for conversion factors for other weight solutions.

	GPM						
	5 PSI	10 PSI	20 PSI	30 PSI	40 PSI	50 PSI	60 PSI
CP4916-8	0.003	0.004	0.006	0.007	0.008	0.009	0.010
CP4916-10	0.005	0.007	0.009	0.011	0.013	0.015	0.016
CP4916-12	0.007	0.010	0.013	0.016	0.019	0.021	0.023
CP4916-14	0.009	0.013	0.018	0.022	0.025	0.028	0.031
CP4916-15	0.010	0.015	0.021	0.025	0.029	0.032	0.036
CP4916-16	0.012	0.017	0.023	0.029	0.033	0.037	0.040
CP4916-18	0.015	0.021	0.030	0.036	0.042	0.047	0.051
CP4916-20	0.018	0.026	0.037	0.045	0.052	0.058	0.064
CP4916-22	0.022	0.031	0.043	0.053	0.061	0.068	0.075
CP4916-24	0.026	0.037	0.052	0.064	0.074	0.083	0.091
CP4916-25	0.028	0.040	0.056	0.068	0.079	0.088	0.097
CP4916-26	0.030	0.043	0.061	0.074	0.086	0.096	0.105
CP4916-27	0.032	0.046	0.064	0.079	0.091	0.102	0.111
CP4916-28	0.035	0.049	0.069	0.085	0.098	0.110	0.120
CP4916-29	0.038	0.054	0.076	0.094	0.108	0.121	0.132
CP4916-30	0.040	0.057	0.081	0.099	0.114	0.127	0.140
CP4916-31	0.043	0.062	0.087	0.107	0.123	0.138	0.151
CP4916-32	0.048	0.068	0.095	0.117	0.135	0.151	0.165
CP4916-34	0.052	0.074	0.104	0.127	0.147	0.164	0.180
CP4916-35	0.056	0.079	0.111	0.136	0.157	0.176	0.192
CP4916-37	0.061	0.086	0.122	0.149	0.172	0.192	0.211
CP4916-39	0.068	0.096	0.135	0.165	0.191	0.214	0.234
CP4916-40	0.072	0.102	0.144	0.177	0.204	0.228	0.250
CP4916-41	0.075	0.106	0.149	0.183	0.211	0.236	0.258
CP4916-43	0.082	0.116	0.163	0.200	0.231	0.258	0.283
CP4916-45	0.088	0.125	0.177	0.217	0.250	0.280	0.306
CP4916-46	0.095	0.135	0.191	0.234	0.270	0.302	0.331

	GPM						
	5 PSI	10 PSI	20 PSI	30 PSI	40 PSI	50 PSI	60 PSI
CP4916-47	0.097	0.138	0.194	0.238	0.275	0.307	0.337
CP4916-48	0.101	0.143	0.202	0.248	0.286	0.320	0.350
CP4916-49	0.104	0.148	0.209	0.255	0.295	0.330	0.361
CP4916-51	0.116	0.165	0.233	0.285	0.329	0.368	0.403
CP4916-52	0.118	0.168	0.237	0.290	0.335	0.375	0.410
CP4916-54	0.127	0.180	0.255	0.312	0.360	0.402	0.441
CP4916-55	0.133	0.189	0.267	0.326	0.377	0.421	0.462
CP4916-57	0.141	0.200	0.283	0.346	0.400	0.447	0.490
CP4916-59	0.153	0.217	0.306	0.375	0.433	0.484	0.530
CP4916-61	0.165	0.233	0.330	0.404	0.466	0.521	0.571
CP4916-63	0.174	0.246	0.347	0.425	0.491	0.549	0.601
CP4916-65	0.185	0.261	0.369	0.452	0.522	0.584	0.639
CP4916-67	0.196	0.278	0.392	0.481	0.555	0.621	0.680
CP4916-68	0.203	0.287	0.405	0.496	0.573	0.641	0.702
CP4916-70	0.216	0.306	0.433	0.530	0.612	0.684	0.750
CP4916-72	0.226	0.320	0.453	0.554	0.640	0.716	0.784
CP4916-73	0.233	0.330	0.467	0.572	0.660	0.738	0.808
CP4916-75	0.245	0.347	0.491	0.601	0.694	0.776	0.850
CP4916-78	0.272	0.385	0.544	0.667	0.770	0.861	0.943
CP4916-80	0.280	0.397	0.561	0.687	0.793	0.887	0.971
CP4916-81	0.290	0.411	0.581	0.711	0.821	0.918	1.01
CP4916-83	0.317	0.449	0.634	0.777	0.897	1.00	1.10
CP4916-86	0.332	0.470	0.664	0.813	0.939	1.05	1.15
CP4916-89	0.346	0.490	0.693	0.849	0.980	1.10	1.20
CP4916-91	0.369	0.523	0.739	0.905	1.05	1.17	1.28
CP4916-93	0.387	0.547	0.774	0.947	1.09	1.22	1.34
CP4916-95	0.404	0.572	0.808	0.990	1.14	1.28	1.40

	GPM						
	5 PSI	10 PSI	20 PSI	30 PSI	40 PSI	50 PSI	60 PSI
CP4916-98	0.442	0.625	0.884	1.08	1.25	1.40	1.53
CP4916-103	0.461	0.653	0.923	1.13	1.31	1.46	1.60
CP4916-107	0.518	0.733	1.04	1.27	1.47	1.64	1.79
CP4916-110	0.548	0.775	1.10	1.34	1.55	1.73	1.90
CP4916-115	0.605	0.855	1.21	1.48	1.71	1.91	2.09
CP4916-120	0.629	0.890	1.26	1.54	1.78	1.99	2.18
CP4916-125	0.693	0.980	1.39	1.70	1.96	2.19	2.40
CP4916-128	0.721	1.02	1.44	1.77	2.04	2.28	2.50
CP4916-132	0.774	1.10	1.55	1.90	2.19	2.45	2.68
CP4916-136	0.840	1.19	1.68	2.06	2.38	2.66	2.91
CP4916-140	0.894	1.27	1.79	2.19	2.53	2.83	3.10
CP4916-144	0.926	1.31	1.85	2.27	2.62	2.93	3.21
CP4916-147	0.953	1.35	1.91	2.33	2.70	3.01	3.30
CP4916-151	1.04	1.47	2.08	2.55	2.94	3.29	3.60
CP4916-156	1.10	1.55	2.20	2.69	3.11	3.47	3.80
CP4916-161	1.15	1.63	2.31	2.83	3.27	3.65	4.00
CP4916-166	1.21	1.72	2.43	2.97	3.43	3.84	4.20
CP4916-170	1.30	1.84	2.61	3.19	3.69	4.12	4.51
CP4916-172	1.36	1.92	2.71	3.32	3.84	4.29	4.70
CP4916-177	1.41	2.00	2.83	3.46	4.00	4.47	4.90
CP4916-182	1.47	2.08	2.95	3.61	4.17	4.66	5.10
CP4916-187	1.56	2.21	3.12	3.82	4.41	4.93	5.40
CP4916-196	1.73	2.45	3.46	4.24	4.90	5.47	6.00
CP4916-205	1.88	2.65	3.75	4.59	5.31	5.93	6.50
CP4916-218	2.11	2.98	4.21	5.16	5.96	6.66	7.30
CP4916-234	2.45	3.47	4.91	6.01	6.94	7.76	8.50
CP4916-250	2.83	4.00	5.66	6.93	8.00	8.94	9.80

**Note:** Always double check your application rates. See pages 149-163 for useful formulas and information.



# Turbo FloodJet® Wide Angle Flat Spray Tip

## Typical Applications:

See selection guide on pages 2, 6 and 8 for recommended typical application for Turbo FloodJet.

## Features:

- Excellent spray distribution for uniform coverage along the boom.
- Nozzle design incorporates a pre-orifice to produce larger droplets for less drift.
- Large round orifice reduces clogging.
- Stainless steel or polymer with VisiFlo® color-coding band for easy size identification.
- Can be used with CP25599-\* NY Quick TeeJet® cap for automatic alignment. Reference page 55 for more information.

### QCT Cam-Loc Adapter

- Provides easy changeover from high capacity to lower capacity nozzles.
- Adapter fits standard 3/4" quick connect Cam-Loc holders.
- Corrosion-resistant stainless steel and polypropylene construction.
- Rated up to 100 PSI (7 bar).
- Use QJT-NYB to retrofit to Quick TeeJet.



	bar	CAPACITY ONE NOZZLE IN l/min	l/ha △△ 75 cm △△							l/ha △△ 100 cm △△								
			4 km/h	6 km/h	8 km/h	10 km/h	12 km/h	16 km/h	20 km/h	4 km/h	6 km/h	8 km/h	10 km/h	12 km/h	16 km/h	20 km/h		
TF-2 (50)	1.0	0.91	182	121	91.0	728	60.7	45.5	36.4	29.1	137	91.0	68.3	54.6	45.5	34.1	27.3	21.8
	1.5	1.11	222	148	111	888	74.0	55.5	44.4	35.5	167	111	83.3	66.6	55.5	41.6	33.3	26.6
	2.0	1.29	258	172	129	103	86.0	64.5	51.6	41.3	194	129	96.8	77.4	64.5	48.4	38.7	31.0
	2.5	1.44	288	192	144	115	96.0	72.0	57.6	46.1	216	144	108	86.4	72.0	54.0	43.2	34.6
TF-2.5 (50)	3.0	1.58	316	211	158	126	105	79.0	63.2	50.6	237	158	119	94.8	79.0	59.3	47.4	37.9
	1.0	1.14	228	152	114	91.2	76.0	57.0	45.6	36.5	171	114	85.5	68.4	57.0	42.8	34.2	27.4
	1.5	1.40	280	187	140	112	93.3	70.0	56.0	44.8	210	140	105	84.0	70.0	52.5	42.0	33.6
	2.0	1.61	322	215	161	129	107	80.5	64.4	51.5	242	161	121	96.6	80.5	60.4	48.3	38.6
TF-3 (50)	2.5	1.80	360	240	180	144	120	90.0	72.0	57.6	270	180	135	108	90.0	67.5	54.0	43.2
	3.0	1.97	394	263	197	158	131	98.5	78.8	63.0	296	197	148	118	98.5	73.9	59.1	47.3
	1.0	1.37	274	183	137	110	91.3	68.5	54.8	43.8	206	137	103	82.2	68.5	51.4	41.1	32.9
	1.5	1.68	336	224	168	134	112	84.0	67.2	53.8	252	168	126	101	84.0	63.0	50.4	40.3
TF-4 (50)	2.0	1.94	388	259	194	155	129	97.0	77.6	62.1	291	194	146	116	97.0	72.8	58.2	46.6
	2.5	2.17	434	289	217	174	145	109	86.8	69.4	326	217	163	130	109	81.4	65.1	52.1
	3.0	2.37	474	316	237	190	158	119	94.8	75.8	356	237	178	142	119	88.9	71.1	56.9
	1.0	1.82	364	243	182	146	121	91.0	72.8	58.2	273	182	137	109	91.0	68.3	54.6	43.7
TF-4 (50)	1.5	2.23	446	297	223	178	149	112	89.2	71.4	335	223	167	134	112	83.6	66.9	53.5
	2.0	2.57	514	343	257	206	171	129	103	82.2	386	257	193	154	129	96.4	77.1	61.7
	2.5	2.88	576	384	288	230	192	144	115	92.2	432	288	216	173	144	108	86.4	69.1
	3.0	3.15	630	420	315	252	210	158	126	101	473	315	236	189	158	118	94.5	75.6
TF-5 (50)	1.0	2.28	456	304	228	182	152	114	91.2	73.0	342	228	171	137	114	85.5	68.4	54.7
	1.5	2.79	558	372	279	223	186	140	112	89.3	419	279	209	167	140	105	83.7	67.0
	2.0	3.22	644	429	322	258	215	161	129	103	483	322	242	193	161	121	96.6	77.3
	2.5	3.60	720	480	360	288	240	180	144	115	540	360	270	216	180	135	108	86.4
TF-7.5 (50)	3.0	3.95	790	527	395	316	263	198	158	126	593	395	296	237	198	148	119	94.8
	1.0	3.42	684	456	342	274	228	171	137	109	513	342	257	205	171	128	103	82.1
	1.5	4.19	838	559	419	335	279	210	168	134	629	419	314	251	210	157	126	101
	2.0	4.83	968	645	484	387	323	242	194	155	726	484	363	290	242	182	145	116
TF-10 (50)	2.5	5.41	1082	721	541	433	361	271	216	173	812	541	406	325	271	203	162	130
	3.0	5.92	1184	789	592	474	395	296	237	189	888	592	444	355	296	222	178	142
	1.0	4.56	912	608	456	365	304	228	182	146	684	456	342	274	228	171	137	109
	1.5	5.58	1118	744	558	446	372	279	223	179	837	558	419	335	279	209	167	134
TF-VP4	2.0	6.45	1290	860	645	516	430	323	258	206	968	645	484	387	323	242	194	155
	2.5	7.21	1442	961	721	577	481	361	288	231	1082	721	541	433	361	270	216	173
	3.0	7.90	1580	1053	790	632	527	395	316	253	1185	790	593	474	395	296	237	190

Note: Always double check your application rates.  
See pages 149-163 for useful formulas and information.

†Specify material.

### How to order:

Specify tip number.

Examples:

TF-VS4 – Stainless Steel with VisiFlo color-coding

TF-VP4 – Polymer with VisiFlo color-coding



# Turbo FloodJet® Wide Angle Flat Spray Tip

## Typical Applications:

See selection guide on pages 2, 6 and 8 for recommended typical application for Turbo FloodJet.

## Features:

- Excellent spray distribution for uniform coverage along the boom.
- Nozzle design incorporates a pre-orifice to produce larger droplets for less drift.
- Large round orifice reduces clogging.
- Stainless steel or polymer with VisiFlo® color-coding band for easy size identification.
- Can be used with CP25599-\*NY Quick TeeJet® cap for automatic alignment. Reference page 55 for more information.

### QCT Cam-Loc Adapter

 
- Provides easy changeover from high capacity to lower capacity nozzles.
- Adapter fits standard 3/4" quick connect Cam-Loc holders.
- Corrosion-resistant stainless steel and polypropylene construction.
- Rated up to 100 PSI (7 bar).
- Use QJT-NYB to retrofit to Quick TeeJet.



	PSI	CAPACITY ONE NOZZLE IN GPM	CAPACITY ONE NOZZLE IN OZ./MIN.	40°								20°				
				4 MPH	5 MPH	6 MPH	8 MPH	10 MPH	12 MPH	15 MPH	20 MPH	2 MPH	3 MPH	4 MPH	5 MPH	
TF-†2 (50)	10	0.20	26	7.4	5.9	5.0	3.7	3.0	2.5	2.0	1.5	0.68	0.45	0.34	0.27	
	20	0.28	36	10.4	8.3	6.9	5.2	4.2	3.5	2.8	2.1	0.95	0.63	0.48	0.38	
	30	0.35	45	13.0	10.4	8.7	6.5	5.2	4.3	3.5	2.6	1.2	0.79	0.60	0.48	
	40	0.40	51	14.9	11.9	9.9	7.4	5.9	5.0	4.0	3.0	1.4	0.91	0.68	0.54	
TF-†2.5 (50)	10	0.25	32	9.3	7.4	6.2	4.6	3.7	3.1	2.5	1.9	0.85	0.57	0.43	0.34	
	20	0.35	45	13.0	10.4	8.7	6.5	5.2	4.3	3.5	2.6	1.2	0.79	0.60	0.48	
	30	0.43	55	16.0	12.8	10.6	8.0	6.4	5.3	4.3	3.2	1.5	0.97	0.73	0.58	
	40	0.50	64	18.6	14.9	12.4	9.3	7.4	6.2	5.0	3.7	1.7	1.1	0.85	0.68	
TF-†3 (50)	10	0.30	38	11.1	8.9	7.4	5.6	4.5	3.7	3.0	2.2	1.0	0.68	0.51	0.41	
	20	0.42	54	15.6	12.5	10.4	7.8	6.2	5.2	4.2	3.1	1.4	0.95	0.71	0.57	
	30	0.52	67	19.3	15.4	12.9	9.7	7.7	6.4	5.1	3.9	1.8	1.2	0.88	0.71	
	40	0.60	77	22	17.8	14.9	11.1	8.9	7.4	5.9	4.5	2.0	1.4	1.0	0.82	
TF-†4 (50)	10	0.40	51	14.9	11.9	9.9	7.4	5.9	5.0	4.0	3.0	1.4	0.91	0.68	0.54	
	20	0.57	73	21	16.9	14.1	10.6	8.5	7.1	5.6	4.2	1.9	1.3	0.97	0.78	
	30	0.69	88	26	20	17.1	12.8	10.2	8.5	6.8	5.1	2.3	1.6	1.2	0.94	
	40	0.80	102	30	24	19.8	14.9	11.9	9.9	7.9	5.9	2.7	1.8	1.4	1.1	
TF-†5 (50)	10	0.50	64	18.6	14.9	12.4	9.3	7.4	6.2	5.0	3.7	1.7	1.1	0.85	0.68	
	20	0.71	91	26	21	17.6	13.2	10.5	8.8	7.0	5.3	2.4	1.6	1.2	0.97	
	30	0.87	111	32	26	22	16.1	12.9	10.8	8.6	6.5	3.0	2.0	1.5	1.2	
	40	1.00	128	37	30	25	18.6	14.9	12.4	9.9	7.4	3.4	2.3	1.7	1.4	
TF-†7.5 (50)	10	0.75	96	28	22	18.6	13.9	11.1	9.3	7.4	5.6	2.6	1.7	1.3	1.0	
	20	1.06	136	39	31	26	19.7	15.7	13.1	10.5	7.9	3.6	2.4	1.8	1.4	
	30	1.30	166	48	39	32	24	19.3	16.1	12.9	9.7	4.4	2.9	2.2	1.8	
	40	1.50	192	56	45	37	28	22	18.6	14.9	11.1	5.1	3.4	2.6	2.0	
TF-†10 (50)	10	1.00	128	37	30	25	18.6	14.9	12.4	9.9	7.4	3.4	2.3	1.7	1.4	
	20	1.41	180	52	42	35	26	21	17.4	14.0	10.5	4.8	3.2	2.4	1.9	
	30	1.73	221	64	51	43	32	26	21	17.1	12.8	5.9	3.9	2.9	2.4	
	40	2.00	256	74	59	50	37	30	25	19.8	14.9	6.8	4.5	3.4	2.7	

Note: Always double check your application rates.  
See pages 149-163 for useful formulas and information.

†Specify material.



### Optimum Spray Height

	20"
	30"
	40"

\*Wide angle spray nozzle height is influenced by nozzle orientation. The critical factor is to achieve a minimum 30% overlap.

See page 149 for more information.

### How to order:

Specify tip number.

Examples:

TF-VS4 – Stainless Steel with VisiFlo color-coding

TF-VP4 – Polymer with VisiFlo color-coding



