



RV ELECTRONICS
MANUFACTURER OF RECREATIONAL VEHICLE ACCESSORIES



CARAVAN
CAMPER TRAILER
4WD'S
RV'S
TRADIES

PROGRAMMABLE LCD WATER LEVEL INDICATOR

SINGLE TANK + VOLTMETER - FITTING INSTRUCTIONS

FOR USE WITH RV ELECTRONICS
PROGRAMMABLE SENDER PROBES ONLY.
SUITABLE FOR PLASTIC AND METAL TANKS.

STEP 1: Single gauge example: Drain the water out of the tanks that you wish to calibrate and remove the front cover of the gauge by pushing the wings outwards from centre. Once removed you will see a 6 position DIP switch and a set button on the front of the gauge board.

STEP 2: Single tank has only one plug (centre 'C' plug on the back in Fig. 1) and only position 3 and 4 are needed (see Fig. 2). DIP position 3 is used to set EMPTY and DIP position 4 is used to set FULL.

STEP 3: To set EMPTY, slide the DIP switch in position 3 to ON and press SET button until the 2 bottom LCD needles on the gauge flash. (Make sure you return the DIP switch to OFF when done).

STEP 4: To set display FULL, fill the water tank to FULL, slide the DIP switch in position 4 to ON, and press SET button until the top two LCD needles on the gauge flash. (Make sure you return the DIP switch to OFF when done).

If you make a mistake or want to reset a tank to the factory settings, simply slide both the EMPTY and FULL DIP switches to ON for the tank you wish to reset. (DIP position 3 + 4) Press and hold SET button until all the gauge needles flash ON and OFF.

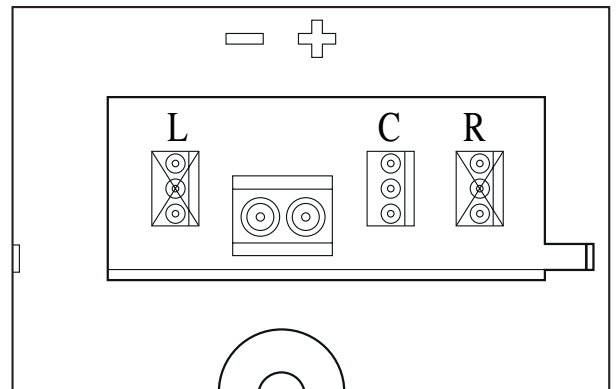


Fig. 1

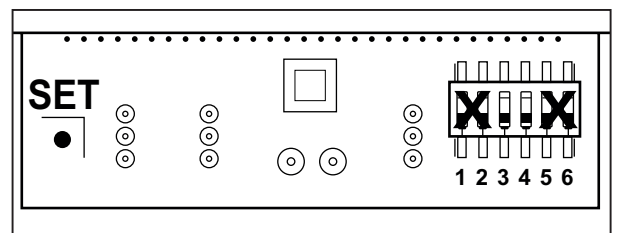


Fig. 2

WARNING

DO NOT UNDER ANY CIRCUMSTANCES USE THIS WATER LEVEL INDICATOR IN
FLAMMABLE LIQUIDS. THIS PRODUCT IS FOR USE IN WATER ONLY.