



RV ELECTRONICS
MANUFACTURER OF RECREATIONAL VEHICLE ACCESSORIES




CARAVAN
CAMPER TRAILER
4WD'S
RV'S
TRADIES

PROGRAMMABLE WATER LEVEL SENDER PROBE

FITTING INSTRUCTIONS

1. Drain all the water from the water tank.
2. Choose the side of the water tank closest to where the water gauge is to be fitted.
3. Check the wire lead will be long enough to reach the gauge.
4. Mark a position 100mm away from the corner of the tank, on a flat vertical surface, as close to centre as possible. Ensure the float is still capable of reaching top and bottom of the tank.
Do not place on a welded seam as the grommet will not seal (drill just above). Refer to gauge instructions for calibration.
Refer to FIG 1.

Fig. 1

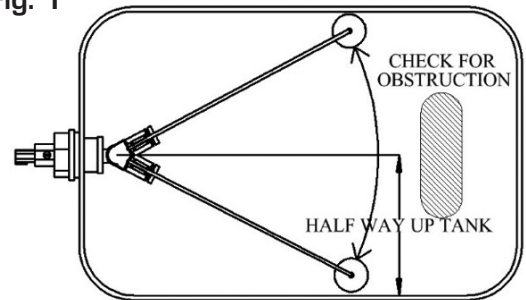

DO NOT POSITION ON SHARP BENDS OR CURVES OR MANUFACTURING/WELD LINES.


CAUTION:

Check that there will be no obstructions (centre strengthening recesses) in the middle of the tank which will prevent sender unit from rotating freely to the bottom of the tank when it is installed.

5. Using a 22mm (7/8 in) hole saw, at slow speed, drill a hole in the water tank.
6. Remove burrs from around the hole. Insert the sender unit through the hole. Make sure the flat surfaces of the sender are vertical and that the plug clip faces the ground. (FIG 2) Tighten the nut to finger tight, then approx. one turn with a spanner. The self-sealing grommet should now seal the hole. Do not over tighten. See FIG 3.
7. Flush all debris from the water tank.
8. Feed wire through to top gauge and plug into back.


Fig. 2

ENSURE FLAT SIDES ARE VERTICAL

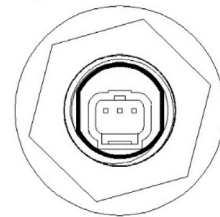

AND PLUG CLIP IS AT THE BOTTOM

Fig. 3

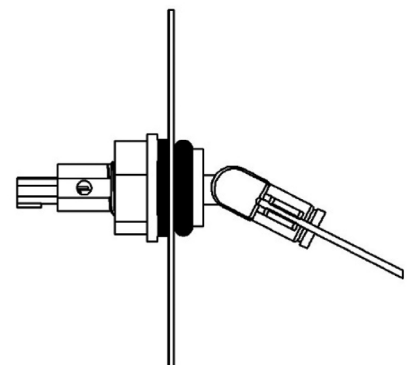

WARNING:

Do not under any circumstances use this water level sender in flammable liquids. This product is for use in water only.