



Move. Play. Adventure.



OWNER'S MANUAL

Contents

Introduction2

Safety3

Warning 4

Setup 5-6

Inflation and Pressure.....7

Outdoor Use and Maintenance.....7


Packaging and Storage7

Where Can I Use My Adventure Board? 8

Troubleshooting and FAQ 9

Warranty.....10

 Refund Policy..... 11

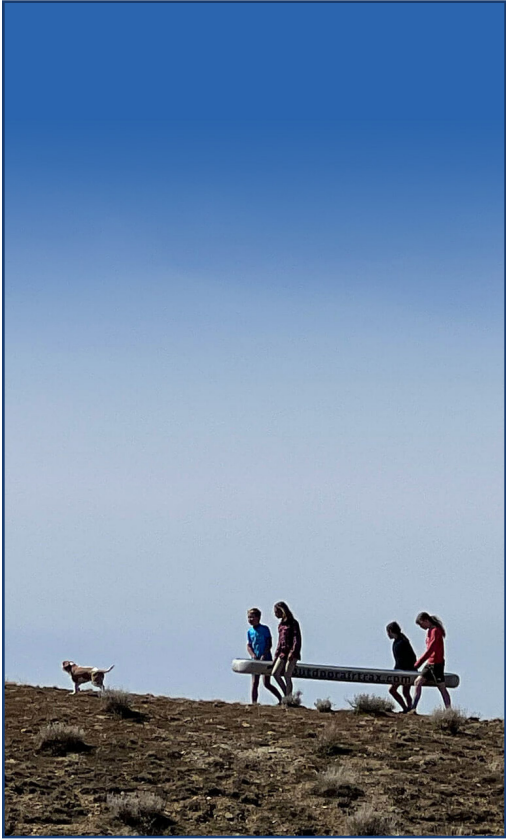

Thank you for choosing Adventure Boards™. We know there are many companies to choose from, and we appreciate your support.

This manual describes how to use and maintain your product for optimal longevity and performance. If anything is unclear, please reach out to us so we can assist you.

Telephone (call or message): (303) 868-9916
Email: info@adventure-board.com
Website: adventure-board.com



Safety

Important: This product is custom-designed and can be used for: recreation, gymnastics, parkour, cheerleading, tumbling, sports, martial arts, free running, and tricking. As with all extreme activity please only work within your abilities, in a safe environment, and under the supervision of trained coaches and personnel. Use adventure board only as recommended.

These instructions apply to all adventure boards.

1. Never place an adventure board under or near overhead obstructions, including trees or powerlines, or on a slope
2. Do not bring sharp objects on or near the adventure board
3. Adventure board should be used by one person at a time
4. Follow a progressive learning pattern to ensure foundational movements are mastered before attempting more advanced skills
5. Make sure the adventure board has proper air pressure to avoid injury. See Setup Instructions for more details. Always check pressure before training and play, as it can fluctuate depending on environmental conditions.
6. Do not use the adventure board for tricking and training without using landing mats at the ends of the adventure board, as well as the sides
7. Due to the bounciness of an adventure board, they are useful for training skills that require airtime; however, this bounciness also makes the product dangerous as a landing mat. Adventure boards are not to be used as landing mats or foam pits and doing so will result in injury.
8. Adventure board will become slippery in rain or snow and around water
9. Be sure there is constant adult supervision at all times with adventure board
10. Do not inflate adventure board in wet or damp places with the electric pump, as it can result in electrocution
11. Never use a damaged adventure board



Warning



WARNING

Use of this adventure board may be HAZARDOUS. All users of this adventure board assume all risk of serious injury including death. Adventure Board cannot and does not eliminate hazards.

BEFORE USE, read and follow this User Manual.

BEFORE EACH USE, ensure that the adventure board is inflated to proper specifications as defined herein and check the adventure board for any damage, including punctures, tears, worn material, etc. DO NOT USE the adventure board if any damage is found.

Use on sloped and unstable surfaces may increase the risk of serious injury or death.

Serious injury, including paralysis and death, can occur while using this adventure board from any activity using motion, height and rotation. Paralysis or death can result if you land on your neck or head. DO NOT perform somersaults or flips as this will increase the chance of landing on your neck or head.

Adult supervision is required while this adventure board is in use. When not in use, always properly deflate and secure this Adventure board in the provided storage bag.

This is not a lifesaving device. Never leave children unattended around water.


The adventure board comes with a storage bag. Keep this away from children as there is a danger of suffocation.

Adventure boards are NOT designed as landing mats and should not be used as such.

Adventure boards can move during use which can result in serious injury. Use anchors when outdoors and use only in open areas that are clear from hazards such as walls, rocks, concrete, trees, stumps, stairs, balconies, fire, water, etc.

Not recommended for children under the age of 13 or for individuals weighing over 350 LBS.

Allow only one person at a time on the adventure board.

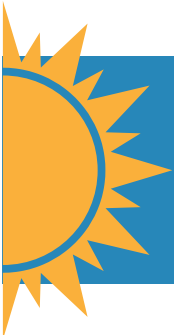

Warning! Adventure board surface may become hot if left in direct sunlight. Store in shade and test surface prior to use. If surface is hot to the touch, allow board to cool before using.



Setup

Ensure that all safety instructions have been read and are followed before setting up.



STEP 1:

Adventure boards are made to be used indoors and outside on grass or the beach. Find a spot that is flat and free of sharp debris or other hazards. Use the storage bag to move the adventure board to desired location.



STEP 2:

Remove and unfold the adventure board. Store strap in storage bag.



STEP 3:

Open the valve and make sure the valve's center piece is popped up, in the inflation position. If it is down, use your finger to turn it clockwise until it pops up. If the valve is loose use the tool in the orange tube to tighten it before inflating



STEP 4:

The electric pump is designed to be used with a vehicle, as this adventure board was designed to go with you on your adventures. If you are using it primarily at home, an adapter can be purchased to use with a traditional outlet.



STEP 5:

Attach the nozzle of the electric or hand pump to the valve with a simple twist

Setup Instructions continued on next page



Setup

Ensure that all safety instructions have been read and are followed before setting up.



STEP 6:

Inflate until adventure board is fully inflated



STEP 7:

Remove the hose from the valve and confirm the pin is out. Fine tuning of the pressure can be achieved by pressing the pin to let air out, or pumping to add firmness



STEP 8:

Twist the valve cover, unplug the pump



STEP 9:

Anchor into ground if using outdoors. Do not leave unattended in prolonged sunlight.



STEP 10:

Deflate, reverse air flow and roll for easy transportation and storage.

Notes on Inflation and Pressure

The ideal pressure is different from person to person, and varies based on weight, skill, and desired activity. Test the pressure of the adventure board by standing on it to feel it, and ensure that when you jump you do not come into contact with the ground. If you are unsure if there is enough air, add more.



Proper inflation is key to safety and preventing damage



Do not over or under-inflate.

Check the pressure before each use.

Recommended PSI:

- 0.5: Sleeping / Air Mattress
- 0.5-1.5: Tricking Tumbling, Jumping Bouncing
- 1.0-3.0: Slip-n-Slide, Water Slide at Lake & Land, Sled
- 5.0-7.0: Paddle or Float on Lake, Ramp
- 9.0-11.0: Paddle or Float on River, Utility Board

The PSI should never exceed 20 PSI. The electric pump will automatically stop at 19 PSI, and the recommended PSI for recreational use is under 6 PSI. To prevent damaging the Adventure Board, never use a blower other than the ones supplied by Adventure Board.

In rare cases, the Adventure Board can not be completely inflated. If this happens stop pumping and remove hose. Check to see if air is leaking from the valve. If so, the valve needs to be replaced. If no leak is found and there are no holes in the Adventure Board, the pump needs to be replaced.

As always, you can contact Adventure board:

(303) 868-9916 (call or message) | info@adventure-board.com | adventure-board.com

Outdoor Use and Maintenance

While Adventure Boards are designed to be used outdoors, proper care must occur to preserve the longevity and integrity of the Adventure Board.


- Always clear the area of sharp objects
- Do not expose Adventure Board to prolonged sun. If being used in the sun, decrease the pressure of the Adventure Board.
- **IMPORTANT:** If the Adventure Board is left outdoors, adjust the air pressure to the minimum to reduce the risk of overpressure in hot weather. Please note that the Adventure Board will get firmer in warm weather and loses pressure in colder temperatures.
- If leaving the Adventure Board outdoors for extended periods of time it is recommended that it is set up in shade and decrease air pressure to the minimum when not in use.
- Use of anchors is recommended
- When moving the Adventure Board do not drag
- To wash Adventure Board use soft soap and water. Do not use harsh cleaners.

Packaging and Storage

1. Make sure that the Adventure Board is clean and dry before deflating
2. Open the valve cap and press down on center piece
3. To fully deflate, put the pump hose and pump out all remaining air
4. Roll the board as it deflates, keeping the storage bag nearby to ensure you are rolling it the correct size
5. Roll the Adventure Board toward the valve so it remains unblocked for as long as possible. **Note:** the tighter it is rolled, the easier it is to transport it.
6. Close the valve cap
7. Secure strap, and put into the storage bag




How Can I Use my Adventure Board™?

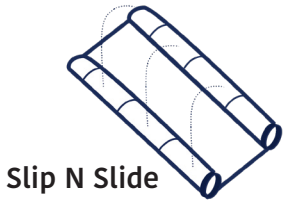

Slip N Slide



Floating Dock

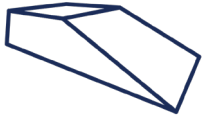



Ramp



Water Slide



  Floating Mat

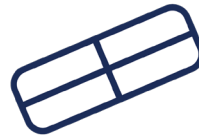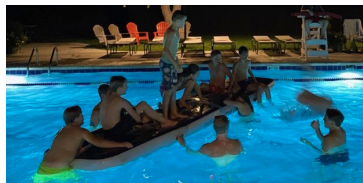

Air Track



Slide



 
Rebounding



Sled



Teeter Totter

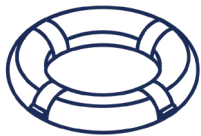

Tubing



Air Mattress



Adventure boards were born out of a desire to bring movement and play to small yards and with you on adventures. So, whether your yard is too small for other recreation equipment or you are looking for play and training on the go, the Adventure Board is for you. Camping? Rafting? Headed to the lake for the day? Do you own a restaurant or brewery with an outdoor area? The possibilities are endless—just be sure to read this Instruction Manual and follow recommendations!



Troubleshooting and FAQ

How long does it take to inflate?

10-20 minutes, depending on whether you have the electric car pump or the hand pump, and what size Adventure Board you have.

When can I use it?

Year round! The versatility is what makes this product so unique. **Rugged enough for the outdoors but easily transportable inside** for crummy weather days and back out for the warm ones, this piece of equipment facilitates fun all year.

Help! My Adventure Board is leaking.

Check all valves to ensure the pin is out and the valve is properly closed.

Still leaking? Contact Adventure Board:

(303) 868-9916 (call or message) | info@adventure-board.com | adventure-board.com

Why is my Adventure Board losing air?

Adventure Boards often need their pressure regulated, and you will notice this more when being used outside. Hot air takes up more space than cold air, so as the temperature rises you will need to reduce the pressure, and as it cools you can add more air. **Remember, always put pressure to the lowest level when being left outside, and only leave it in shade.**

Do I need to use an underlay when using my Adventure Board outside?

Adventure Boards were specifically designed and created to be used indoor and outdoor, so as long as your ground is free of sharp debris there is no need for an underlay.

How do I patch/repair my Adventure Board?

- Clean the area around the crack or hole with ethanol.
- Cut a piece of the patch included with your board, trimming patch 1 inch wider than the hole or crack.
- Apply glue to the patch and Adventure Board using a brush.
- Place the patch on the Adventure Board and press.
- Let dry and do not use for 24 hours.

What is the lifespan of my Adventure Board?

This is impacted by how and where your equipment is used. We offer the best warranty on the market – if instructions in this manual are followed – with a 5-year manufacturer's guarantee. The customer is responsible for delivery to the nearest dealer. See the Limited Warranty for more details.

I want my Adventure Board to be wider—what can be done?

To ensure the integrity of Adventure Boards, thicker material was used, limiting the ability to increase the width. You can buy multiple boards and use d-rings to attach.

What are the differences between Adventure Boards and other mainline air track products?

Construction! While they look similar in shape the construction of the Adventure Boards is significantly different. Unlike traditional air tracks, Adventure Boards have 13,000 threads/ft², two thick layers of PVC on the walls, and fusion technology (used for white water SUPs) on the surface. This makes them infinitely more rugged and able to go up to a **radically higher PSI**--allowing them to be a multi-use piece of equipment. Sure, you can do everything you could on a traditional air track on the Adventure Board, but you can also do a whole bunch more (see page 8)!

Have a question we haven't addressed?

We'd love to help you. Contact Adventure Boards today:

(303) 868-9916 (call or message) | info@adventure-board.com | adventure-board.com



Adventure Board Limited Warranty: 5 Year

Adventure Board warrants your adventure board, excluding external accessories, against original defects in material and workmanship for a period of 5 (five) years from the date of purchase. Within this period, Adventure Board will, at its sole option, repair or replace any components that fail in normal use according to the Adventure board User Manual. Such repairs or replacement shall be made at no extra cost to you, provided that you may be responsible for transportation costs, labor cost, or other associated costs as explained in more detail below. Proof of purchase is required. This Limited Warranty is only valid when used for private household purposes and in accordance with the Adventure board User Manual. Note, accessories sold with the adventure board, including but not limited to anchors and pumps, are not covered under this Limited Warranty.

What is not covered

This Limited Warranty is subject to the following terms:

- Adventure Board shall not be liable for costs, damage or repairs incurred as a result of:
 - Improper set up not in accordance with the User Manual
 - Careless handling, accident, misuse, abuse, punctures, excessive heat, neglect and/or lack of maintenance in accordance with the User Manual
 - External sources such as weather (including but not limited to: wind, lightning, flooding, hail, and natural disasters), theft, fire damage, cuts or vandalism
 - Improper storage
 - Use of adventure board other than for private household purposes; for example, for commercial or rental purposes
 - Service performed by anyone who is not an authorized service provider of Adventure Board
- This Limited Warranty does not cover minute or minor imperfections in the adventure board that meet design specification and do not materially alter the functionality such as, but not limited to, cosmetic damage such as scratches, nicks, fading of color, etc.
- This adventure board is designed in accordance with standards for a specific use. Any modifications or transformations to the original adventure board could result in serious risk for the user and will void this Limited Warranty.
- This Limited Warranty does not cover expenses related to on-site labor, travel, set up or deflation, or other charges associated with the repair or replacement of the adventure board.
- Adventure Board in conjunction with the manufacturing company, International MI, make the final warranty determination and may require photos which clearly show the defect.
- Shipping costs associated with approved warranty claims lodged within 45 days from the date of purchase will be covered by Adventure Board. Beyond this 45-day period, all shipping costs are the responsibility of the customer.

Warranty limitations

- Adventure board is not responsible or liable for indirect, special, or consequential damages arising out of or in connection with the use or performance of the product, or any other damages with respect to loss of property, loss of revenue, or loss of employment or use. This limitation is not allowed by some states, and so this limitation may not apply to you.
- Adventure board will not be liable for any consequential damages or incidental damages you may incur in connection with your purchase and use of this adventure board. This limitation is not allowed by some states, and so this limitation may not apply to you.
- This warranty is not transferable and applies only to the consumer who originally purchased the adventure board.
- This warranty does not cover adventure board accessories.

Submitting your warranty claim

If you believe your adventure board has a manufacturing fault or product defect and you need to make a warranty claim, please send an email to info@adventure-board.com or fill out the contact form via www.adventure-board.com. Please reference the product number located on the handle of your adventure board, adventure board length, date of purchase, and an image of your receipt. PLEASE NOTE: This Limited Warranty will only take effect upon the showing of a receipt having a date within the warranty period and being an original receipt from Adventure Board.

If, during the warranty period, you submit a claim for warranty service in accordance with this Limited Warranty, then Adventure Board will, at its sole option: (1) repair the adventure board using new parts or previously used parts that satisfy Adventure Board's quality standards, (2) replace the adventure board with a new or a refurbished adventure board that meets Adventure Board's quality standards, or (3) exchange the adventure board for a full refund of your purchase price. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

Repaired or replaced adventure boards have a 90-day warranty under these same terms. If the adventure board sent in under this Limited Warranty is still under its original warranty, then the new warranty is 90 days or to the end of the original 7-year warranty, whichever is longer.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE WARRANTIES AND REMEDIES CONTAINED IN THIS LIMITED WARRANTY ARE EXCLUSIVE AND IN LIEU OF, AND ADVENTURE BOARD EXPRESSLY DISCLAIMS, ALL OTHER WARRANTIES AND REMEDIES, WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY REMEDY OR OTHERWISE. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE. IF IMPLIED WARRANTIES CANNOT BE DISCLAIMED UNDER THE LAWS OF YOUR STATE, THEN SUCH WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

If you have questions or concerns regarding this warranty, contact Adventure Board please send an email to info@adventure-board.com or fill out the contact form via adventure-board.com.



Refund Policy

Returns

Buyers are eligible to return their adventure board for 15 days after it is delivered. There is no return or exchange offered after 15 days.

For a full financial refund, the adventure board must be in new, unused condition, and in the original packaging. Buyer is responsible for paying the shipping to return the product. Please note the original cost of shipping (\$99) is non-refundable in the case of a full financial refund.

Your product may be eligible for a partial refund in the following events:

- Item is used
- Item is not in the original condition, is damaged, or missing parts (not due to an error from Adventure Board)
- Item is returned after the 15 day full refund period

Once your adventure board has been received and inspected, you will be notified of your refund approval. Note: partial refunds are based on wear, use, and damage. You are not guaranteed a full refund.

Exchanges

Items are only replaced if they are defective or damaged. If you need to exchange your product please contact info@adventure-board.com.

Shipping

You are responsible for paying the shipping to return or exchange your product. If you receive a refund, the original cost of shipping will be deducted from your refund. If you are shipping an item over \$75, Adventure board advises considering using a trackable shipping service and/or purchasing shipping insurance. We do not guarantee that we will receive your returned item.

Please contact Joey with additional questions or comments.

Call/Text: (303) 868-9916

Email: info@adventure-board.com





(303) 868-9916



info@adventure-board.com



adventure-board.com



@adventureboardco



@adventure-boards



**Move.
Play.
Adventure.**