 


 
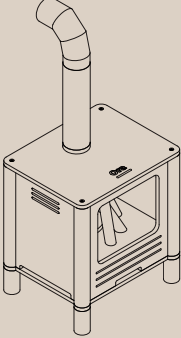 









 


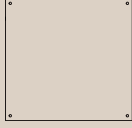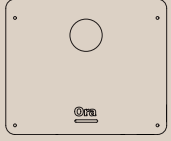

 
 

 

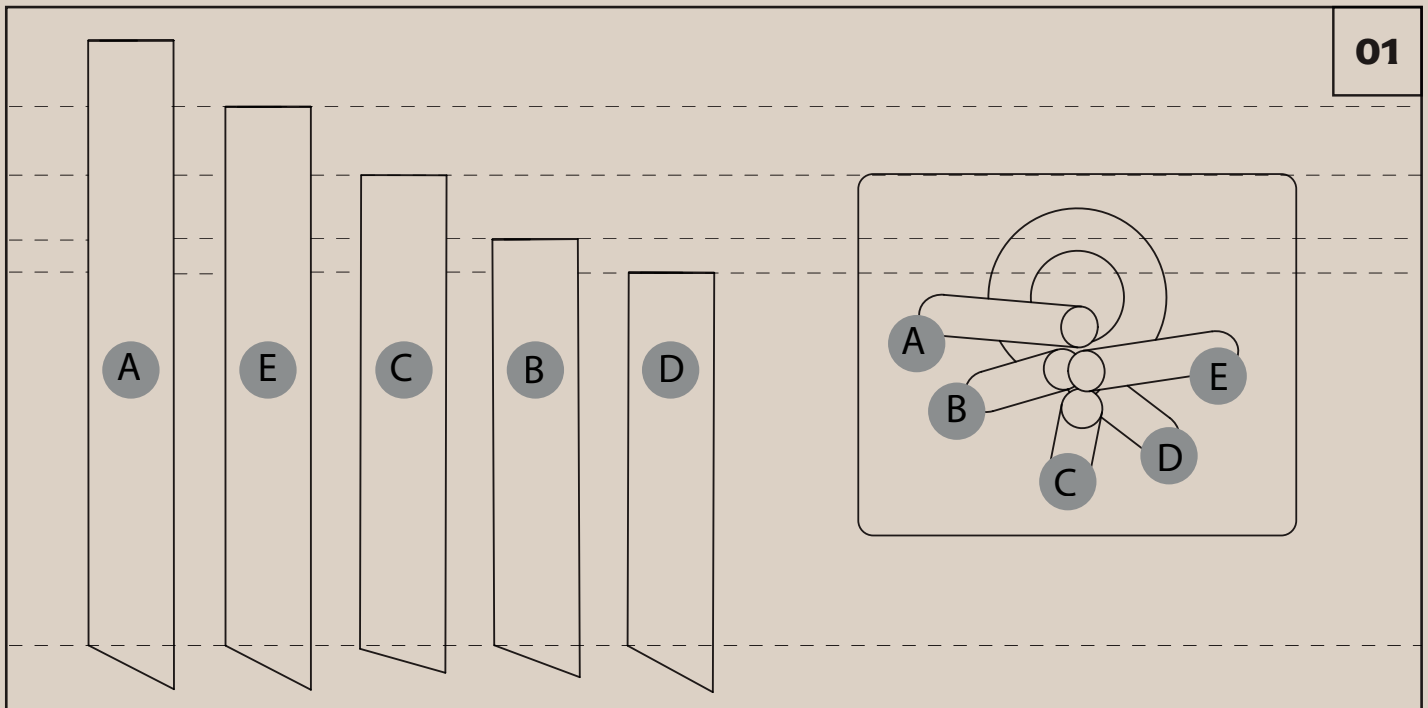 
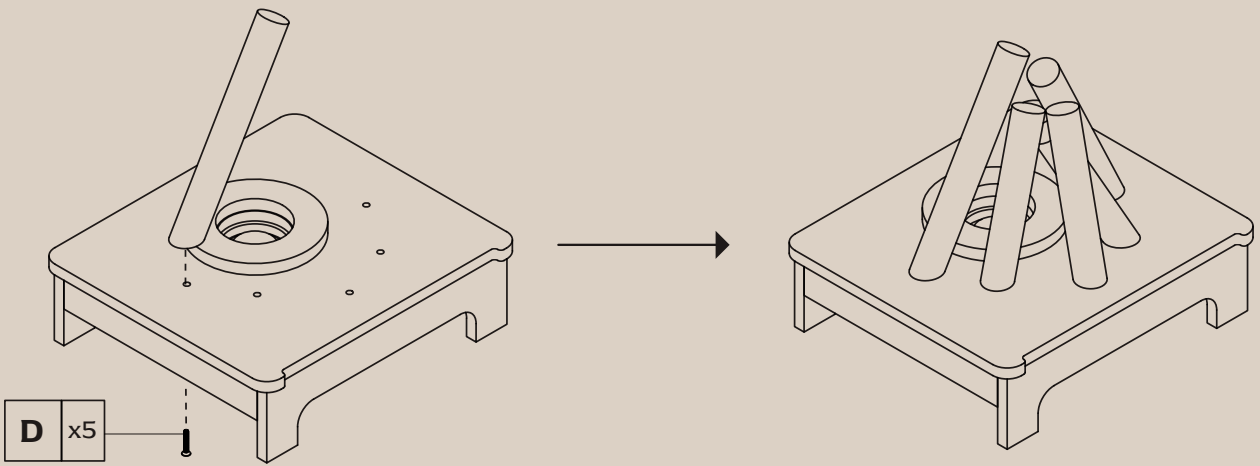 



Foyer Nordik								
			1.0		x1	6.0		x1
			2.1		x1	7.0		x1
			2.2		x1	8.1		x4
A	 M6 x 70 mm	x4	3.2		x2	8.2		x4
B	 M6 x 50 mm	x4				9.1	 A	x1
C	 Vis excédentaires M4 x 30 mm	x4	4.0		x1	9.2	 B	x1
D	 M4 x 25 mm	x5				9.3	 C	x1
E	 M4 x 15 mm	x4				9.4	 D	x1
F	 M6 Alen key	x1	5.0		x1	9.5	 E	x1
G	 M4 Alen key	x1				10		x1




01

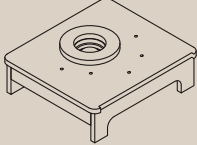

 
02

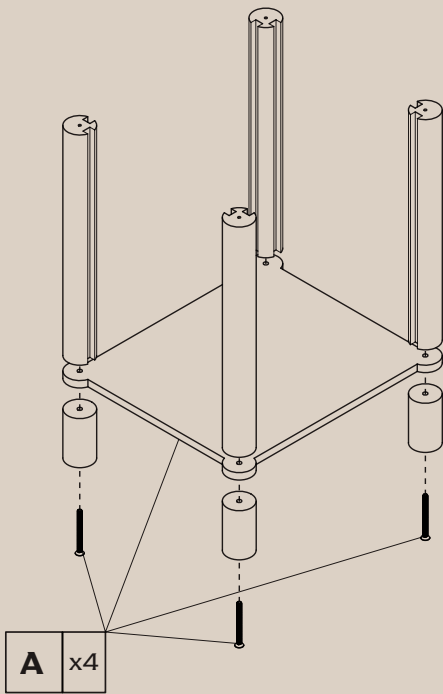


03

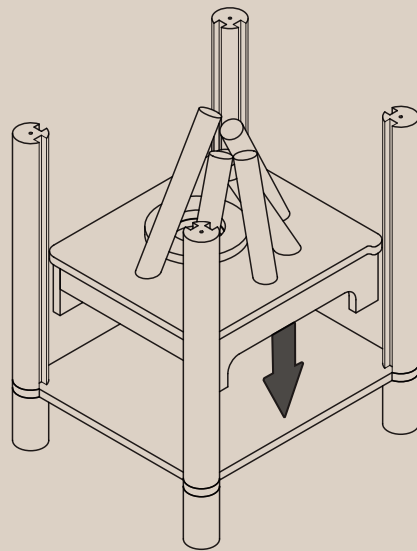 


05

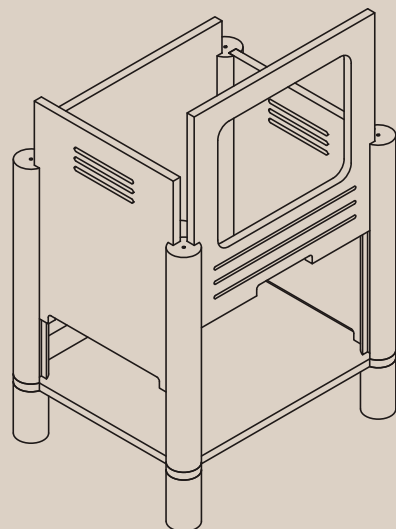 


04

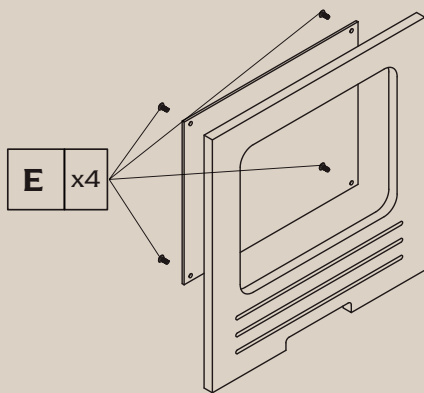 


06

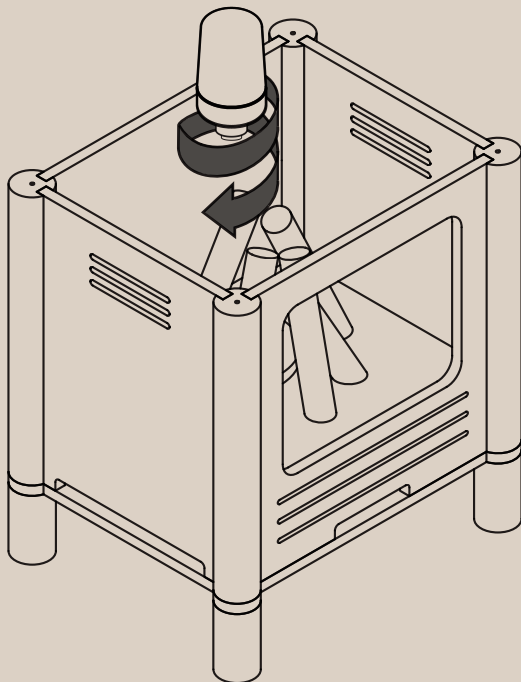 


07

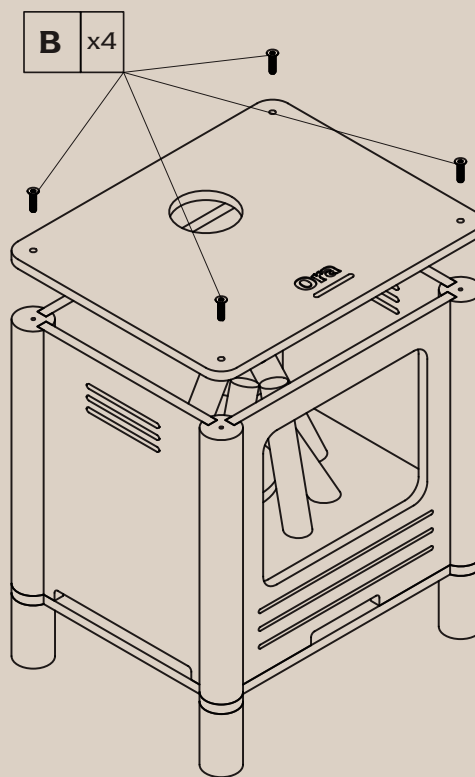 

08

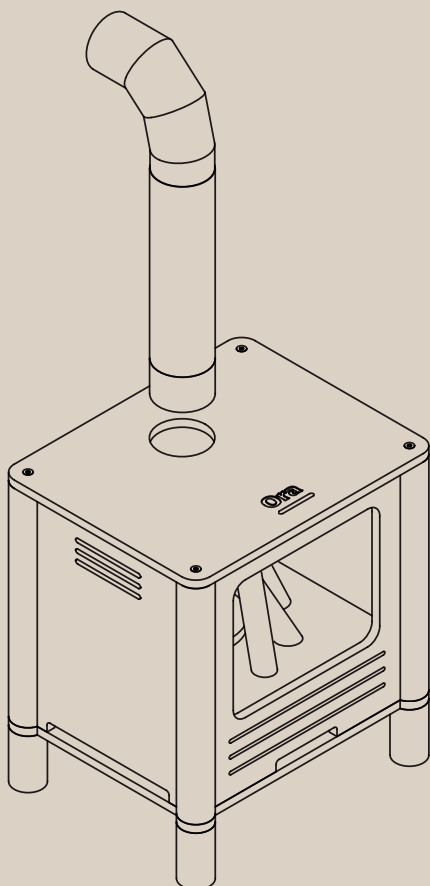 

09

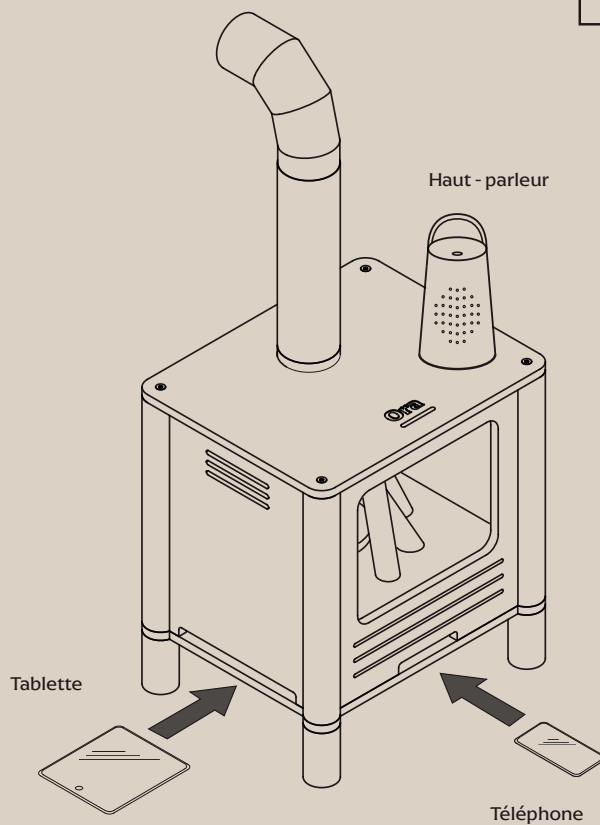 

*Utilisation des foyers avec téléphone, tablette ou haut-parleurs Bluetooth, réservé aux utilisateurs de l'application Ora membres Oramood+.