

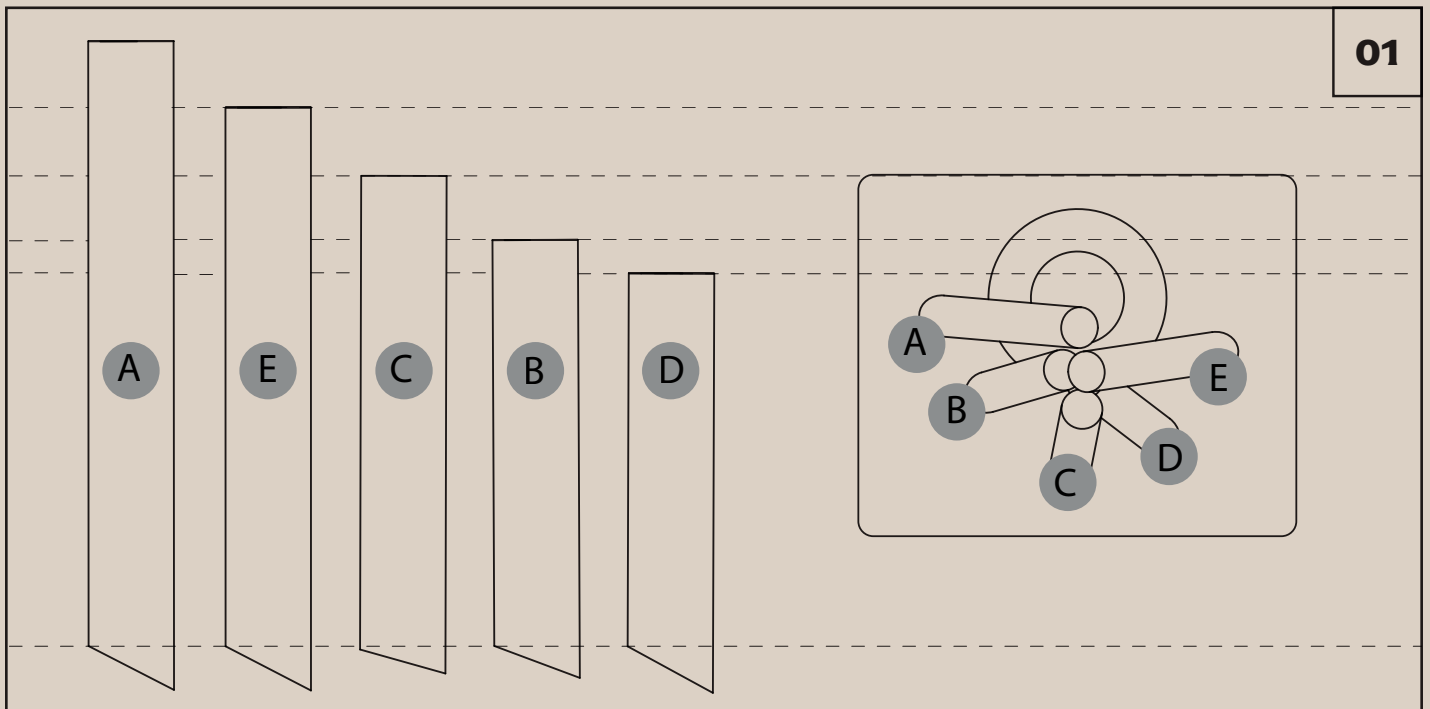



Foyer Origine								
	1.0		x1	6.0		x1		
	2.1		x1	7.0		x1		
	2.2		x1	8.1		x4		
A		x4	3.1		x2	8.2		x4
B		x4				9.1		x1
C		x4	3.2		x2	9.2		x1
D		x5	4.0		x1	9.3		x1
E		x4				9.4		x1
F		x1	5.0		x1	9.5		x1
G		x1				10		x1

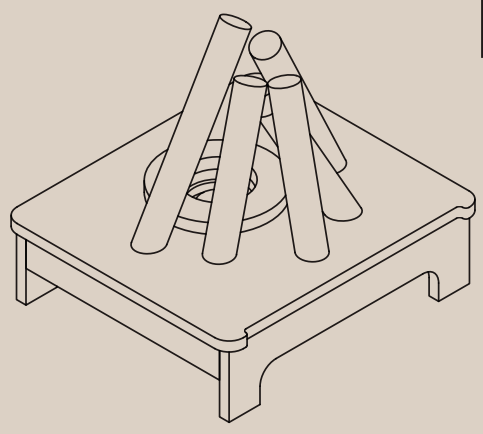


01

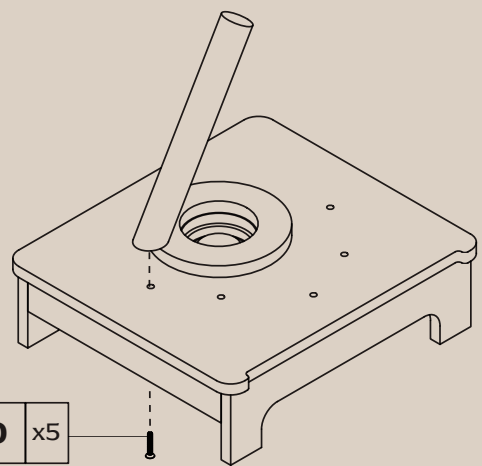


02

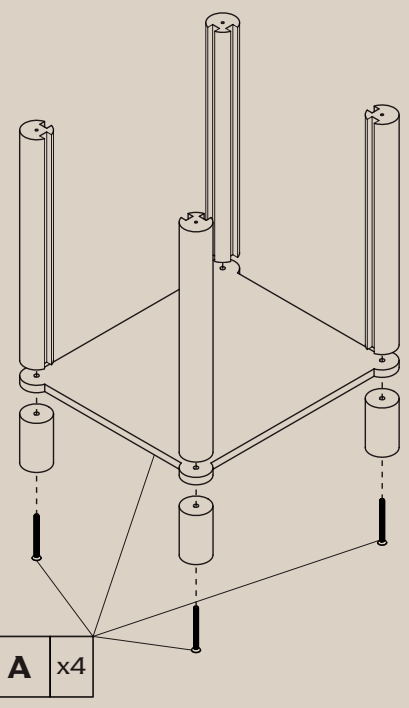


03

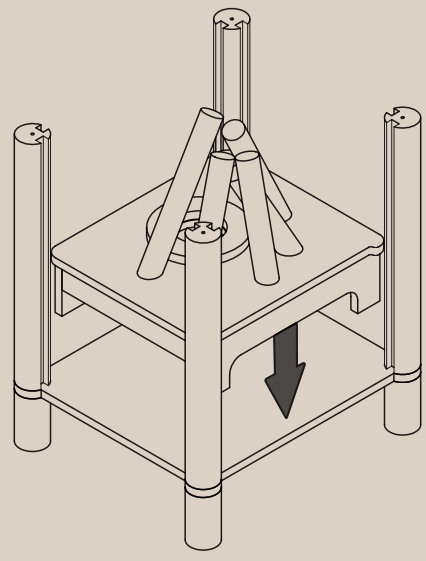


04

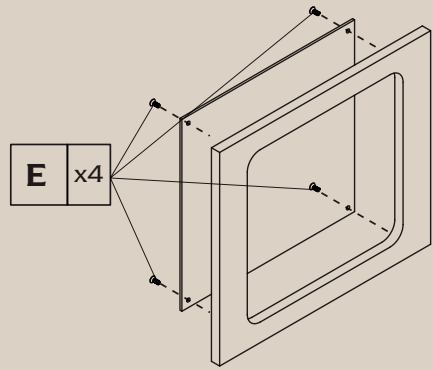


05

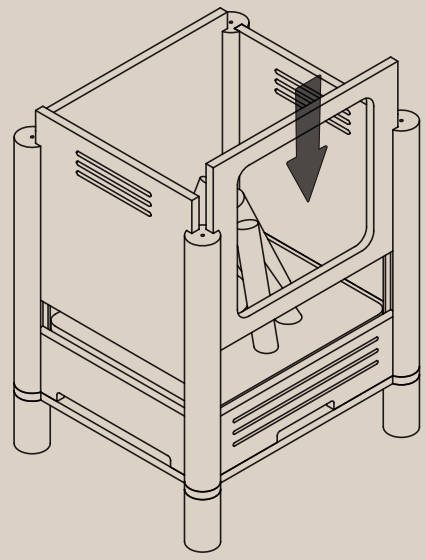

06

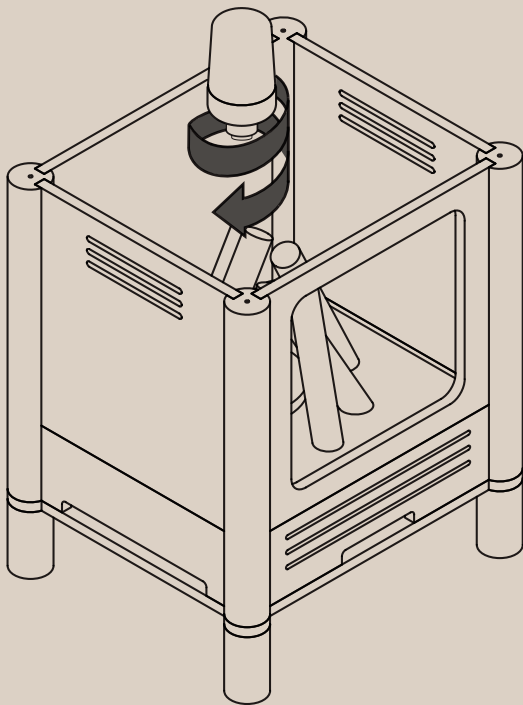

07

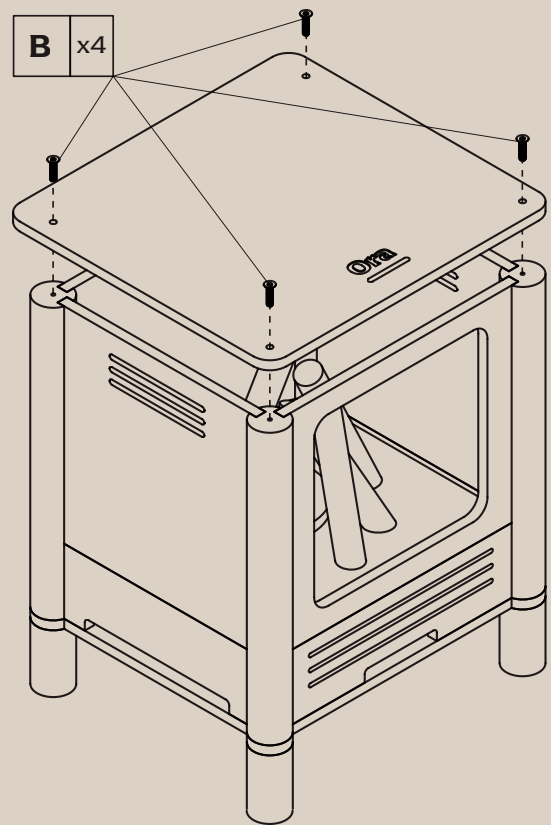

08

*Utilisation des foyers avec téléphone, tablette ou haut-parleurs Bluetooth, réservé aux utilisateurs de l'application Ora membres Oramood+.

