

6W In-Ground Well Light

User Manual

01 / WARNING

PLEASE TURN OFF THE POWER AT THE FUSE BOX OR CIRCUIT BREAKER BEFORE INSTALLING.


02 / PACKAGE CONTENT

- 6W in-ground well lights × 6
- Waterproof wire nuts × 12
- Embedded parts × 6

03 / INSTALLATION


1. Dig a 4-1/4inch wide and 3-1/4inch deep hole. (Fig. 1)

Fig. 1

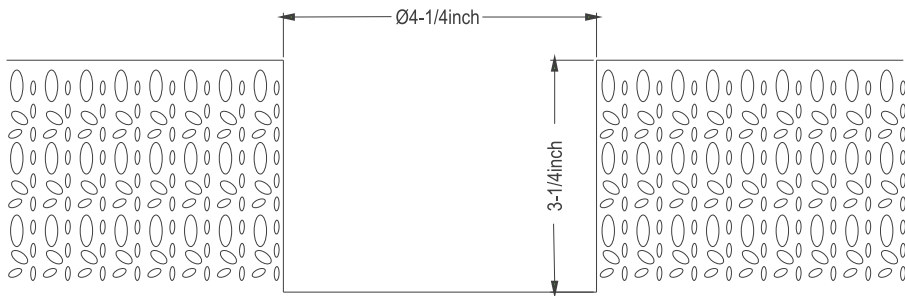

2. Pull the fixture out from the embedded part. Remove the waterproof wire nuts from the embedded part. Then remove enough knockouts to accommodate wires.
3. TURN OFF THE POWER. Pass the power supply through the embedded part. Then, place the embedded part in the hole. Use concrete to fill the gap between the embedded part and the hole.
4. Use waterproof wire nuts to connect the lamp wires with the power supply.
5. Buckle the fixture into the embedded part. Then turn the power back on. (Fig. 2)

Fig. 2

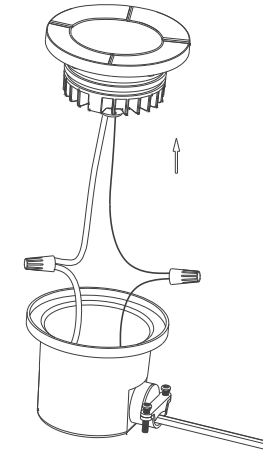

04 / SPECIFICATIONS

6W Anti-Glare In-Ground Well Light	
Power	6W
Voltage	AC/DC 12-24V
Working temperature	-4°F-104°F
Luminous flux	580lm
CRI	>90
Color temperature	3000K Warm White
Material	Die-casted aluminum
Beam angle	63°

05 / WARRANTY

LEONLITE warrants that this product is free from defects in materials and workmanship for a period of 5 years from the day of purchase. If the product has been misused, damaged by accident or in any other way of improper use, this warranty becomes void.

LeonLite