

ZH-3809BH

# Tennis Pitch Machine Manual

## ● Package content

Please make sure all accessories are intact before assemble. Batteries need to be purchased separately. PS. Please use Alkaline battery



① Machine\*1



② Ball track\*2



③ Top track\*1



④ Screwdriver\*1

 
 


⑤ Power cable\*1

## ● Parts discription

Left

Right




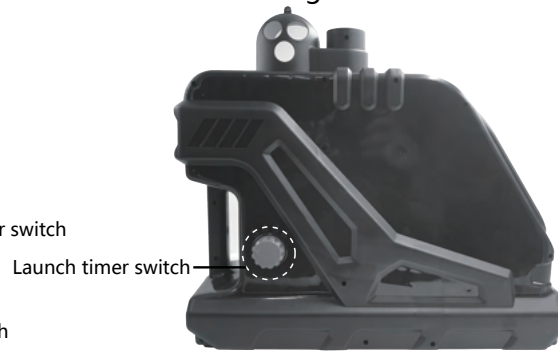
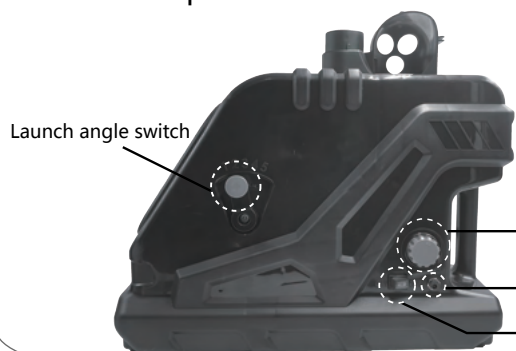


## ● Assemble instruction

**1** Connecting tracks with machine (show as image A), make sure concave and convex connected together and put B part in right position. (show as step 1)

**2** Assemble tracks one and the other (show as image C) and put D part in right position. (show as step 2)

     **3** After putting the top track (show as image E), connect concave and convex and put F part in right position. (show as step 3)

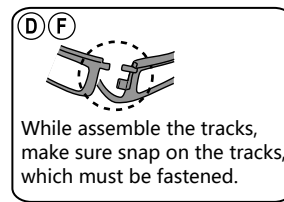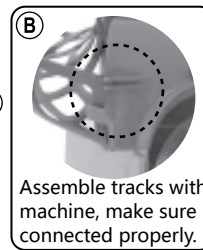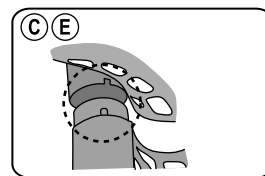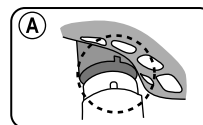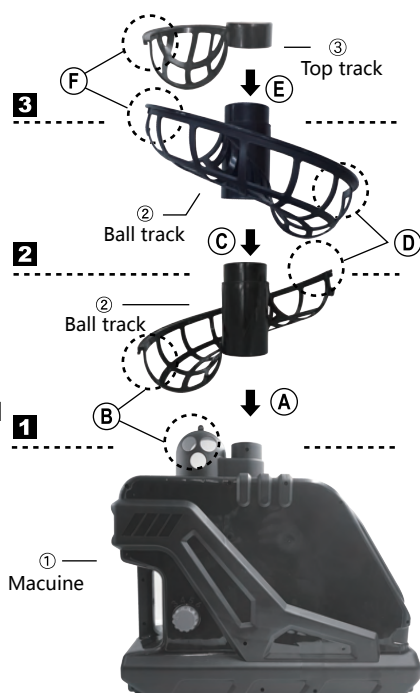


### Tracks disassemble

Please curve the tracks by hand, thus, track will be easy disassemble.



## ● Launch power switch

 
Launch power is adjustable through this switch.

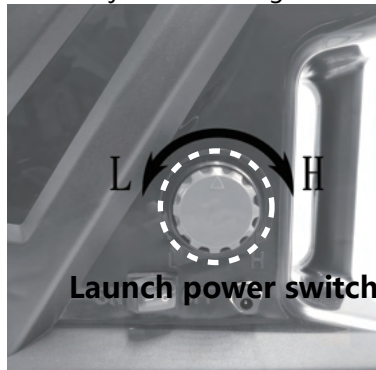

▲ Please notice that batteries' voltage may decrease over time. If that happens, you can switch to higher power level to maintain the same launch speed

## ● Launch timer switch

 Point the arrow on the knob to the number of seconds to adjust the launch frequency.

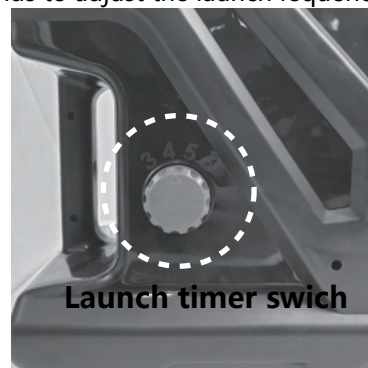

▲ Please notice that when using batteries, the actual launch time will be approximately one second longer than the number selected.

### ●Launch angle switch

Pull the nob, shift to the angle you want (Low to high from 1 to 5), and then release the nob. It should fit in perfectly.



▲ Please pull the knob out fully before making any adjustment.

 
### ■Trouble shooting

If some balls are stuck, please remove all the other balls, and tilt the machine as shown. Then turn on the machine waiting for 3 seconds before leveling it. The stuck balls should be launched.



▲ Please make sure the front is clear when launching the ball.

●Install the batteries The battery box is at the bottom of the machine. Please turn off the machine before installing the batteries.

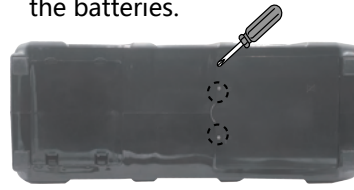

●Need 8pcs of D type dry battery

Unscrew the lid with the attached screwdriver.



Install batteries following the signs in the battery box. Close the lid and put the screws back.



It might have below issues when the batteries run low

- Taking long time to launch the ball
  - Motor making more noise
  - Decrease of launch distance and height
- Please change the batteries then

#### ⚠ Precautions for installing batteries

- Please use alkaline battery or dedicated cable.
- The battery installation must be operated by an adult.
- Please install batteries following "+" and "-" .
- Do not mix new and old batteries.
- When the machine not in used, remove the batteries.
- Keep the batteries dry.

If batteries installed incorrectly, it may cause short circuit or leakage.

### ■Cleaning the interior

The bottom can be open to clean the hair stuck inside. Please turn the machine off before doing so.

Bottom



Open the cover



Use a vacuum cleaner or other tools to clean the interior.

### ■Dedicated power cable



- ⚠ Turn off the machine before connected with the cable.
- ⚠ Remove batteries before connected with the cable.
- ⚠ Cable might over heated if used long hours, once this occurred, please stop using the machine immediately.
- ⚠ Do not pull cable roughly, make sure the cable is connected properly before turning it on.
- ⚠ Unplug the cable when machine not in use, plug connected with power for along time might cause damage or malfunction.

#### ⚠ Precautions

- Do not use this product on a rainy day.
- Do not let the machine and battery box get wet.
- Do not use this product near water.
- The installation of the machine needs to be operated by an adult
- Please use it in a wide field without other people.
- Please be supervised by adult when the children use it.
- Please use designated balls only.
- Do not put your head or hand near the launch port when the machine is operating.
- Do not press heavily or hit the machine with force.
- Please do not use this product for other purposes.
- Do not disassemble this product. It may cause malfunction.
- Keep this product away from high temperature area(car or fire).
- After use, wipe off the moisture and dirt from the surface and store it in a dry place.

MADE IN CHINA