

Dual wheels PU pitching machine

User instruction

Parts list Kindly be sure all parts fine before assembling

① Unit 1

② Connection parts 1

③ Feed chute with safty lock 1

④ unit holder 4


⑤ Ball track 2

⑥ Top track 1






⑦ 75g Balls 3

⑧ Sand bag 1

Assembly Shown

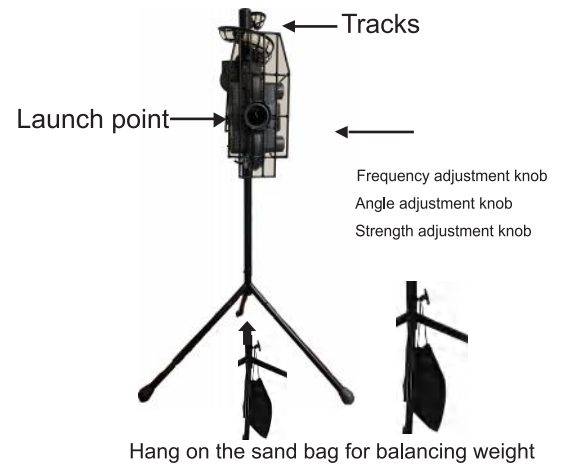

Installation

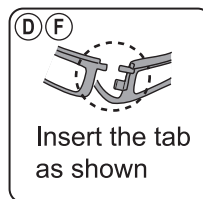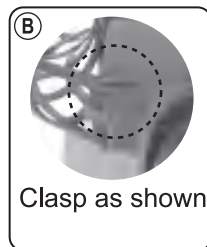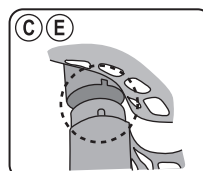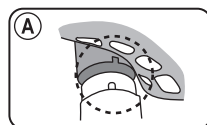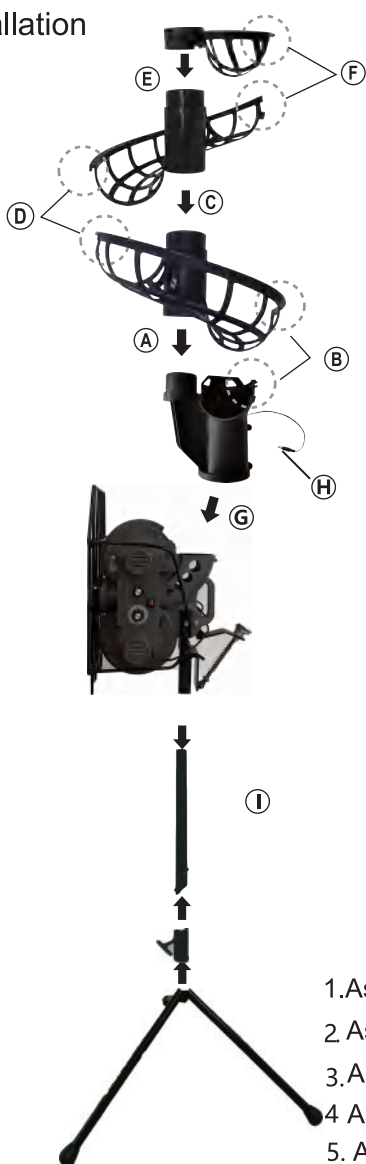

Easy way to assemble

Please squeeze ball carriage once out of shape.

G

Unscrew the safty lock from the Feed chute and align both screw hole.

Now screw the safty lock between two objects.

safty lock

H

Insert the power port from Feed chute to the unit.

1. Assemble the unit and feed chute as G and H.
2. Assemble the feed chute and ball of carriage as A and B.
3. Assemble both of ball of carriages as C and D.
4. Assemble the top of carriage and ball of carriage as E and F.
5. Assemble the holder which has the safty lock with unit as I and insert it to the connection parts.
6. Assemble the rest holders onto the connection parts.

How to adjust frequency


Please adjust the knob for demanding second.

How to adjust strength

Please adjust by number strength
Beware more larger number more powerful.


Frequency adjustment knob

Strength adjustment knob

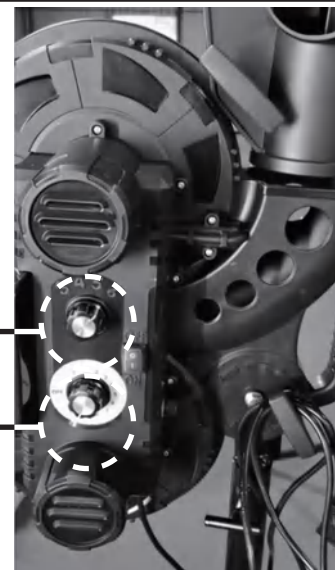

How to adjust angle

The handle located behind the unit. Please loose it to your demanding angle and tight it as first.

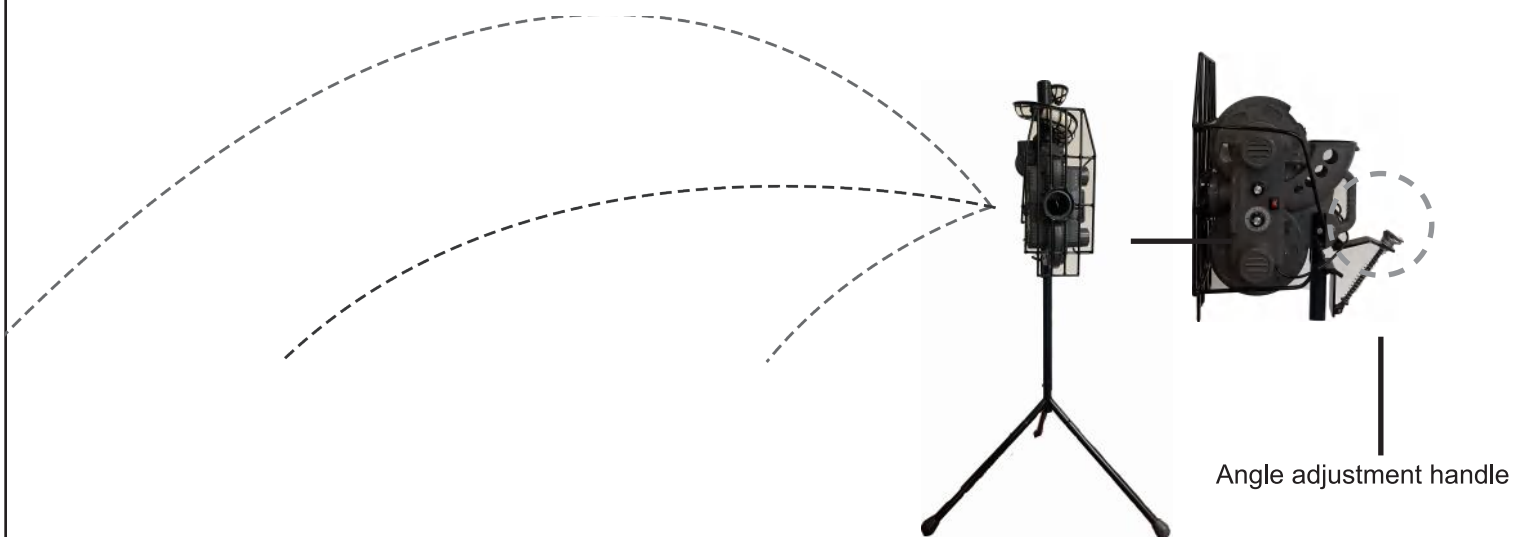

NOTE

- Please don't use product on raining days.
- Please keep it dry.
- Do not use it on wet surface.
- Adult assembly and supervision required.
- All person(s) not batting should stand behind the pitching machine.
- Do not use the product for any other purpose or with any other object.
- If the product jams, turn machine to "OFF" position.
- Keep product away from high temperature or any fire place.
- Please clean product once training session finished.

MADE IN CHINA